


Series **Ergonomic**

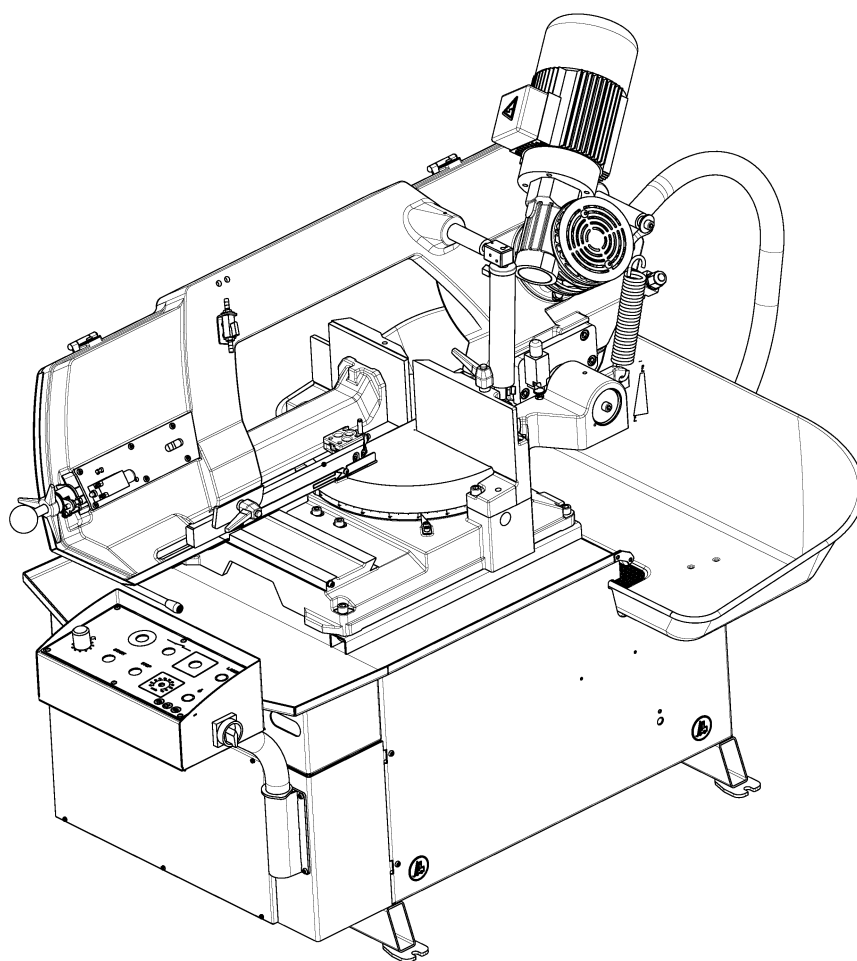

Ergonomic 320.258 DG

Operating instructions

**Before transporting and using the machine,
please read the instructions thoroughly!**

Seriové číslo / Serien Nummer / Serial Number _____

Service and information

Your BOMAR dealer:

Direct BOMAR contact:

BOMAR spol. s r.o.
Těžební 1236/1
62700 Brno
Czech Republic, EU

telefon: +420 – 533 426 100
fax: +420 – 533 426 109
e-mail: info@bomar.cz
www: <http://www.bomar.cz>

We are available:

Mondays to Fridays

7⁰⁰ – 16⁰⁰

Version:

1.17 / Feb. 2020
rev. 1

BOMAR, spol. s r.o. © – Subject to modifications and amendments.

EC/EU Declaration of Conformity

^{1) 2)} We:

BOMAR, spol. s r.o.
Těžební 1236/1
627 00 Brno, Czech Republic
 Id. No: 48908827

declare herewith

that the following designated device based on its conception and construction as well as the design launched by us meets the relevant basic safety requirements of the decrees of the government.

This statement applies exclusively to the machine device in conditions in which it was brought to the market. It does not apply to parts subsequently added by the end user or to modifications performed subsequently by the end user.

In the event of any device modification not approved by us this declaration shall lose its validity

Name: **Band Saw**
Type : **Ergonomic 320.258 DG**
Serial number: 500 – 10 000
Manufacturer **BOMAR, spol. s r.o., Těžební 1236/1, 627 00 Brno**

Product data

Determination: for cross dividing and cutting of rolled and towed bars and profiles made of steel, stainless steel, non-ferrous metals and plastics

Description: Stand, table, cutting unit with the saw band and drive, clamping device, cooling system, el. switch board with control panel.

Pneumatic *NO* ☒ *YES* ☐ Hydraulic *NO* ☒ *YES* ☐ Control system *NO* ☒ *YES* ☐

Technical data: Cutting rate 20-120 m.min⁻¹
 Cutting angle -45° to -60°
 Total dimensions in mm (l×w×h) 2000x1150x1700 mm
 Total power requirement 1,8 kW
 Weight 390 kg

Documentation:

Technical documentation for this machine device was elaborated in compliance with Government regulation no. 176/2008, Annex 7, part A.

The device meets relevant requirements of the given directives: **2006/42/EC**
2014/30/EU

The applied harmonized standards, National standards and technical specifications:

ČSN EN ISO 12100:2011

ČSN EN ISO 16093:2018

ČSN EN ISO 13857:2008

ČSN EN 60204 -1 ed.3:2019

ČSN EN 55011 ed.4+A1:2017

ČSN EN 61000-6-2 ed.3:2006

ČSN EN 61000-6-4 ed.2+A1:2011

The product is safe on condition of the common and determined usage.

The conformity judging was performed according to §12, par. 3, let. a), of the Law no. 22/1997 Coll. as amended.

The declaration of conformity was carried out in the cooperation with the ³⁾ TÜV SÜD Czech s.r.o, Novodvorská 994, 142 21 Prague 4 – Czech Republic, Identification number: 63987121 - Inspection body no. 4002.

The inspection certificate no **07.801.283** was issued

Brno, 21.08.2019

Point of issue, datum

BOMAR, spol. s r.o.
Těžební 1236/1, 627 00 Brno
Czech Republic
IČO: 48908827
DIČ: CZ48908827



Alfred Pichlmann, Managing Director

Name and function of the responsible subject, signature

1) Name, address and identification number of the subject issuing the conformity declaration (producer of importer)

2) Person authorized to complete the technical documentation

3) The authorized or accredited body co-operating on the conformity judging

!

If the equipment is installed without safety equipment offered by BOMAR, spol. s r.o or its agents and used by the customer (or buyer) then EC declaration loses validity.

EC Declaration of conformity is valid only if customer (buyer) installed the BOMAR safety equipment with the machine or with some other with equivalent safety device in accordance with current applicable regulations and standards.

All machine elements and components that were built into the device by BOMAR, spol. s r.o have been declared "identical" to a safety device, as offered by BOMAR, spol. s r.o or its agents.

Content

1. BEZPEČNOSTNÍ POKYNY / SICHERHEITSHINWEISE / SAFETY NOTES.....9

| | |
|---|----|
| 1.1. Machine determination..... | 11 |
| 1.2. Protective clothing and personal safety..... | 11 |
| 1.3. Safety notes for machine operator..... | 12 |
| 1.4. Safety notes for the servicing and repairs | 13 |
| 1.4.1. Safety notes for the servicing and repairs on hydraulic unit..... | 13 |
| 1.5. Safety notes for the cooling..... | 13 |
| 1.5.1. Instructions for first aid..... | 13 |
| 1.6. Safety machine accessories..... | 14 |
| 1.6.1. Emergency Stop Switch..... | 14 |
| 1.6.2. Arm cover..... | 15 |
| 1.6.3. Saw band covers..... | 16 |
| 1.6.4. Saw band stretching and rupture inspection..... | 17 |
| 1.7. Umístění štítku stroje / Maschinenschild position / Position of machine label..... | 18 |
| 1.8. Umístění bezpečnostních značek / Verteilung der Sicherheitszeichen / Position of safety symbols..... | 19 |

2. DOKUMENTACE STROJE / DOKUMENTATION DER MASCHINEN / MACHINE DOCUMENTATION.....21

| | |
|--|----|
| 2.1. Technická data / Technische Daten / Technical data..... | 23 |
| 2.2. Rozměrové schéma / Aufstellzeichnung / Installation diagram..... | 24 |
| 2.3. Popis / Beschreibung / Description | 25 |
| 2.4. Transportation and stocking..... | 26 |
| 2.4.1. Conditions for transportation and stocking..... | 26 |
| 2.4.2. Transport and stocking preparations..... | 26 |
| 2.4.3. Transport and stocking..... | 26 |
| 2.4.4. Transportní schéma / Transport schema / Transport schneeme..... | 27 |
| 2.5. Activation..... | 28 |
| 2.5.1. Machine working conditions..... | 28 |
| 2.6. Band saw unpacking and assembling..... | 28 |
| 2.6.1. Installation of the length stop for the material length setting | 28 |
| 2.6.2. Attachment of the cooling liquid tub..... | 30 |
| 2.6.3. Assembly of the hand wheel..... | 30 |
| 2.6.4. Machine installing and leveling..... | 31 |
| 2.6.5. Kotevní plan / Verankerungsplan / Grounding plan | 32 |
| 2.6.6. Electrical connection..... | 33 |
| 2.6.7. Check the direction of the saw band..... | 33 |
| 2.6.8. Inspection of the connection to the electrical network..... | 34 |
| 2.6.9. Filling of the cooling system..... | 34 |
| 2.7. Machine functions check..... | 34 |
| 2.8. Machine disposal after lifetime..... | 34 |
| 2.9. Saw band..... | 35 |
| 2.9.1. Saw band size..... | 35 |
| 2.9.2. Selection of the saw band tooth system | 35 |
| 2.9.3. Saw band running-in | 35 |
| 2.9.4. Tables for teeth selection | 36 |

3. OVLÁDÁNÍ STROJE / BEDIENUNG DER MASCHINE / MACHINE CONTROL.....37

| | |
|---|----|
| 3.1. Starting the band saw and switching on the safety circuits | 39 |
| 3.2. Control elements..... | 40 |
| 3.3. Machine control..... | 42 |
| 3.3.1. Cutting | 42 |
| 3.3.2. Setting of the material length..... | 44 |
| 3.3.3. Setting of the cutting angle..... | 45 |
| 3.3.4. Setting of the optimal span of the guiding cubes | 48 |
| 3.3.5. Cutting speed adjustment..... | 48 |
| 3.3.6. Speed adjustment of the arm lowering..... | 48 |
| 3.3.7. Setting the type of cooling..... | 49 |
| 3.4. Material insertion..... | 49 |
| 3.4.1. Selecting means of manipulation..... | 49 |
| 3.4.2. Insertion..... | 49 |
| 3.4.3. Bundle material cutting..... | 49 |

4. ÚDRŽBA STROJE / WARTUNG / MACHINE SERVICE51

| | |
|--------------------------------|----|
| 4.1. Saw band dismantling..... | 53 |
|--------------------------------|----|

| | |
|---|------------|
| 4.2. Saw band installation | 55 |
| 4.3. Saw band stretching and inspection..... | 57 |
| 4.3.1. Saw band stretching..... | 58 |
| 4.3.2. Saw band inspection..... | 58 |
| 4.4. Adjustment..... | 59 |
| 4.4.1. Saw band run adjustment..... | 59 |
| 4.4.2. Hard metal guides adjustment on the machine..... | 59 |
| 4.4.3. Guide cube adjustment..... | 60 |
| 4.4.4. Brush adjustment..... | 60 |
| 4.4.5. Adjusting the limit switch of the saw band stretching..... | 61 |
| 4.4.6. Saw frame lower position stop adjustment..... | 62 |
| 4.4.7. Adjustment of the limit switch of saw frame lower stop | 62 |
| 4.5. Cooling agents and chip disposal..... | 63 |
| 4.5.1. Coolant inspection..... | 63 |
| 4.5.2. Cooling liquid preparation | 64 |
| 4.5.3. Chips disposal..... | 64 |
| 4.6. Gearbox oils and greases..... | 65 |
| 4.6.1. Gearbox oils..... | 65 |
| 4.6.2. Lubrication greases..... | 66 |
| 4.6.3. Lubrication..... | 66 |
| 4.6.4. Hydraulic oils..... | 67 |
| 4.7. Machine cleaning | 67 |
| 4.8. Worn pieces replacement..... | 68 |
| 4.8.1. Hard metal guides replacement | 68 |
| 4.8.2. Saw band guiding rollers replacement | 69 |
| 4.8.3. Worn brush replacement..... | 70 |
| 4.8.4. Stretching wheel replacement | 71 |
| 4.8.5. Driving wheel replacement..... | 73 |
| 4.8.6. Cooling pump replacement..... | 74 |
| 5. ZÁVADY / STÖRUNGEN / TROUBLESHOOTING..... | 77 |
| 5.1. Mechanical problems..... | 79 |
| 5.2. Electrical problems..... | 81 |
| 5.2.1. Hydraulic problems..... | 82 |
| 6. SCHÉMATA / SCHEMAS / SCHEMATICS | 85 |
| 6.1. Elektrická schémata / Elektroschemas / Wiring diagrams 3x400 V + PE, 50Hz..... | 87 |
| 6.2. Elektrické schéma / Elektroschema / Wiring diagrams – 3x230 V + PE, 50H | 99 |
| 6.3. Elektrické schéma / Elektroschema / Wiring diagrams – – 3x230 V + PE, 50/60 Hz –frekv. měnič / Frequenzumrichter / frequency convertor | 112 |
| 6.4. Hydraulické schéma / Hydraulisches Schéma / Hydraulic diagram..... | 126 |
| 7. VÝKRESY SESTAV PRO OBJEDNÁNÍ NÁHRADNÍCH DÍLŮ / ZEICHNUNGEN FÜR BESTELLUNG DER ERSATZTEILE / DRAWING ASSEMBLIES FOR SPARE PARTS ORDER..... | 129 |
| 7.1. Ergonomic 320.258 DG..... | 130 |
| 7.2. Kusovník / Piece list / Stückliste - Ergonomic 320.258 DG..... | 131 |
| 7.3. Ergonomic 320.258 DG..... | 132 |
| 7.4. Kusovník / Piece list / Stückliste - Ergonomic 320.258 DG..... | 133 |
| 7.5. Chlazení / Cooling / Kühlung..... | 134 |
| 7.6. Kusovník / Piece list / Stückliste - Chlazení / Cooling / Kühlung..... | 135 |
| 7.7. Podstavec / Base / Untersatz | 136 |
| 7.8. Kusovník / Piece list / Stückliste - Podstavec / Base / Untersatz..... | 137 |
| 7.9. Vana/ Tank/ Wanne..... | 138 |
| 7.10. Kusovník / Piece list / Stückliste - Vana/ Tank/ Wanne..... | 139 |
| 7.11. Konzola otočná / Turnable consol / Drehkonsole..... | 140 |
| 7.12. Kusovník / Piece list / Stückliste - Konzola otočná / Turnable consol / Drehkonsole.. | 141 |
| 7.13. Kartáč / Brush / Bürste..... | 142 |
| 7.14. Kusovník / Piece list / Stückliste - Kartáč / Brush / Bürste..... | 143 |
| 7.15. Rozvaděč elektro / Electro distributor / Schaltschrank..... | 145 |
| 7.16. Ovládací panel / Control panel / Bedienpult..... | 146 |
| 7.17. Kusovník / Piece list / Stückliste Ovládací panel / Control panel / Bedienpult..... | 147 |
| 7.18. Rameno / Saw arm / Sägerahmen..... | 148 |
| 7.19. Kusovník / Piece list / Stückliste - Rameno / Saw arm / Sägerahmen | 149 |
| 7.20. Pohon / Drive / Antrieb..... | 150 |
| 7.21. Kusovník / Piece list / Stückliste Pohon / Drive / Antrieb..... | 151 |
| 7.22. Vedení pásu / Belt guide / Sägebandführung..... | 152 |
| 7.23. Kusovník / Piece list / Stückliste - Vedení pásu / Belt guide / Sägebandführung..... | 153 |
| 7.24. Kostka vodící / Lead cube / Führungsklotz..... | 154 |
| 7.25. Kusovník / Piece list / Stückliste - Kostka vodící / Lead cube / Führungsklotz..... | 155 |
| 7.26. Kostka vodící / Lead cube / Führungsklotz..... | 156 |
| 7.27. Kusovník / Piece list / Stückliste - Kostka vodící / Lead cube / Führungsklotz..... | 157 |
| 7.28. Napínání / Tensioning / Spannung..... | 158 |
| 7.29. Kusovník / Piece list / Stückliste - Napínání / Tensioning / Spannung..... | 159 |

| | | |
|-------|---|-----|
| 7.30. | Válec zvedací / Lifting cylinder / Hebezyylinder..... | 160 |
| 7.31. | Kusovník / Piece list / Stückliste - Válec zvedací / Lifting cylinder / Hebezyylinder | 161 |
| 7.32. | Stůl / Table / Tisch..... | 162 |
| 7.33. | Kusovník / Piece list / Stückliste - Stůl / Table / Tisch..... | 163 |
| 7.34. | Svěrák / Vice / Schraubstock..... | 164 |
| 7.35. | Kusovník / Piece list / Stückliste - Svěrák / Vice / Schraubstock | 165 |
| 7.36. | Doraz / Stop piece / Anschlag..... | 166 |
| 7.37. | Kusovník / Piece list / Stückliste - Doraz / Stop piece / Anschlag..... | 167 |

8. VÝKRESY SESTAV PRO OBJEDNÁNÍ NÁHRADNÍCH DÍLŮ – VOLITELNÉ VYBAVENÍ / ZEICHNUNGEN FÜR BESTELLUNG DER ERSATZTEILE - OPTIONALE ZUBEHÖR / DRAWING ASSEMBLIES FOR SPARE PARTS ORDER – OPTIONAL ACCESSORIES.....169

| | | |
|------|---|-----|
| 8.1. | Odměřování / Measuring / Gehungsmessung..... | 170 |
| 8.2. | Laser-Liner | 171 |
| 8.3. | Upínání horní / Top clam / Spannvorrichtung oben..... | 172 |

1. **Bezpečnostní pokyny / Sicherheitshinweise / Safety notes**

The operating instructions must be read by any person, who gets in touch with the machine during transportation, installation, using, servicing, reparation, stocking or removal!

The operating instructions include relevant information. The operator must familiarize himself with the installation and operation, safety notes and machine servicing, to reach maximum reliability and lifespan. The operating instructions serve to avoid risks, which are linked with work on the machine. Before transporting and using the machine, please read the instructions thoroughly!

Attention!

The operating instructions must be available at the machine position! Keep the operating instructions in a good condition!

1.1. Machine determination

The band saw **Ergonomic 320.258 DG** is determined for cutting and shortening of rolled bars and drawn bars as well as profiles from steels, stainless steels, non-ferrous metals and plastics **with cutting angles -45° to 60°**.

Combustible materials are excluded from cutting! Any other usage and operation outside this range are unauthorized and the manufacturer/supplier does not accept any responsibility for any damages resulting from such misuse. **The operator has full responsibility!**

The machine is equipped with safety and protective measures for both the operator and the machine to be protected. Nevertheless, these measures cannot prevent all injuries. All personnel must read this chapter and understand it, before they start to work on the machine. **Always follow the instructions about work safety!** The personnel must take into account other aspects of the risk, which include the conditions of the working place and the material.

1.2. Protective clothing and personal safety

Wear fitting clothes! Loosely fitting clothes may be caught in the moving machine parts and cause serious injuries.

Attention!

Gloves can be worn only when manipulating with the material or replacing parts! The machine and its accessories must be inactive!

If the machine is running, you must not wear gloves! There is a higher risk of getting caught in the moving machinery!

Wear protective gloves! Material cuts and saw band have sharp edges and may cause injuries.

Wear protective shoes with non-skid soles! Unsuitable shoes may cause balance loss and following injury. Falling pieces may cause serious injuries too.

Wear protective goggles! Chips and cooling liquid may damage your eyes.

Always wear ear protection! Most of the machines emit up to 80 dB and may damage your hearing.

Do not wear jewellery and always tie back long hair! Moving machine parts can catch jewellery or loose hair and may cause serious injuries.

Operate the machine only when you are fit enough to work. Illnesses or injuries diminish concentration. **Avoid machine work, which may compromise the safety of you and your colleagues!**

Attention!

Mind the safety signs on the machine. Do not remove or damage them!

1.3. Safety notes for machine operator

Attention!

*Machine can be operated by person older than 18 years!
Machine can be operated only by a person physically and mentally fit for this activity*

Follow the instructions and orders about work safety!

Read the operating instructions, before you start to work on the machine! Keep the operating instructions in good condition!

Machine can be operated only by one person. Machine operator is responsible for other people present near the machine.

Close covers before starting the machine and check, if the covers are not damaged. Damaged covers must be repaired or changed immediately. Do not start the machine, if the cover is removed! Check, if the electric cables are not damaged.

- Do not hold the material for clamping in the vice and when cutting!
- Do not operate the buttons and switches on the control panel, when you have gloves!

Attention!

Do not connect the machine to electricity if the covers are removed. Do not touch the electrical equipment or wiring.

- For machine starting take care, that there is nobody in the working area of the machine (the working area of the vice, the saw band, the saw arm etc.).
- Under no circumstances touch the rotating elements.
- Work on the machine only when the machine is in good condition!
- Check at least once in a shift, if the machine is not damaged. If the machine is damaged, you must bring the machine to a halt and inform your superior!
- Keep your working area clean! Ensure sufficient lighting in the working area.
- Take off the spilt water or the oil from the floor and dry it. Do not touch the cooling liquid with bare hands! Do not set the nozzle of the cooling liquid, when the machine is started running.
- Do not remove the chips from the working area of the machine, when the machine is running!
- Do not use compressed air for the machine cleaning or for the chip removal!
- Use the protective instruments for chip removal!

1.4. Safety notes for the servicing and repairs

Switch off the main switch and lock it, before you start service work! Otherwise, there is a possibility of starting the machine accidentally.

Only qualified person can do the servicing and repairs. For parts replacement, use only those, which are identical with the originals. Otherwise, there is possibility of health hazard. Use only recommended types of hydraulic oils, oils and lubricants!

Attention!

Only a qualified professional can carry out the servicing and repairs of the electrical equipment! Take special care during the work with electrical equipment. High voltage shock can have fatal consequences! Always follow the work safety instructions! Otherwise, there is possibility of heavy injury!

Do not remove lock the limit switches or safety equipment! Any use of the saw, accessories or machine parts other than that intended by the BOMAR, spol. s r.o. company is not permitted. The guarantee on this product will be lost afterward and BOMAR, spol. s r.o. takes no responsibility for damage caused.

1.4.1. Safety notes for the servicing and repairs on hydraulic unit

Compliance with the principles of cleanness is a basic requirement for trouble-free operation of hydraulic equipment. Hydraulic components are products made with high precision, and any contamination leads to a reduction of lifetime and even malfunction. The consequences are very difficult and expensive to remove.

Always use clean tools. Never put parts and fasteners which are a part of the hydraulic circuit on a dirty surface. The best cleaning agent is crepe paper. The fibers of the cleaning cloths can also cause malfunction.

Remove the protective caps from the threaded chamber just before the assembly of the unit.

Flush hoses and pipes before mounting with gasoline or other cleaning agent and blow compressed air through them.

All fittings must be properly tightened. However, do not use brute strength.

1.5. Safety notes for the cooling

Attention!

- *When handling the coolant always keep to the work safety directives and instructions of the manufacturer.*
- *When handling cooling agents always wear safety fluid-proof gloves!*
- *Wear protective goggles!*
- *Cooling liquid can get in contact with your eyes and may cause permanent severe injuries*

1.5.1. Instructions for first aid

1. Pull off and safely remove polluted, soaked clothing.
2. If inhaled, go out on fresh air or look for first aid treatment.
3. Wash with water and eventually treat with crème any points of contact with the skin.
4. Flush your eyes with water and seek out a doctor.
5. If swallowed, drink a lot of water and induce vomiting. Look for medical help

1.6. Safety machine accessories

The machine is equipped with safety accessories. They protect the operator from injuries and the machine from damage. The safety accessories are blocking accessories, emergency switches and covers. Check the function of the safety accessories once a week. If the safety accessories are not fulfilling their function, stop your work and repair or change the safety accessories.

Enhanced risk!

Do not come into or intervene in the cutting area. Otherwise, there is a possibility of heavy injury.

1.6.1. Emergency Stop Switch

Emergency Stop Switch is used for emergency switching – off the machine in case defect or health hazard. By pressing **Emergency Stop Switch** will immediately stop all dangerous machine movements.

If any damages or fault appears, immediately press Emergency Stop Switch!

It is possible to release the pressed button by twisting of the upper part of the button.

The **Emergency Stop Switch** is placed at the control panel of the machine.



Release of the pressed button is possible by turning the upper part of the button.

1.6.2. Arm cover



If the cover is opened during operation, the limit switch is opened and the band saw is stopped. The machine cannot be run with the arm open even in the service mode.



Make sure the arm cover is closed before starting the machine!


1.6.3. Saw band covers

These three covers cover the band of the saw


- from the moveable guiding cube to the arm



- from the jaw of the vice to the arm (both sides)

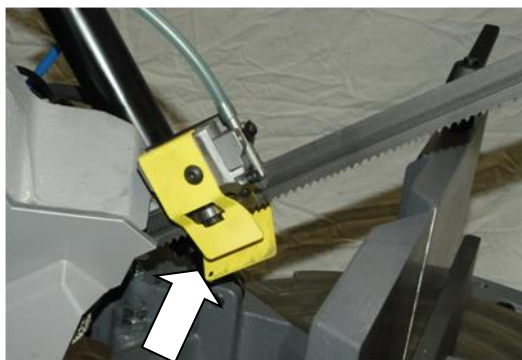

- Never turn the band drive on, if these covers are not mounted

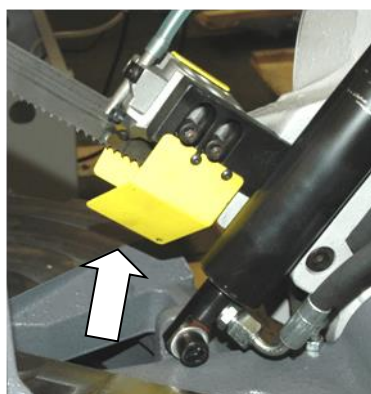


1.6.4. Saw band stretching and rupture inspection

This device checks the saw band stretching and causes an immediate machine shut – down in case the band ruptures.




The device contains a limit switch. Its setting is described in the chapter Machine maintenance. Check the stretching carefully and periodically and adjust it eventually.

1.7. Umístění štítku stroje / Maschineschild position /
Position of machine label

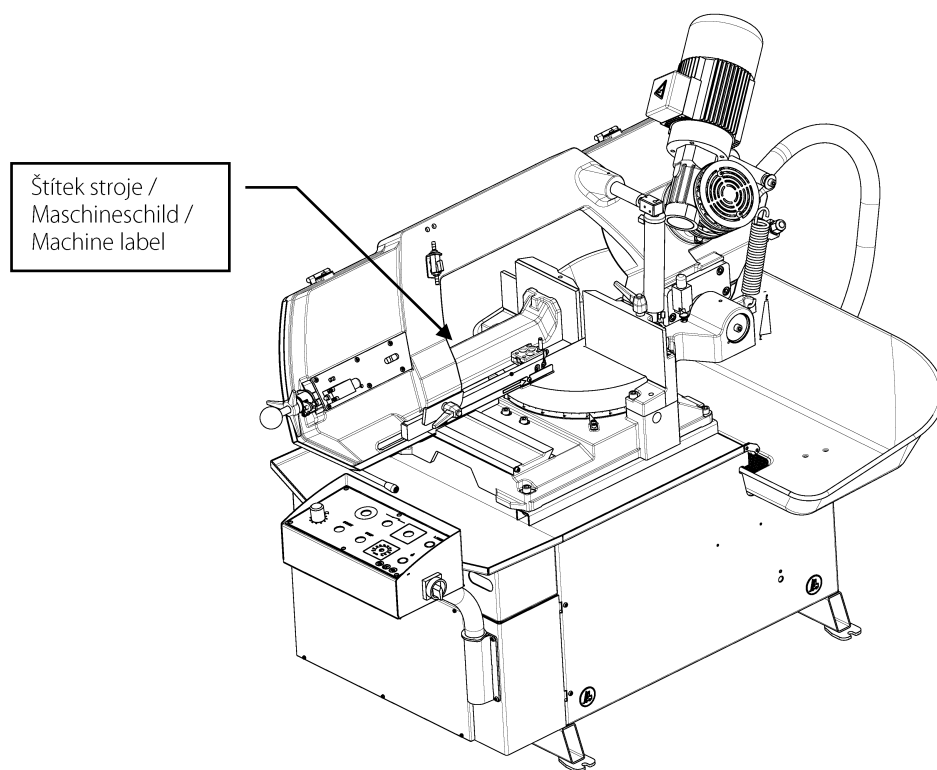


1.8. Umístění bezpečnostních značek / Verteilung der Sicherheitszeichen / Position of safety symbols

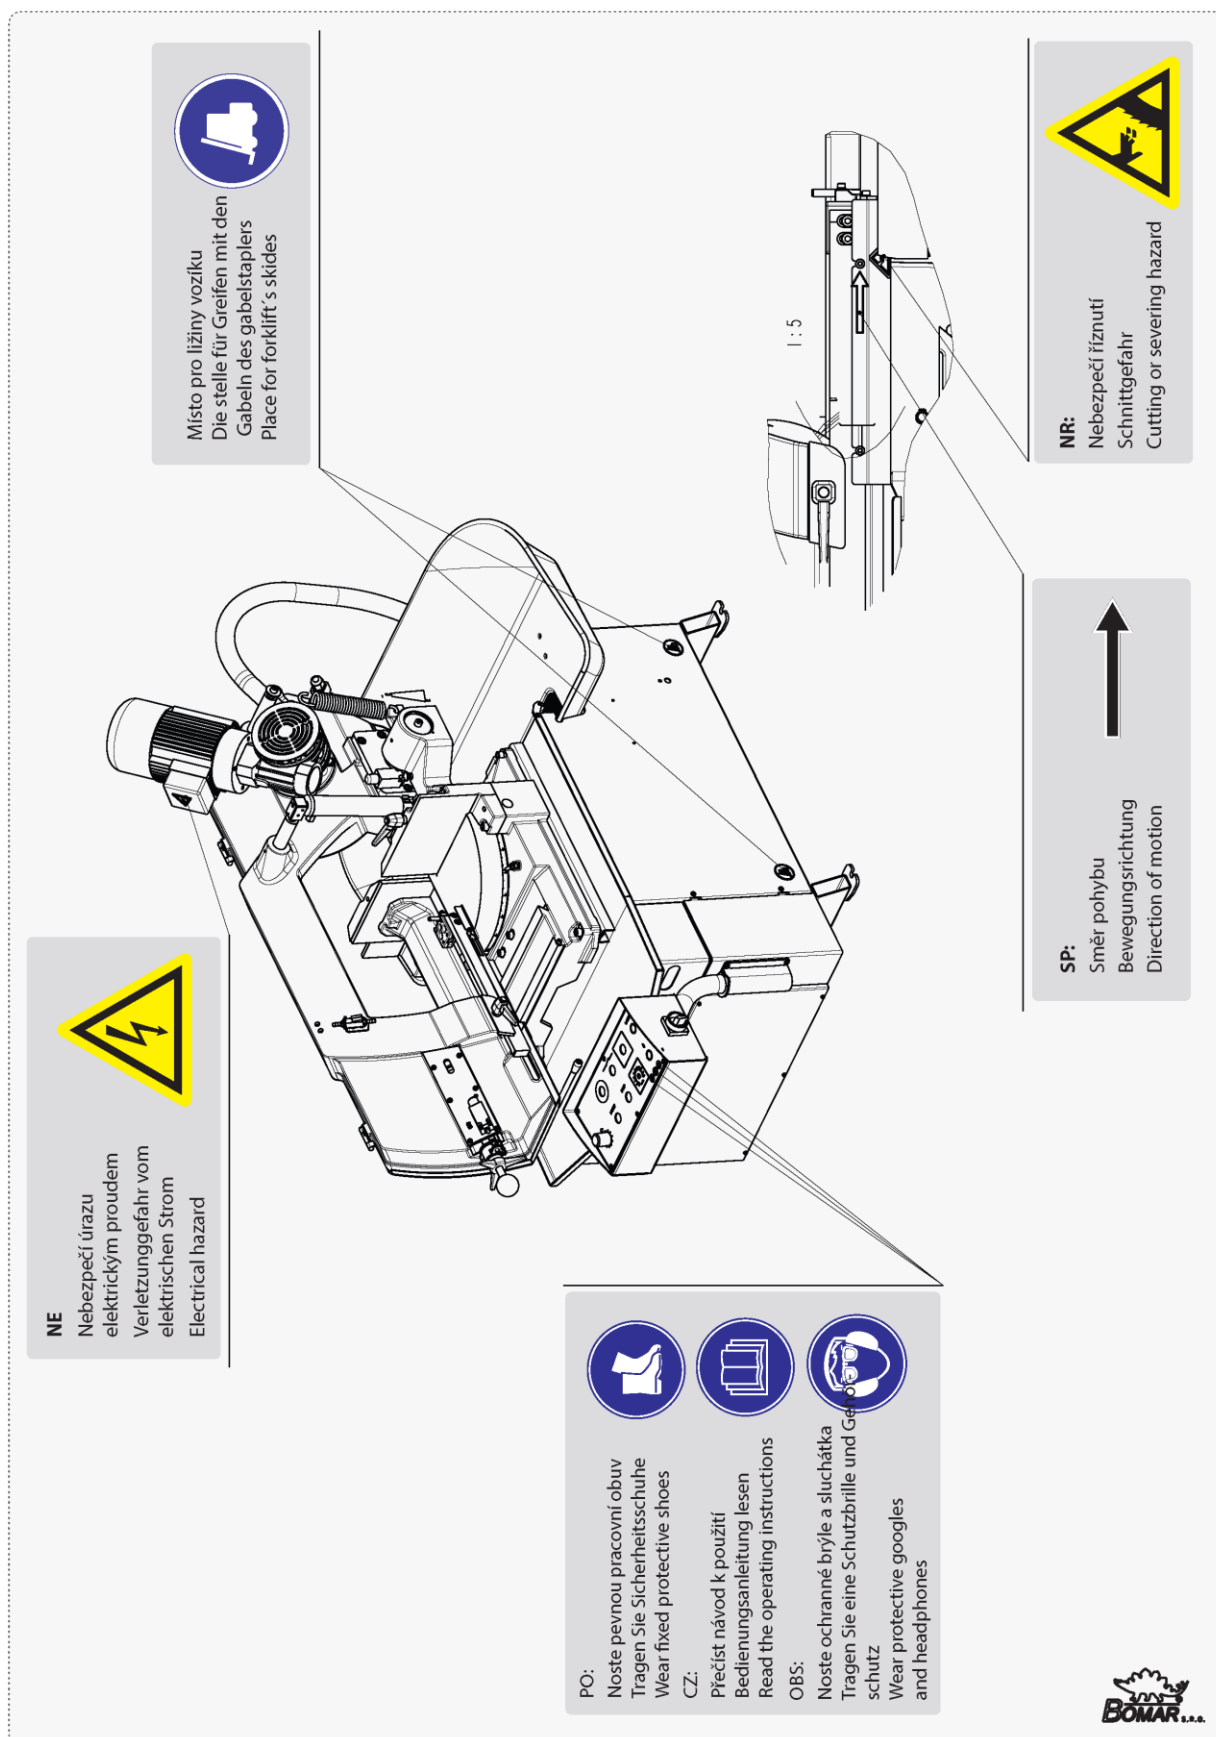

2. **Dokumentace stroje / Dokumentation der Maschinen / Machine documentation**


2.1. Technická data / Technische Daten / Technical data
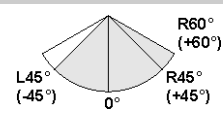
| | |
|---|---|
| Hmotnost stroje / Maschinengewicht / Machine weight: | |
| • Hmotnost / Gewicht / Weight | 390 kg |
| Rozměry stroje / Maschinengröße / Machine size : | |
| • Délka / Länge / Lenght | 2000 mm |
| • Šířka / Breite / Width | 1150 mm |
| • Výška / Höhe / Height | 1700 mm |
| Elektrické vybavení / Elektrische Ausrüstung / Electrical equipment: | |
| • Napájení / Versorgungsspannun / Supply voltage | ~ 3x400V, 50H z |
| • Příkon / Gesamptschlusswert / Total Input | 1,8 kW |
| • Max.jištění / Max. Vorschaltsicherung / Max. Fuse | 16 A |
| • Krytí / Schutzart / Protection | IP 54 |
| Akustický tlak / Schalldruckpegel / Acoustic pressure: | |
| • Ergonomic 320.258 DG | L _{Aeqv} = 59 / 65 dB* |
| Pohon – pilový pás / Atrieb - Sägeband / Drive – saw band: | |
| • Typ / Typ / Type | MI70 – PAM90 20/1 - FP - 120 - B14 99.001.260 |
| • Výkon / Leistung / Output | 1,5 kW |
| • Jmenovité otáčky / Motornenndrehzahl / Nominal speed | 1390 min ⁻¹ |
| Chladicí zařízení / Kühlmiteleinrichtung / Cooling equipment: | |
| • Typ / Typ / Type | 68POMPA70M150 + FILTRO – PA, 230 V, 50/60Hz 91.020.035 |
| • Výkon / Leistung / Output | 0,05 kW |
| • Obsah nádrže / Volumen vom Kühlmittel / Capacity | 20 dm ³ |
| Rozměr pásu / Sägebanddimension / Band size: | |
| 2910×27(25)×0,90 mm | |
| Řezná rychlost / Schnittgeschwindigkeit / Cutting speed: | |
| 20–120 m/min | |
| Řezné rozsahy / Schnittbereiche / Cutting size: | |
|  | |
| 0° | Ø258 320 x 100 275 x 250 250 x 250 |
| R 45° | Ø210 210 x 100 185 x 245 195x195 |
| L 45° | Ø185 195 x 100 150 x 250 170 x 170 |
| R 60° | Ø135 135 x 100 135 x 110 110 x 110 |


Acoustic pressure level:

The equivalent level of the acoustic pressure A (noise) in the position of the operator is L_{Aeq} = 59 / 65 dB. The values are indicating the emission levels and may not present safe working levels. Among the factors, which influence the real values of the operator's exposure, are properties of the workshop room, type of cut material and level of wear of the saw band – these may significantly influence the exposure levels.

2.2. Rozměrové schéma / Aufstellzeichnung / Installation diagram

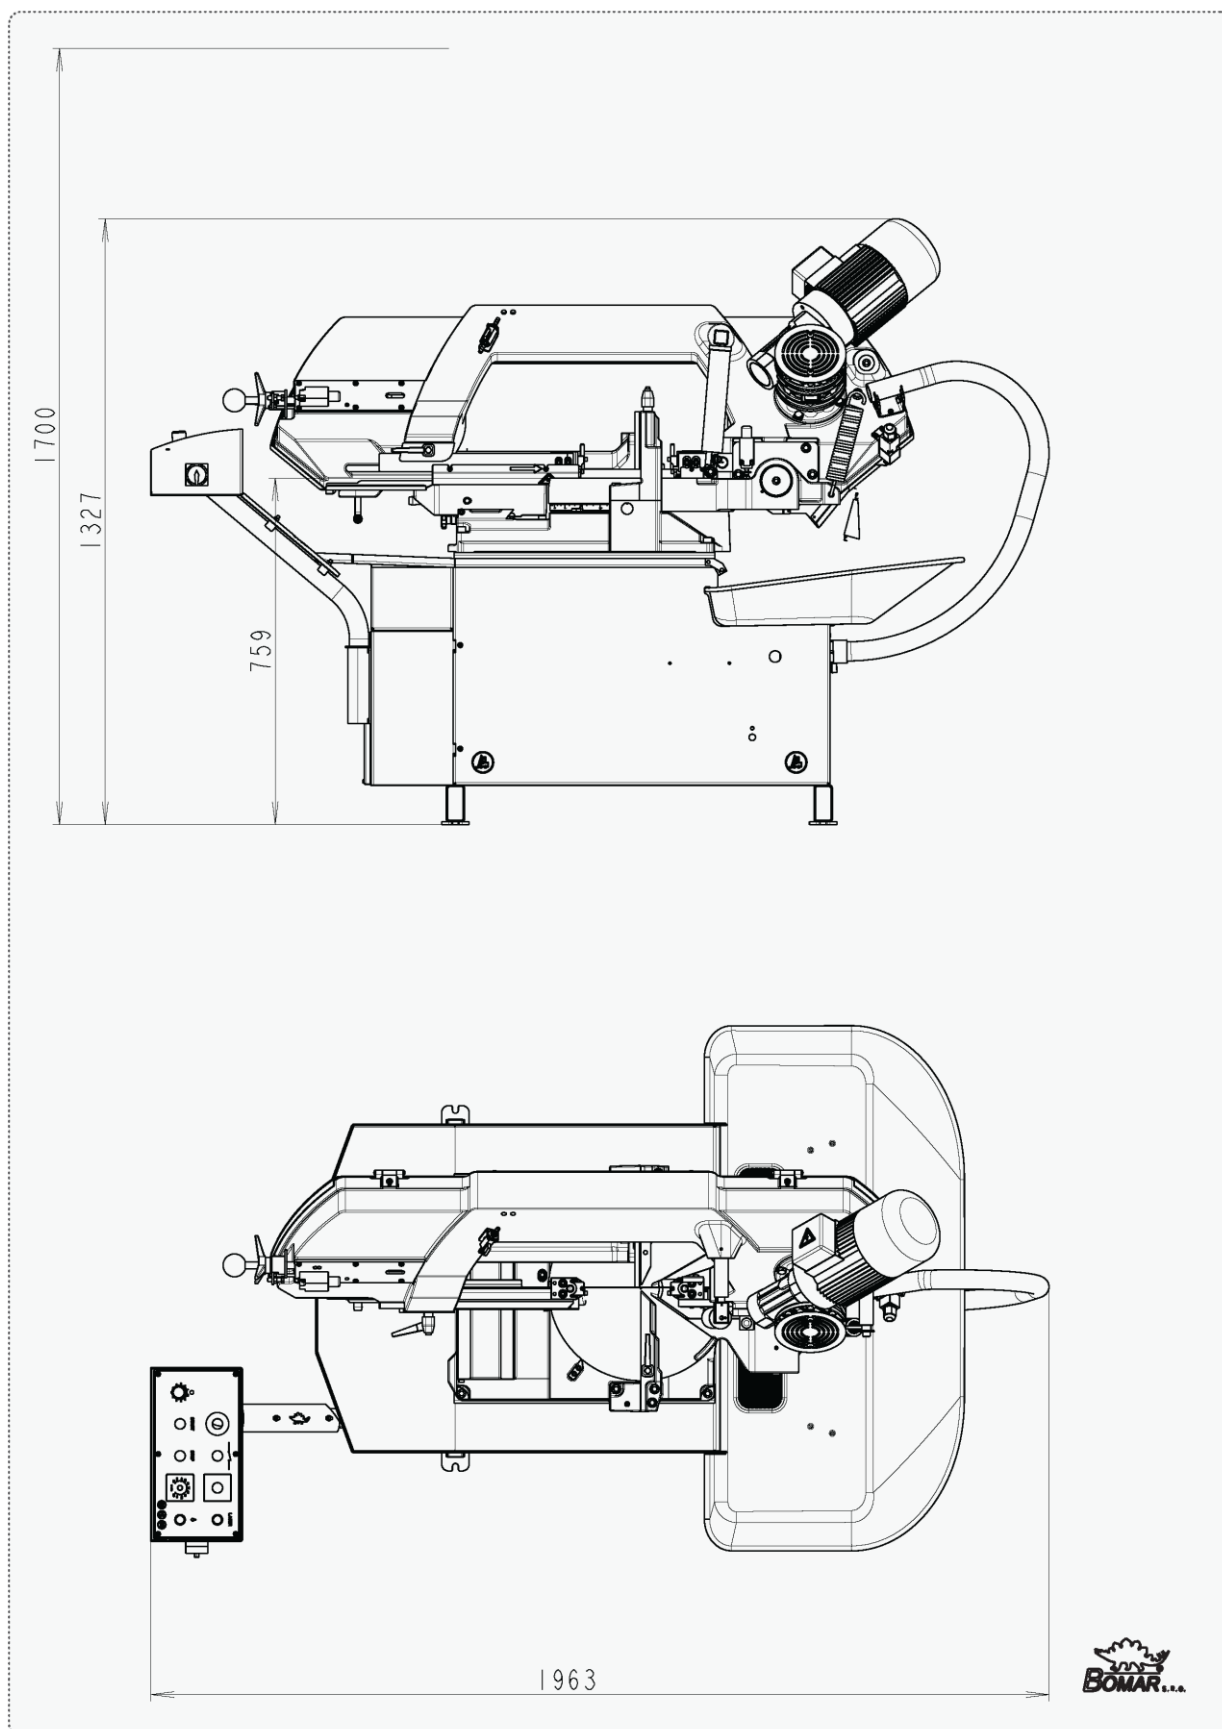

2.3. Popis / Beschreibung / Description

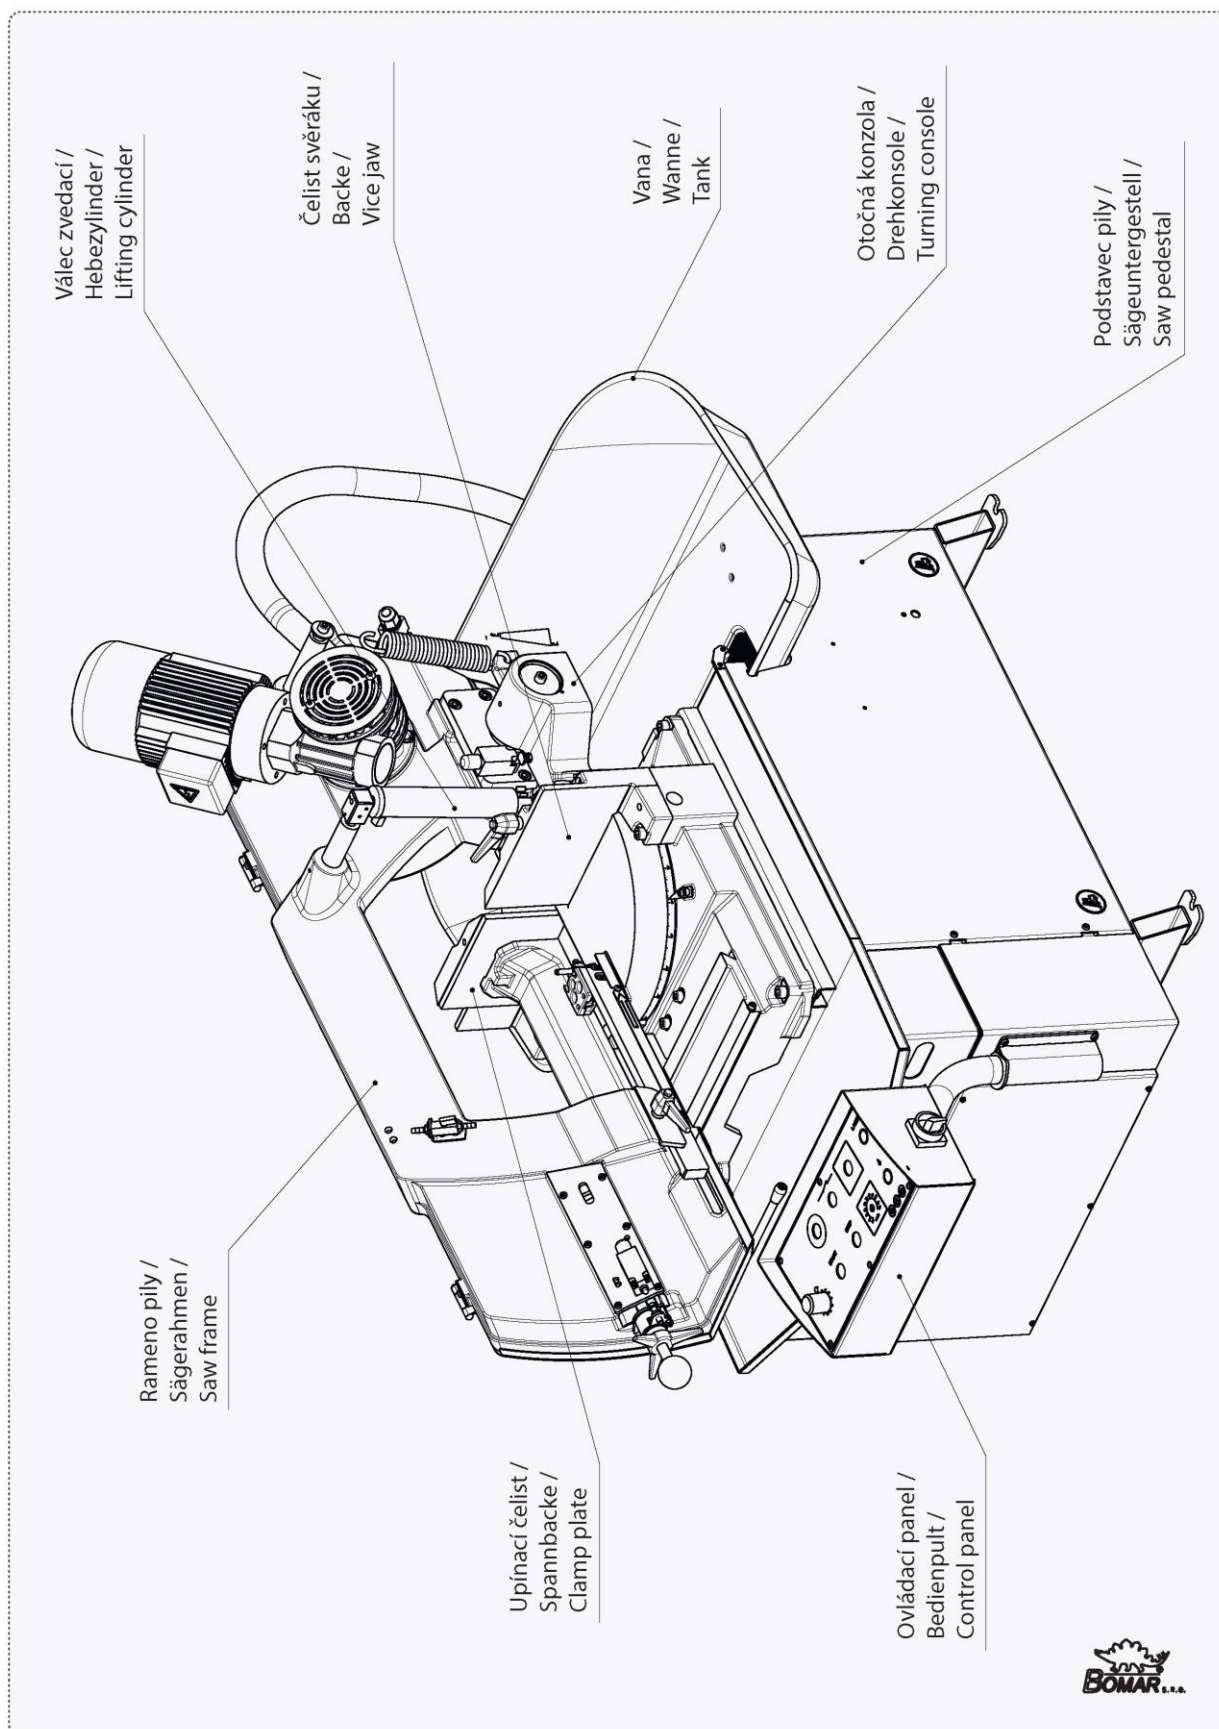

2.4. Transportation and stocking

2.4.1. Conditions for transportation and stocking

Follow the recommendations of the manufacturer for transportation and stocking! If the recommendations are not kept, damage may occur to the machine.

- Don't use a forklift truck for handling the machine, if you do not have a license for it!
- Don't move under suspended loads! Fault in the lifting device may cause serious injury.
- Keep a safe distance from the machine during transport.
- Temperature of the air must be between **-25°C and 55°C**, for a *short period* (max. 24 hours) up to 70°C.
- Do not expose the machine to radiation (microwave radiation, ultraviolet radiation, laser radiation, x-ray radiation). Radiation can cause problems with the machine function and deteriorating of the condition of the insulation.
- Take measures, to prevent damage by dampness, by vibrations and by shakes.

2.4.2. Transport and stocking preparations

Close the vice and thoroughly oil all smooth surfaces.

Lower the saw frame to the lowest position.

Make sure to empty the machine of all traces of the cooling agent.

Fasten all loose parts securely to the machine.

Pack and wrap the control desk securely to avoid damage during transport.

Put the stickers stating the minimum approximate machine weight to at least five well visible places.

The machine has to be screwed to a pallet for the transportation. Make sure the pallet is strong enough to be able to hold the saw!


2.4.3. Transport and stocking

The machine must be secured during transportation. Screw the pallet to the floor of the vehicle. Be careful that the machine is not damaged during transportation.. It is forbidden to handle the machine in any way different from that written in these operating instructions, the machine can be damaged.



Store the machine only under conditions mentioned in the manual, to avoid damage of the machine

2.4.4. Transportní schéma / Transport schema / Transport schème

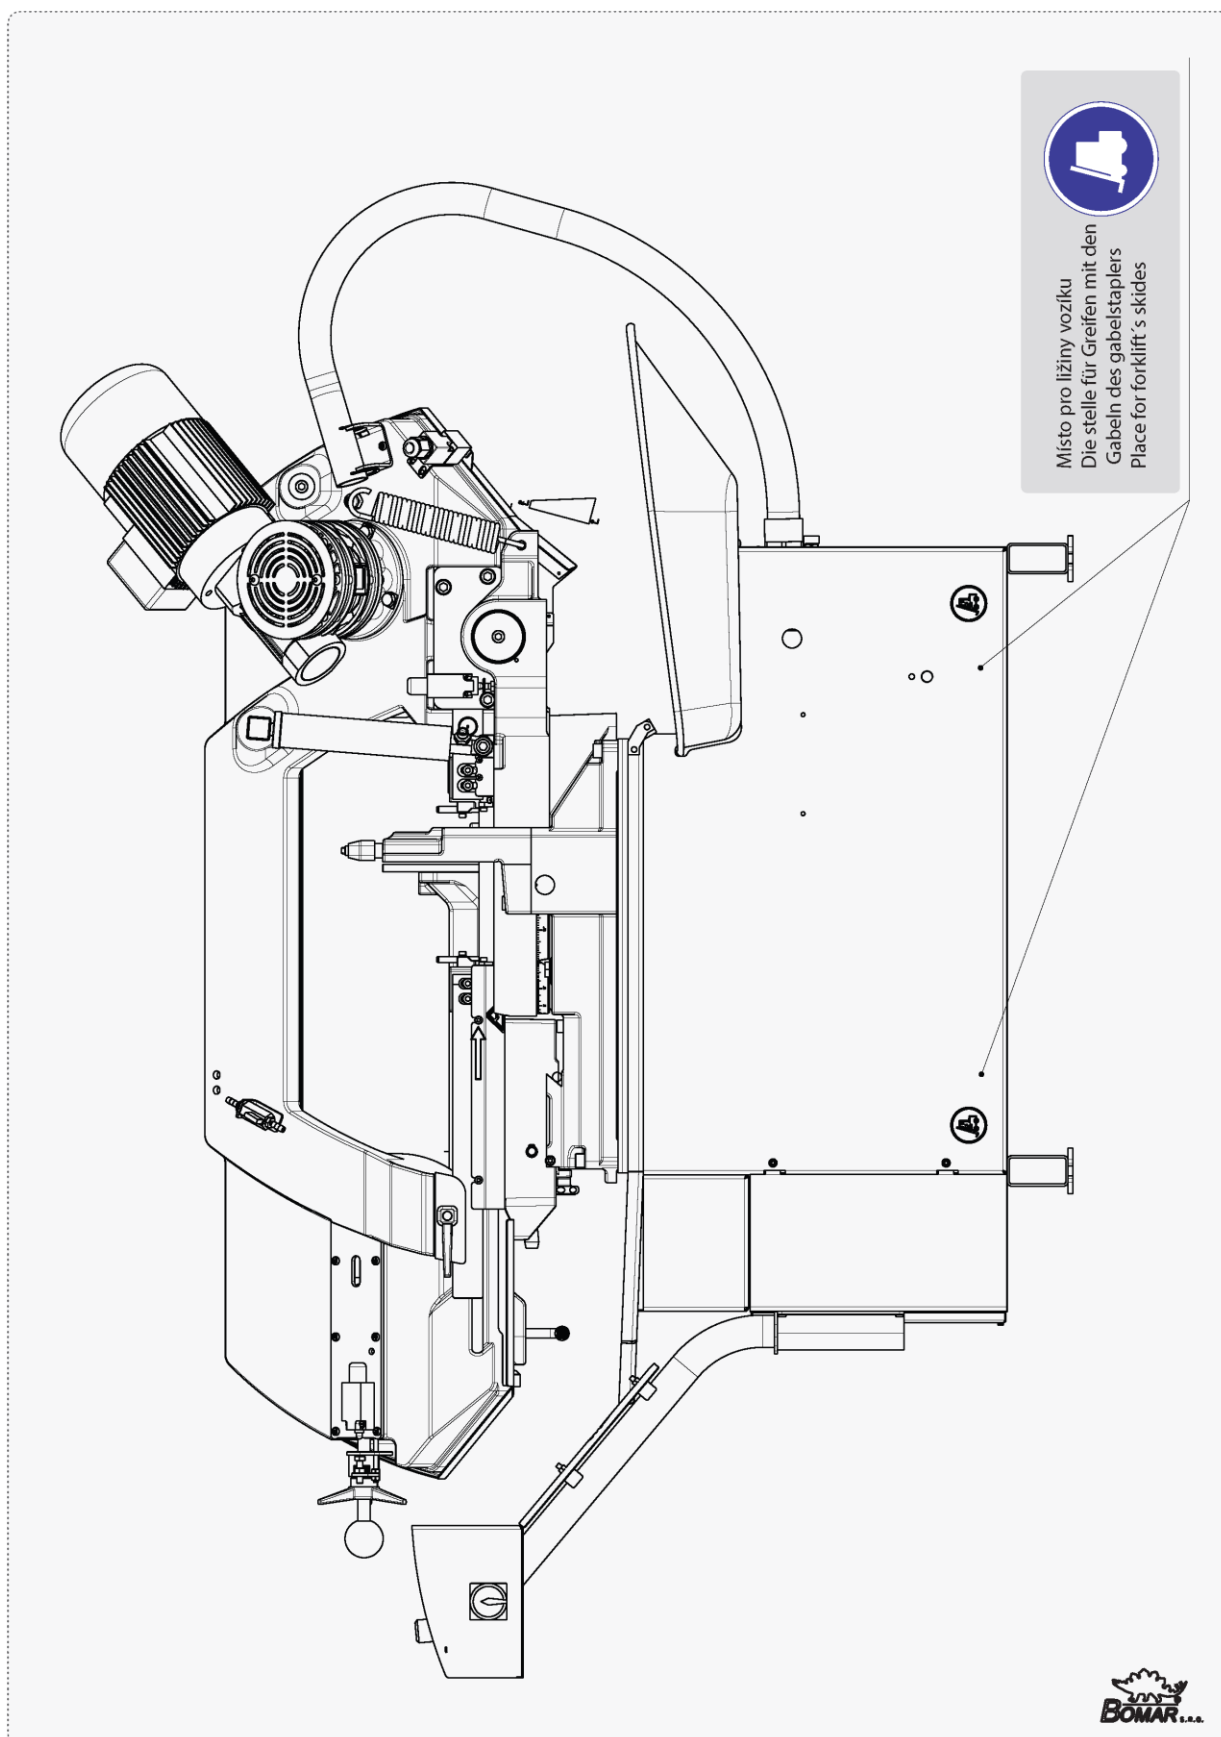

2.5. Activation

2.5.1. Machine working conditions

Keep the conditions of the manufacturer for machine operation! If the recommendations are not kept, damage can occur to the machine.

The manufacturer warrants the correct function of the machine for these conditions:

- At air temperature from **10°C to 40°C**; the temperature average during 24 hours must **not exceed over 35°C**.
- At relative dampness of the air in the interval from 30% to 95% (not condensing). Altitude up to 1000 meters.
- Do not expose the machine to any radiation (microwave radiation, ultra-violet radiation, laser radiation, x-ray radiation). Radiation can cause problems with the machine function and deteriorate the condition of the insulation.

2.6. Band saw unpacking and assembling


Remove the wrapping from the machine and unpack all parts.

Attention!

Switch off the main switch and lock it in position, before you start the assembly! Otherwise, there is a possibility of an accidental machine start.

Now put all enclosed parts to place.


2.6.1. Installation of the length stop for the material length setting

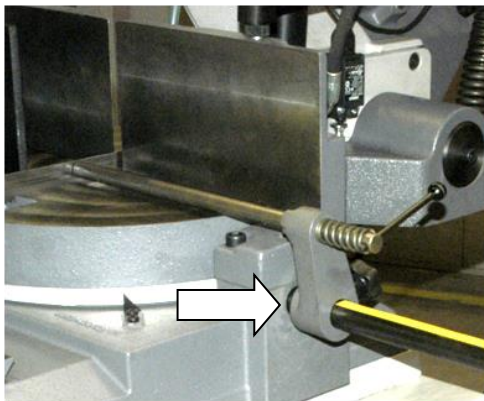


1. Slide the length stop into the hole on the side of the vice.



2. Move the length stop up to the saw band.

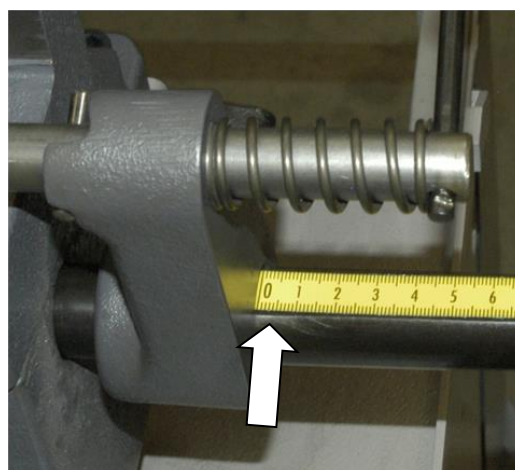

3. Set the measuring unit to zero value.

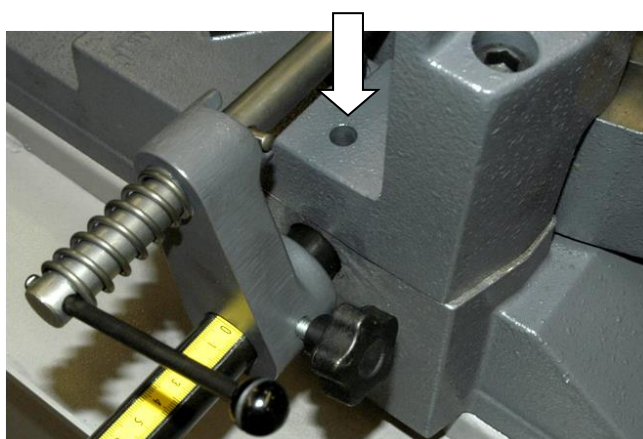

4. Fix the guiding pole of the length stop in place with a screw, which is put into the opening on the top side of the vice.

2.6.2. Attachment of the cooling liquid tub




1. Put the tub for the dripping off of the coolant on the pedestal from the back side of the saw



2. Attach the hose for the coolant removal to the outlet of the tub and put its other and immerse its other end into the coolant tank.

2.6.3. Assembly of the hand wheel

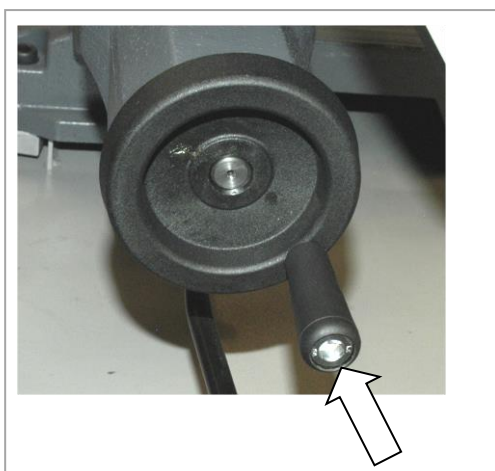

Remove the nut from the handle of the hand wheel, place it into the hex opening on the back side of the wheel and fasten the handle.

2.6.4. Machine installing and leveling

Check the floor supporting capacity before installing the machine. If the floor capacity does not meet the requirements, you must ready the necessary base for the machine.

Minimal requirement:


machine weight – Ergonomic 320.258 DG – 390 kg

+ weight of the accessories

+ maximum weight of material

- The machine must be leveled in a horizontal position. All feet of the machine must touch the floor after leveling.
- The machine must be leveled by means of a calibrated spirit level. Put the spirit level near the vice. Adjust the roller conveyors according to the spirit level.
- For machine leveling, take care that there is sufficient space available for operation, repair work, servicing of the machine and handling of the material.
- The machine and all appended parts and accessories must be visible from the place of operation.

2.6.5. Kotevní plan / Verankerungsplan / Grounding plan

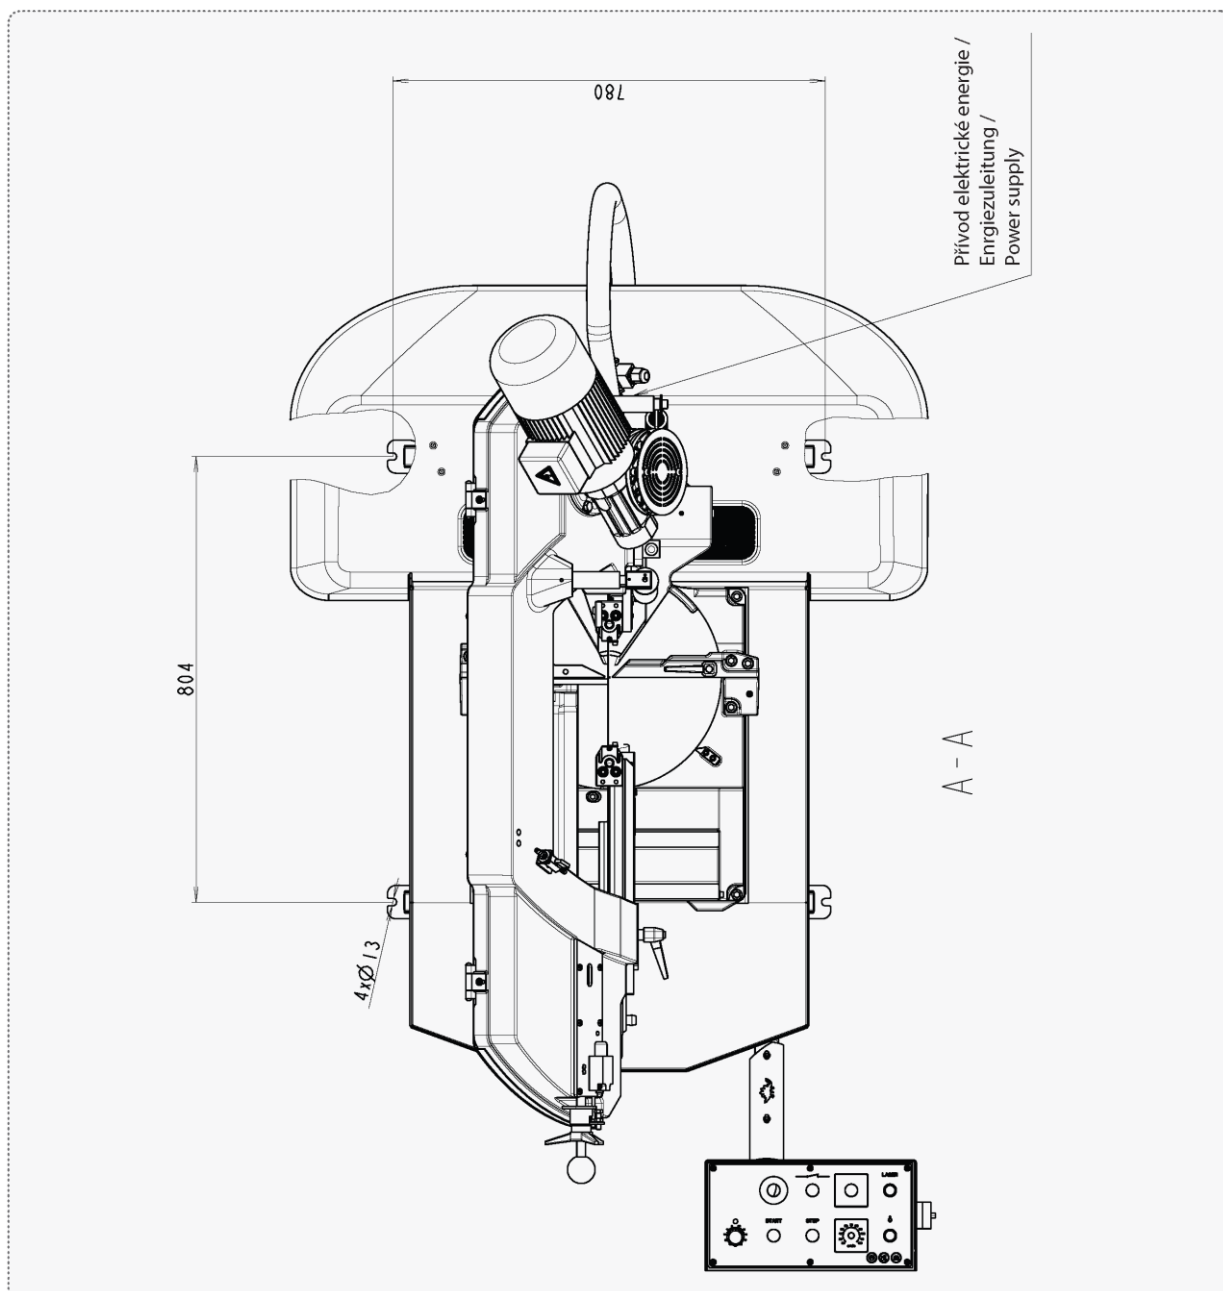

Kotvící materiál / Verankerungsmaterial / Grouding material

- 4× Chemická hmoždina / Chemischer Dübel / Chemical plug – $\varnothing 12$ mm
- Vrtáno do hloubky / In die Tiefe gebohrt / Drilled to – 100 mm
- Šrouby / Schraube / Screws – 4 × M10

- Šrouby podložit deskami o min. rozměrech P10×100-100
- Die Schrauben mit Platten mit Minimaldimensionen P10×100-100 unterlegen
- Screw must be bottomed with plates (min. dimensions P10×100-100)

Požadavky na rovinnost podlahy / Anforderungen an die Bodenebenheit / Requirements for floor flatness

± 10 mm / 1 m

2.6.6. Electrical connection

Attention!

Only a qualified professional must carry out the servicing and repairs of the electric equipment! Take special care during work with the electrical equipment. High voltage accident can have fatal consequences! Always follow instructions for work safety.

Electrical parameters of the machine:

- Service voltage: $\sim 3 \times 400 \text{ V}$, 50 Hz, TN-C-S
- Total input / Max. fuse: 1,8 kW / 16 A

Before connecting the machine turn off the main power switch and ensure a dry area for the connection work.

Note:

The values of the cross section of the conductor and the rated current can be found in the regulations.

Service voltage must agree with the line voltage! Cross section of the supply line must respond with the rated current for max. machine load.

Note:

The socket with the fork can be used only for machines with the rated current less than 16 A and total input less than 3 kVA.

The input line is equipped with a 16 A socket for connection of the machine to the electric supply line. In case the machine is connected with a direct connection, an extra main switch which can be locked in zero position must be added.

Attention!

In this case the extra switch becomes the primary switch and the main switch on the machine has only secondary function!

2.6.7. Check the direction of the saw band



After the machine has been successfully connected, switch on the machine and run the driving engine of the band briefly. The movement of the band must be in agreement with the direction of the arrow on the saw band cover. If the direction of the saw band does not agree, the phases at the terminal line must be switched.

2.6.8. Inspection of the connection to the electrical network

Attention!

When you connect the machine to the electrical network insure correct connection of all phases!

THE HYDRAULIC AGGREGATE ENGINE MUST NOT BE OPERATED IN REVERSED MODE FOR MORE THEN 10 SECONDS!!!

2.6.9. Filling of the cooling system

Prepare a mixture of the water and the cooling liquid. Keep to the concentration specified by manufacturer. Remove the cover from the drainage hole. Pour the mixture into the tank of the cooling system.

When filling the tank with the cooling liquid, take care that the liquid does not drip out of the tank and that the tank does not overflow.

When adding anticorrosion agents, antifreeze and other chemicals follow the instructions of the manufacturer! By mixing various products poisonous and aggressive chemicals can be created that can damage your health or the cooling equipment of the machine.

2.7. Machine functions check

Before you start the check study the chapter *Machine control* thoroughly. Do not proceed with the check if you did not fully understand all control elements and machine functions.

Check, if the machine or some parts of the machine were not damaged during transport.

Check, if all covers are installed and functional. Check (with the Tenzomat) if the saw band is correctly stretched. If it is necessary, you can stretch the saw band according to chapter *Selection and replacement of the saw band*. Correct values of the saw band tension are on the Tenzomat.

Switch on the main switch and check the motors and systems (saw band drive, hydraulic pump, cooling pump, chips conveyor).

Open and close the main vice. Turn the saw frame of the band saw from one outer position to the other outer position. Raise the saw frame to the top position and than lower the saw frame to the lowest position.

Start the machine with the cooling pump and let it run without load until the cooling system will be filled with cooling liquid. As soon as the cooling liquid starts to escape from the nozzles of the cooling system, the cooling system is ready for operation. Carry one cycle of cutting without material. Check, if the machine runs with no irregularities. If all machine functions are run properly, the machine is ready for operation.

2.8. Machine disposal after lifetime

Pour all service fluids (cooling liquid, hydraulic oil) from the machine over into designated reservoirs. Dismantle machine into separate parts and dispose of them in accordance with valid directives.

Packaging material Also dispose in accordance with valid directives.

Packaging and machine parts that contain secondary raw materials can be recycled.

2.9. Saw band

Remove the saw band cover only after you have installed and tightened the saw band a bit. This way you minimize the risk of injury.



2.9.1. Saw band size

2910×27(25)×0,90 mm

2.9.2. Selection of the saw band tooth system

The manufacturers provide the saw bands with constant and variable tooth systems. The important factor for selection of the tooth system is the length of the cutting canal with respect to the size of the product.

1. *Constant tooth system* – the saw band has a constant tooth pitch all over its length. This type is suitable for cutting solid materials.

BOMAR recommends variable tooth system for its band saws.

2. *Variable tooth system* – tooth pitch is variable. Variable tooth system is used for profiled materials and bundle cutting. Variable tooth pitch lowers vibration of the saw band, increases service life of the saw band and quality of the cut area.

In the table below the type of the tooth system depending on the sizes and profile of the cutting material is advised.

Footnotes:

ZpZ – teeth number on one inch S – tooth with zero angle of the teeth K – tooth with positive angle of the teeth

Examples of the tooth system marking:

32 S – number „32“ means 32 teeth per inch (constant tooth system), letter „S“ marks teeth with zero angle with respect to the band.


4–6 K – number „4–6“ means 4 to 6 teeth per inch (variable tooth system); letter „K“ marks teeth with positive angle with respect to the band.

2.9.3. Saw band running-in

For reaching a full lifespan of the band we recommend performing a running-in.


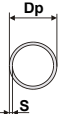
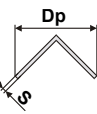
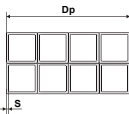
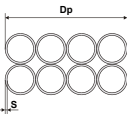
Running-in: Perform a cut with the frame lowering speed at 50%. If vibrations occur increase or decrease the band's speed.

When cutting small pieces run the band until approximately 300 cm² of material has been cut. When cutting large pieces run the band for approximately 15 minutes. When the band has been run, increase the lowering speed of the arm to normal. The running in of the saw band avoids micro chips on the cutting edges of a new saw band ensuing from first excessive stress. This would decrease its lifespan substantially. The optimal running in of the saw band produces ideal rounded cutting edges and therefore the conditions for a maximum lifespan are met.


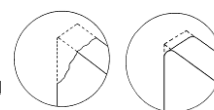

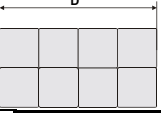
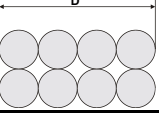


Note: Run-in reground saw bands too.

2.9.4. Tables for teeth selection

| SHAPED MATERIAL ($D_p, S = \text{mm}$) | | | | | | |
|--|---|---|--|---|---------|---------|
|  |  |  |  |  | | |
| Note: Table shows tooth system selection for cutting one piece of the profile. For cutting of more pieces of the profiles (bundle), you must think of the size of the wall as double size of the wall of one profile (that means, size „S“ equates to 2×S). In table, there are tooth systems constant and variable. | | | | | | |
| Size of the wall S [mm] | Tooth system (Z_pZ) Outer diameter of the profile D_p [mm] | | | | | |
| | 20 | 40 | 60 | 80 | 100 | 120 |
| 2 | 32 S | 24 S | 18 S | 18 S | 14 S | 14 S |
| 3 | 24 S | 18 S | 14 S | 14 S | 10–14 S | 10–14 S |
| 4 | 24 S | 14 S | 10–14 S | 10–14 S | 8–12 S | 8–12 S |
| 5 | 18 S | 10–14 S | 10–14 S | 8–12 S | 6–10 S | 6–10 S |
| 6 | 18 S | 10–14 S | 8–12 S | 8–12 S | 6–10 S | 6–10 S |
| 8 | 14 S | 8–12 S | 6–10 S | 6–10 S | 5–8 S | 5–8 S |
| 10 | - | 6–10 S | 6–10 S | 5–8 S | 5–8 S | 5–8 S |
| 12 | - | 6–10 S | 5–8 S | 5–8 S | 4–6 K | 4–6 K |
| 15 | - | 5–8 S | 5–8 S | 4–6 K | 4–6 K | 4–6 K |
| 20 | - | - | 4–6 K | 4–6 K | 4–6 K | 3–4 K |
| 30 | - | - | - | 3–4 K | 3–4 K | 3–4 K |
| 50 | - | - | - | - | - | 3–4 K |

| Size of the wall S [mm] | Tooth system (Z_pZ) Outer diameter of the profile D_p [mm] | | | | | |
|----------------------------|---|---------|---------|-------------|-------------|-------------|
| | 150 | 200 | 300 | 500 | 750 | 1000 |
| 2 | 10–14 S | 10–14 S | 8–12 S | 6–10 S | 5–8 S | 5–8 S |
| 3 | 8–12 S | 8–12 S | 6–10 S | 5–8 S | 4–6 K | 4–6 K |
| 4 | 6–10 S | 6–10 S | 5–8 S | 4–6 K | 4–6 K | 4–6 K |
| 5 | 6–10 S | 5–8 S | 4–6 K | 4–6 K | 4–6 K | 3–4 K |
| 6 | 5–8 S | 5–8 S | 4–6 K | 4–6 K | 3–4 K | 3–4 K |
| 8 | 5–8 S | 4–6 K | 4–6 K | 3–4 K | 3–4 K | 3–4 K |
| 10 | 4–6 K | 4–6 K | 4–6 K | 3–4 K | 3–4 K | 2–3 K |
| 12 | 4–6 K | 4–6 K | 3–4 K | 3–4 K | 2–3 K | 2–3 K |
| 15 | 4–6 K | 3–4 K | 3–4 K | 2–3 K | 2–3 K | 2–3 K |
| 20 | 3–4 K | 3–4 K | 2–3 K | 2–3 K | 2–3 K | 2–3 K |
| 30 | 3–4 K | 2–3 K | 2–3 K | 2–3 K | 1,4–2 K | 1,4–2 K |
| 50 | 2–3 K | 2–3 K | 2–3 K | 1,4–2 K | 1,4–2 K | 1,4–2 K |
| 75 | - | 2–3 K | 1,4–2 K | 1,4–2 K | 1,4–2 K | 0,75–1,25 K |
| 100 | - | - | 1,4–2 K | 0,75–1,25 K | 0,75–1,25 K | 0,75–1,25 K |
| 150 | - | - | - | 0,75–1,25 K | 0,75–1,25 K | 0,75–1,25 K |
| 200 | - | - | - | 0,75–1,25 K | 0,75–1,25 K | 0,75–1,25 K |
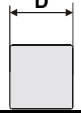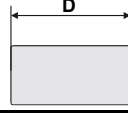
| SOLID MATERIAL ($D = \text{mm}$) | | | | | | |
|---|---|---|--|---|-------------------------|--|
|  |  |  |  |  | | |
| Constant tooth system | | | Variable tooth system | | | |
| length of the cut D | | tooth system (Z_pZ) | length of the cut D | | tooth system (Z_pZ) | |
| to 3 mm | | 32 | to 30 mm | | 10 –14 | |
| to 6 mm | | 24 | 20–50 mm | | 8–12 | |
| to 10 mm | | 18 | 25–60 mm | | 6–10 | |
| to 15 mm | | 14 | 35–80 mm | | 5–8 | |
| 15–30 mm | | 10 | 50–100 mm | | 4–6 | |
| 30–50 mm | | 8 | 70–120 mm | | 4–5 | |
| 50–80 mm | | 6 | 80–150 mm | | 3–4 | |
| 80–120 mm | | 4 | 120–350 mm | | 2–3 | |
| 120–200 mm | | 3 | 250–600 mm | | 1,4–2 | |
| 200–400 mm | | 2 | 500–3000 mm | | 0,75–1,25 | |
| 300–800 mm | | 1,25 | | | | |
| 700–3000 mm | | 0,75 | | | | |

3. Ovládání stroje / Bedienung der Maschine / Machine control

3.1. Starting the band saw and switching on the safety circuits


- » 1. Turn the main switch into position 1 –ON.
The main switch is located on the side of the control panel




2. Switch on the Safety circuit of the saw. The safety circuit will run a check on all safety switches.



3.2. Control elements

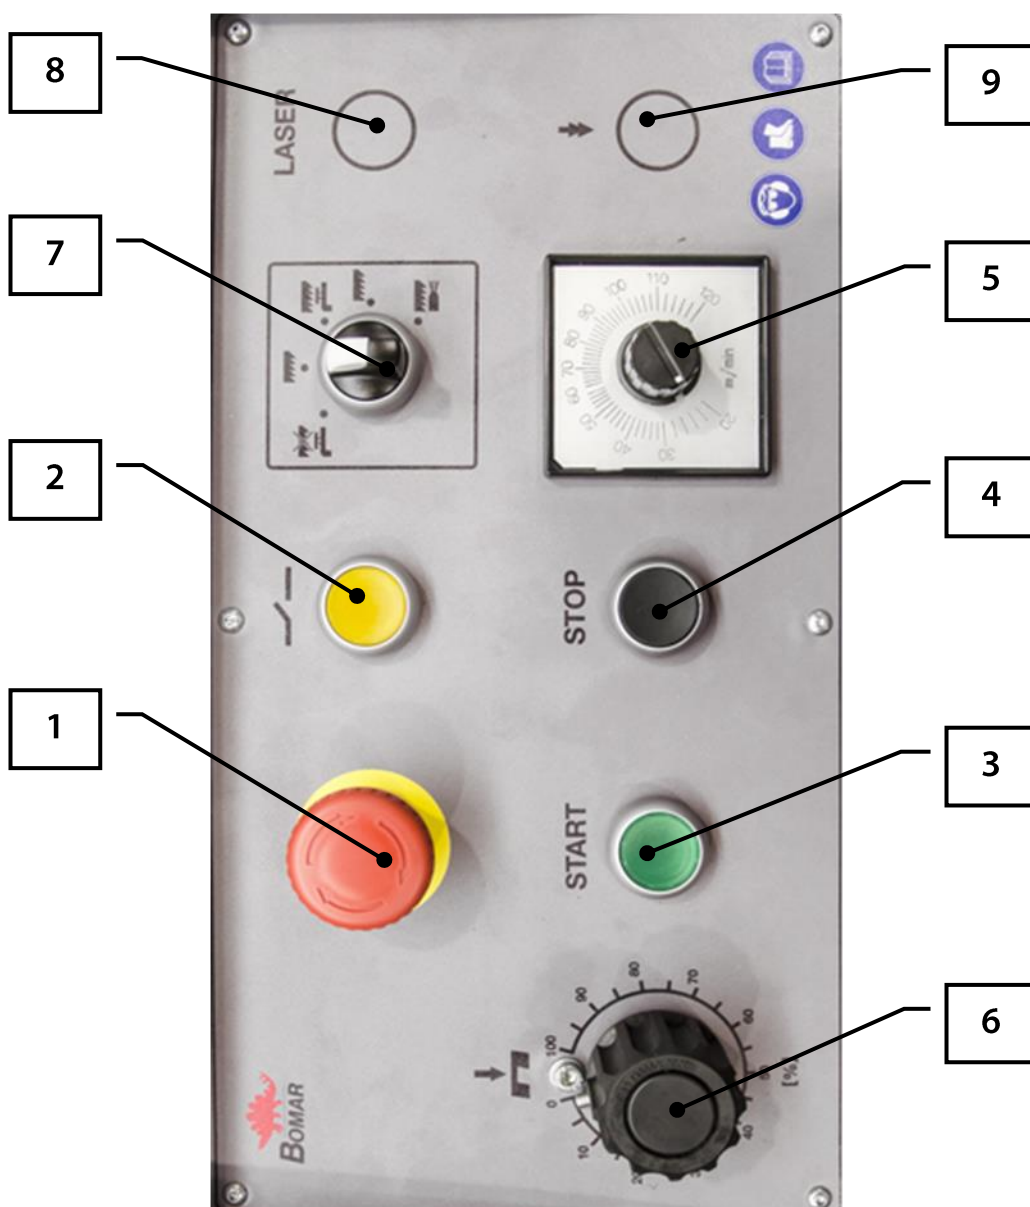


| | |
|---|---|
| 1 | Emergency Stop Switch Immediately stops the machine in a case of emergency. |
| 2 | Safety circuit Press button to turn on the safety circuit |
| 3 | START Starts the drive of the saw band.. |
| 4 | STOP Stops the drive of the saw band |
| 5 | Ergonomic 320.258 DG with a frequency converter  Frequency converter – setting of the cutting speed Serves to set the speed of the saw band during cutting with the possibility of the frequency converter (20 to 120 m. min ⁻¹). |
| 6 | Regulation valve The regulation valve sets the speed of the descent of the saw arm into the cut. The speed is limited by the setup of the pressure into the cut on the guiding cubes. Note: If the throttle valve is tightened too much when being closed, the valve seat can be worn out, which will cause leakage. Always tighten the valve gently. |
| 7 | Setting of the cooling mode of the saw band By turning the knob into the corresponding position the required cooling mode is set. See chapter regarding the setting of the cooling mode |
| 8 | Laserliner – optional equipment Laser beam switch |
| 9 | Rapid shift – optional equipment The rapid shift allows a faster descent of the arm into the cut than the maximum speed of descent reached with the hydraulic regulation. For acceleration of descent of the arm into the cut press the rapid shift button. |

3.3. Machine control


3.3.1. Cutting

1. Open the main vice of the band saw.
2. Set the length stop to the desired length of the material.
3. Set the desired cutting angle.
4. Insert the material and push it to the length stop.
5. Move the vice jaw to about 5 mm from the material


For a longer distance movement of the vice jaw use the rapid shift option:

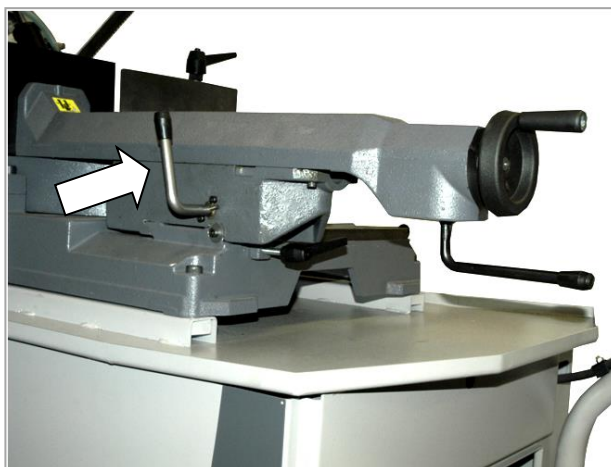


- a) loosen the arresting lever of the moveable jaw of the main vice

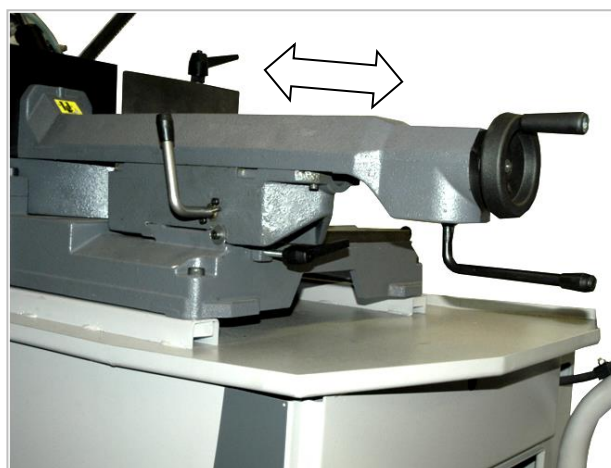

- b) move the jaw to the required distance
c) tighten the arresting lever

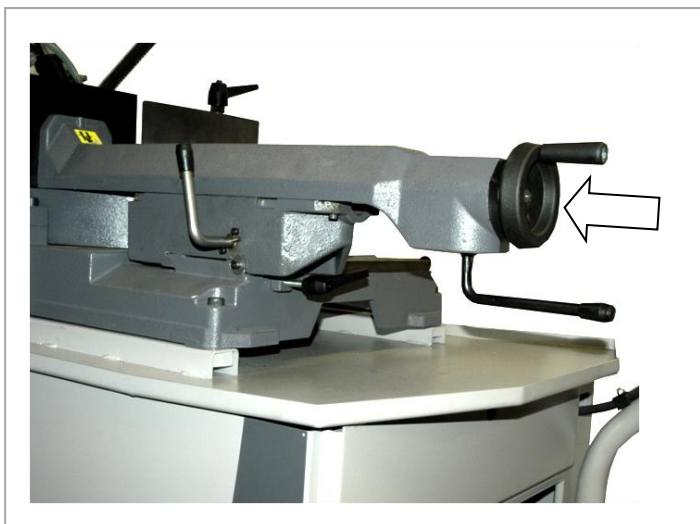

For shifting the jaw for a shorter distance use the hand wheel.

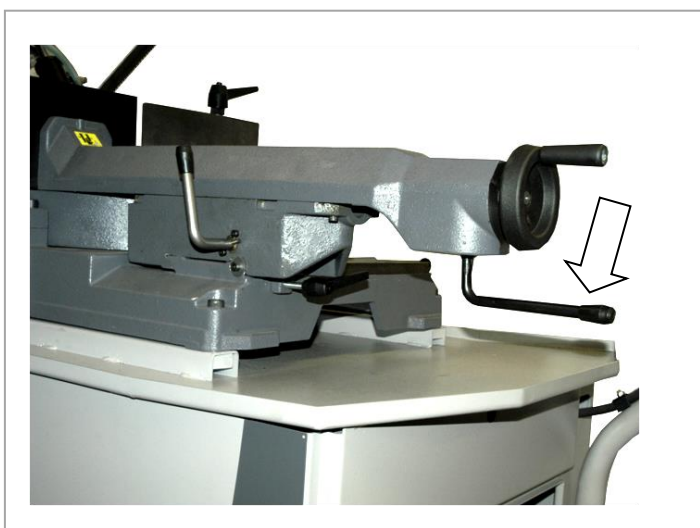


6. Tighten the material by the clamping lever.
7. Set the left guiding cube of the saw band as close as possible to the material.

Note:


It is possible to stop the saw band drive by pressing the STOP button or in a case emergency with the Emergency Stop Switch anytime during the cutting

8. Set the saw band speed.
9. Start saw band drive with the **START** button.
10. Set the speed of the saw frame descent.
11. Close the regulation valve of the frame descent and lift the saw frame to the top position after cutting
12. Remove the material. Now you can repeat the whole process.

3.3.2. Setting of the material length

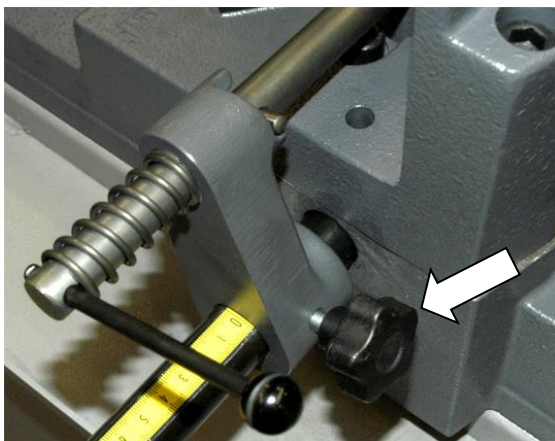


1. Loosen the clamping screw of the length stop

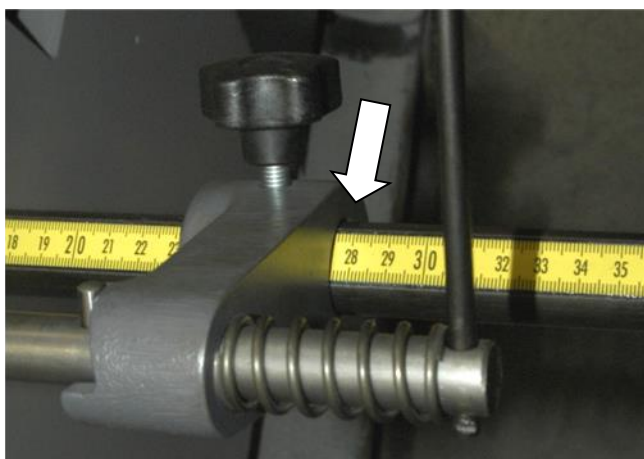

2. Shift the length stop to the required length and tighten the clamping screw.




Warning!


The length stop enables a gap between the length stop slat line and the material to avoid clenching the saw band in the cut during cutting. Set the gap of the length stop by turning the lever in the direction of the arrow.

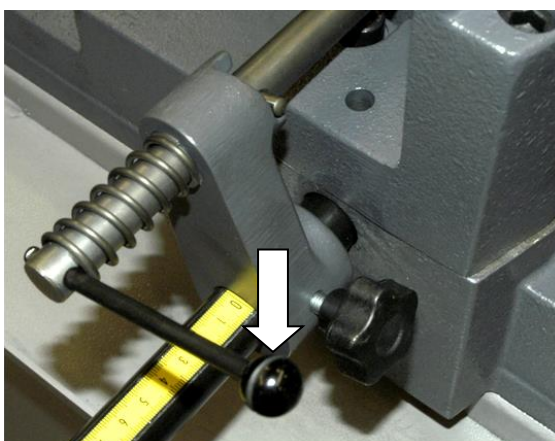



3.3.3. Setting of the cutting angle

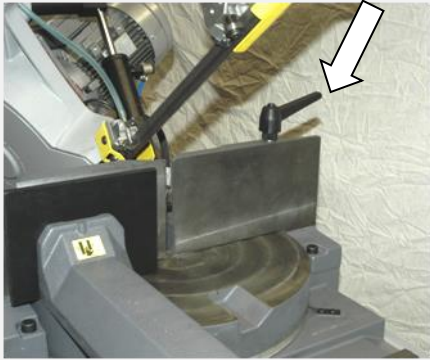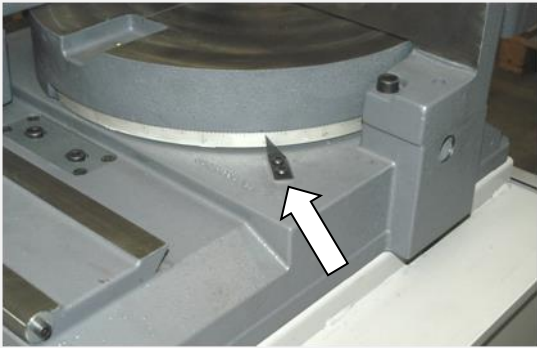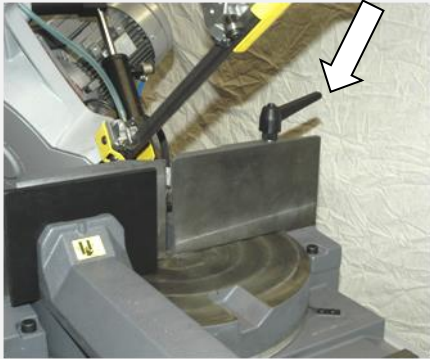The band saw **Ergonomic 320.258 DG** allows cutting under angles from **-45° to 60°**. For an easier setup of common angles, there are latches on the turning console at every 15° angle increment. Locking in the latches can be felt when turning the saw frame by hand. It is not necessary to loosen the latches for setting a different angle, just turn the saw frame console in the direction required.
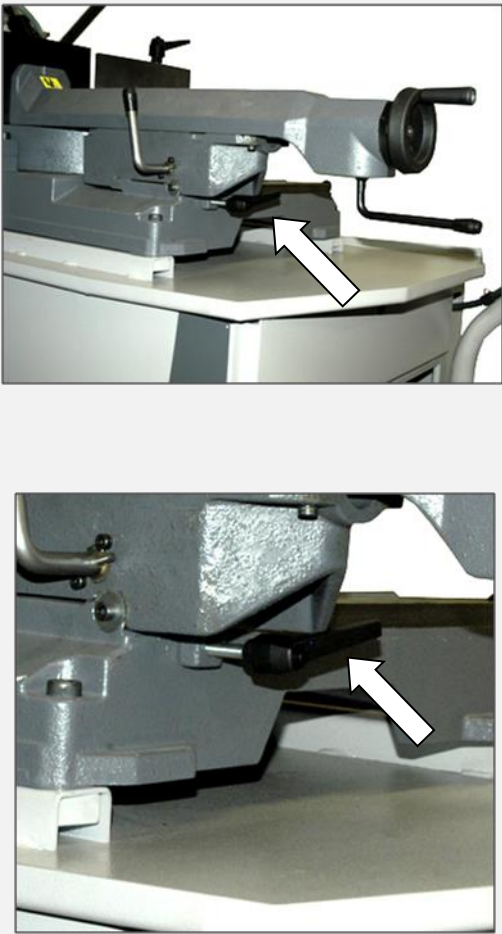
| Picture | Procedure |
|---|---|
|  | <ol style="list-style-type: none"> 1. Raise the saw frame and loosen the turning console clamping lever. |
|  | <ol style="list-style-type: none"> 2. Set the required angle of the cut according to the scale on the turning console. |
|  | <ol style="list-style-type: none"> 3. Tighten the clamping lever of the console. |

| Picture | Procedure |
|--|--|
|  | <p>4. Loosen the clamping lever of the vice.</p> |

| Picture | Procedure |
|--|---|
| <p>angle $< 0^\circ$</p>  | |
| <p>angle $\geq 0^\circ$</p>  | <p>5. Shift the vice according to the set angle of the cut. For negative angles move the vice to the right, for positive and zero angles to the left.</p> |


3.3.4. Setting of the optimal span of the guiding cubes

For reaching a smooth and accurate cut it is necessary to move the left guiding cube as close to the cut material as possible.



1. Loosen the lever of the left guiding lath and move the left part of the saw band guide so that the edge of the left guiding cube will be as close to the material as possible.
2. Lower the arm into the lower position and check, the position of the guiding cube in respect to the loading surface. The guiding cube should be positioned approx. 10 mm from the loading surface of the vice.
3. Tighten the lever of the guiding lath and check the setting of the guiding cube one more time to avoid collision with the vice jaw or clamping table.

3.3.5. Cutting speed adjustment

| Picture | Description |
|--|--|
| <p>Ergonomic 320.258 DG with freq. Converter</p>  | <ul style="list-style-type: none"> • Change band saw speed by frequency converter in range 20–120 m.min⁻¹. |

3.3.6. Speed adjustment of the arm lowering

Set the speed of the arm lowering to the cut by this regulation knob on the control panel (no.6)

- turn clockwise to lower the speed of the descent
- turn counter clockwise to increase the speed of the descent

Warning!

If the throttle valve is tightened too much when being closed, the valve seat can be worn out, which will cause leakage. Always tighten the valve gently


Note

If the regulation valve is fully closed, the arm is fixed in a vertical position.

To allow the arm to move downwards (into cut) it is necessary to release the valve.

3.3.7. Setting the type of cooling

The required type of cooling can be chosen using knob no. 3 on the control panel.

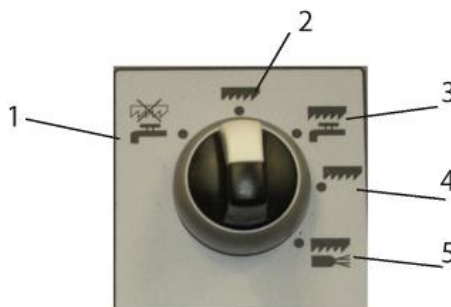

Cooling with liquid:

1. The cooling pump runs, even if the pump is turned off (washing)
2. The saw band runs without cooling.
3. The cooling is turned on together with the saw band drive

Cooling with oil vapor- Microniser (optional equipment)

4. Saw band runs without cooling.
5. Cooling is turned on together with the saw band drive.

3.4. Material insertion

- Never walk under a suspended load!
- Never climb onto the roller conveyor!
- Do not hold the material for clamping in the vice! The vice can cause injuries!

3.4.1. Selecting means of manipulation


- Use the sufficient means to lift and transfer the material!
- Handle the material only with a lift truck or use suspension strands and a crane!
- Do not use the lift truck or crane in case that you do not have the license to operate it!

3.4.2. Insertion

Insert material into the vice and ensure that the material cannot move in the vice or fall from the vice after the clamping. If you are cutting long pieces (for example rods, tubes), you must use a roller conveyor for shifting the material to the band saw. Contact Bomar for more information about roller conveyors.

Make sure the conveyor is long enough and the material cannot drop off the conveyor.

Make sure round pieces always stay on two vertical rollers and cannot fall off the conveyor!

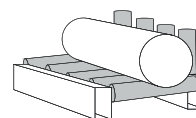


3.4.3. Bundle material cutting

If you want to cut the material in bundles, it is suggested to load the material in the following way.

Round material bundle: For round material take care that the bars are put according to the picture. If the bars are put differently, they might slide during handling.

It is recommended to always weld the material at the rear end of the bundle to secure it from moving. Before welding always, switch the machine off with the main switch! The magnetic fields, which occur during welding, may damage the controls!

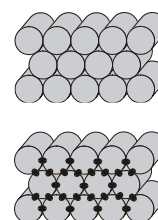


4. Údržba stroje / Wartung / Machine service

4.1. Saw band dismantling


1. Lift the arm to its uppermost position and lock the arm in position with the regulation valve.




2. Remove the yellow safety covers of the band. The covers are tightened with screws.

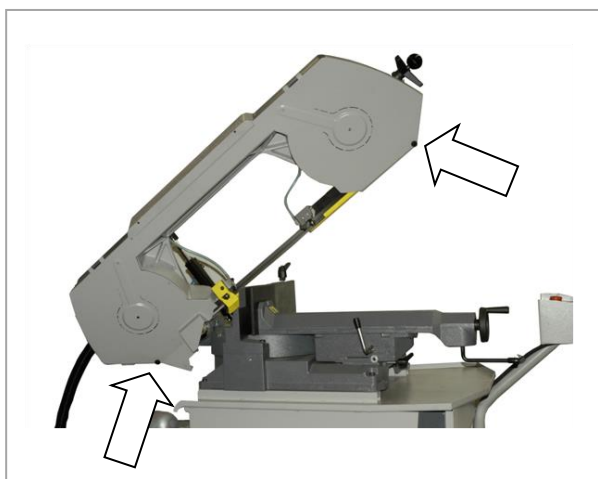


3. Open the back cover of the arm. It is mounted with two plastic head screws.

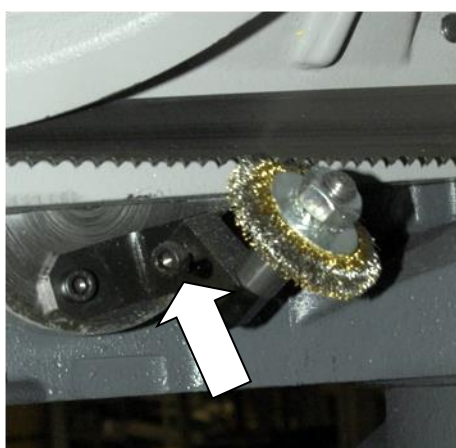


4. Loosen the holder of the brush and turn it away from the band so it does not hinder the dismantling of the band.

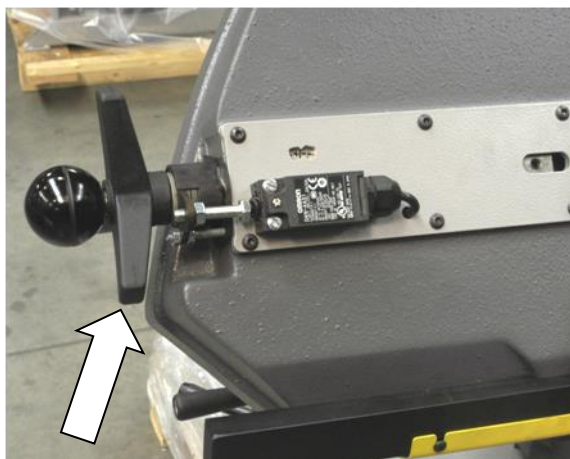

5. By turning the tightening star to the left loosen the stretching of the band.

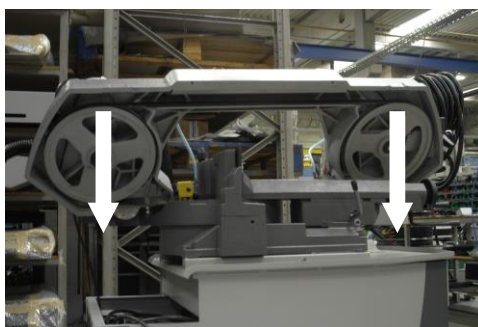


6. Pull the saw band from the wheels.

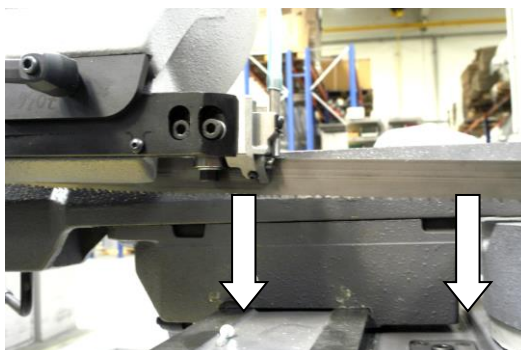



7. After that pull out the band carefully from the guiding cubes.

4.2. Saw band installation


1. Prior to installation, clean the track wheels, guiding cubes and inner side of the arm thoroughly of all traces of chips and dirt. **Keep in mind the teeth direction when installing the saw band.**

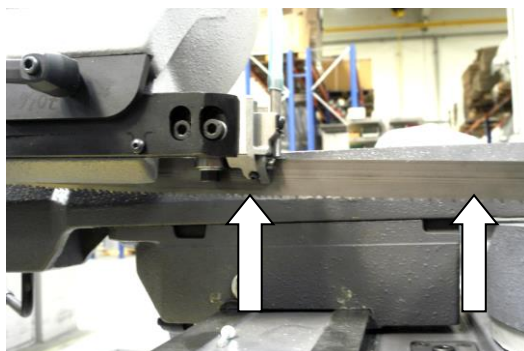


2. Insert a new saw band in the guide cubes. Make sure the saw band runs between both guiding rollers and that it is pushed all the way to the top.

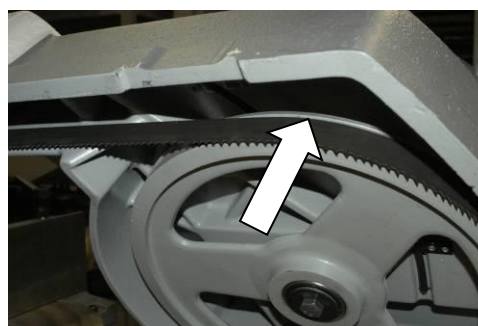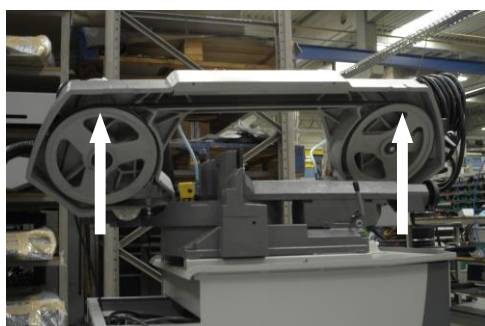


3. Put the saw band on both guiding wheels. Make sure that the saw band ridge fits tightly to the wheel rim. Push the saw band as close to the rim as possible..

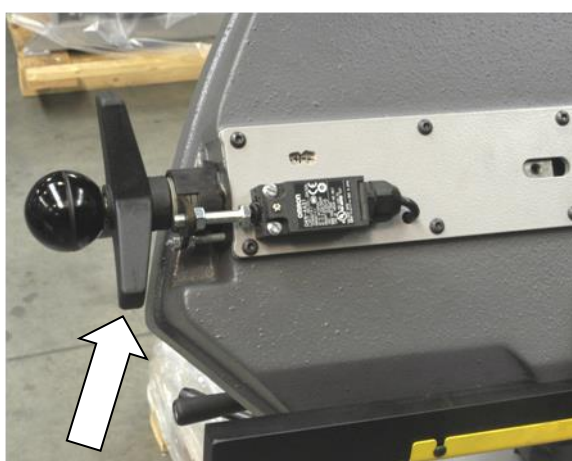

4. Turn the tightening star to the right until you gently stretch the band. Now you can remove the plastic cover on the saw band.

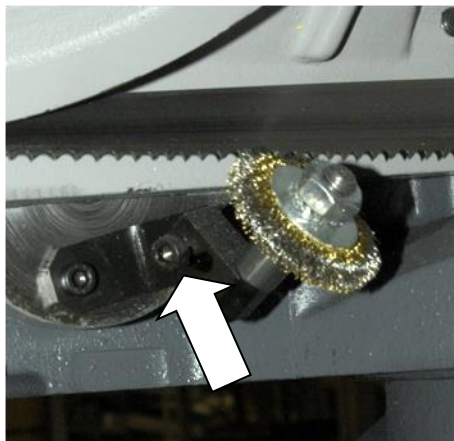


5. Adjust the brush to the saw band and tighten the holder screws.

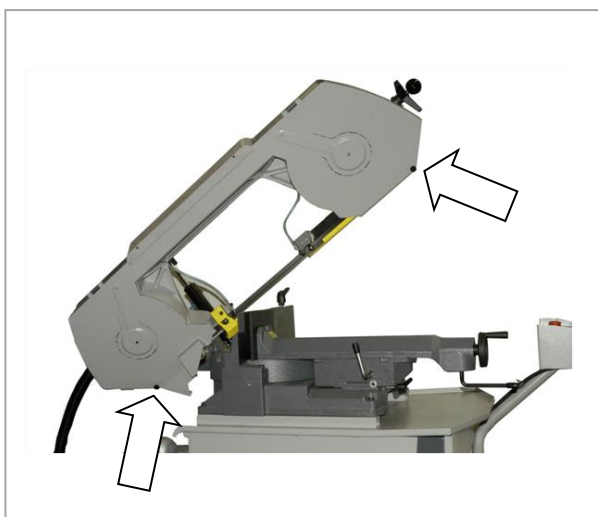

6. Close the back cover and secure it with two plastic head screws.



7. Mount the yellow safety covers of the band.

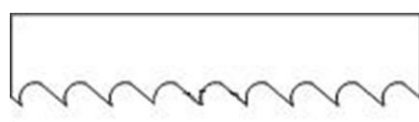

Arrow on the cover must agree with the direction of the teeth. If it does not, you have to flip the saw band.

4.3. Saw band stretching and inspection

Correct saw band stretching is one of the most important factors, which influences accuracy and saw band lifespan. Stretch the saw bands according to the band saw and the selected saw band type. Keep to the recommendation of your manufacturer.

| Pilový pás Sägeband Saw band | Napětí pilového pásu Sägebandspannung Blade tension | Napětí pilového pásu PSI (pro Tenzomat) Sägebandspannung PSI (für Tenzomat) Blade tension PSI (for Tenzomat) |
|------------------------------------|---|--|
| 20 x 0,9 mm | 160 N.mm ⁻² | 23 500 |
| 27 x 0,9 mm | 180 N.mm ⁻² | 26 500 |
| 34 x 1,1 mm | 210 N.mm ⁻² | 30 500 |
| 41 x 1,3 mm | 240 N.mm ⁻² | 35 000 |
| 54 x 1,3 mm | 240 N.mm ⁻² | 35 000 |
| 54 x 1,6 mm | 280 N.mm ⁻² | 40 600 |
| 67 x 1,6 mm | 290 N.mm ⁻² | 42 000 |
| 80 x 1,6 mm | 300 N.mm ⁻² | 43 500 |


4.3.1. Saw band stretching

1. After installation of the saw band stretch it gently, so it does not fall off the wheels.



2. Mount the Tenzomat on the saw band and secure it with screws.
3. Stretch the saw band until it is stretched to the recommended value.

For a quick control of the tension of the band there is an indicator near the tightening star. If the indicator agrees with the picture below, the band is stretched correctly.

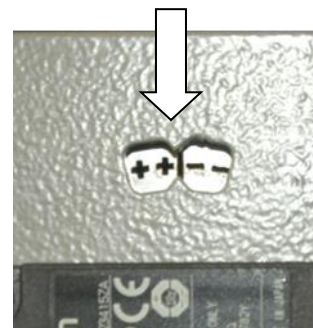


4.3.2. Saw band inspection

If the band does not run correctly, following problems can appear:

- The band falls down from the wheels – the band or the protective cover of the band can be damaged.
- The band runs on the rim of the stretching wheel – the band or the rim of the wheel can be damaged.

1. Switch on briefly the saw band drive and then switch it off
2. Disconnect the saw from the electrical network.
3. Open cover of the wheels and check the position of the saw band on the both wheels.

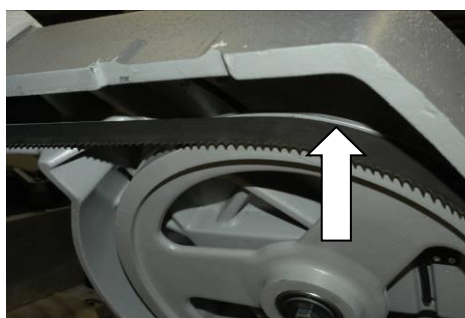


- If the distance between backside of the saw band and the wheel rim is **1 mm**, the setting is right.

- If the distance is bigger than **1 mm**, or the saw band runs on the rim of the wheel, adjust the saw band.
4. Close cover of the saw band.

4.4. Adjustment

4.4.1. Saw band run adjustment

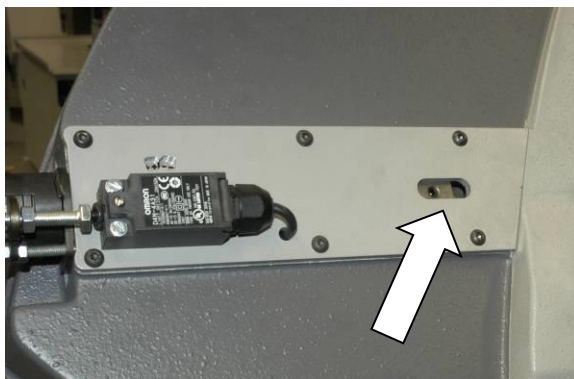


The saw band run is set with screw in the stretching cube on the saw frame. Optimal distance has been determined at **1mm**

- Turn the screw to the right, the saw band closes to the stretching wheel rim
- Turn by screw to the left, the saw band departs from the stretching wheel rim

After setting check the saw band run again.

4.4.2. Hard metal guides adjustment on the machine

Hard metal guides adjustment is one of the most important criterions which influence cutting accuracy and saw band lifespan. Therefore it is essential to check that the adjustment of the hard metal guides is correct

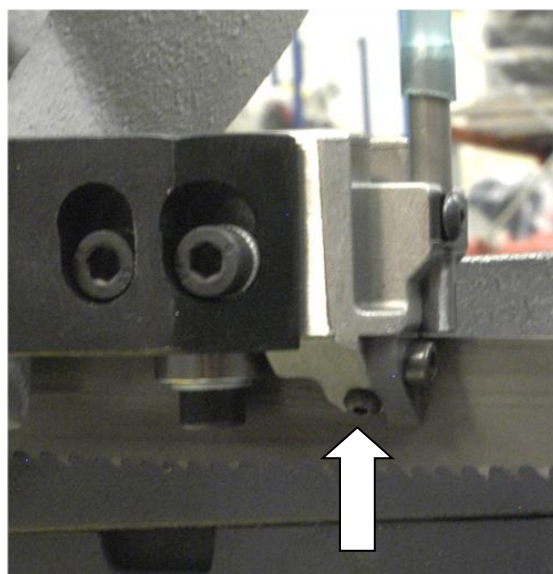


1. Tighten the screw on the side of guide cube so that the band is loosened
2. Loosen the screw slowly and let the hard metal plate touch the band. You must be able to turn the screw by hand. Set the hard metal guiding on the right cube in the same way.
3. **Make sure that the hard metal guides do not put up to much resistance otherwise the lifetime of the saw band and drive decreases.**

4.4.3. Guide cube adjustment

Cutting quality and saw band life is also dependent on guide cubes adjustment

Therefore this adjustment has to be checked periodically

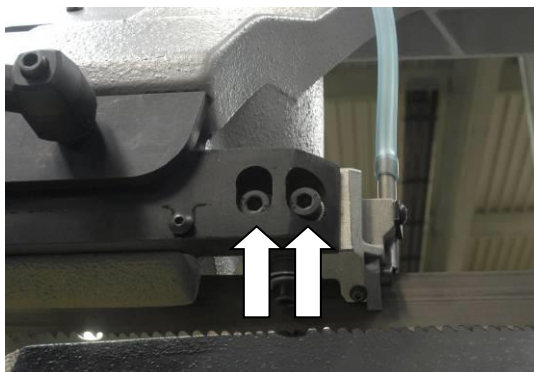


1. Loosen both mounting screws on the guide cubes and push it carefully to the band. Make sure the saw band is not bent; otherwise the cube will press against the band and damage it
2. Fasten both tightening screws again

Notice:


If the guide cube is correctly adjusted, the upper edge of the cube and the ruler are parallel.

4.4.4. Brush adjustment

The brush has essential influence on cutting performance, saw band lifetime, lifetime of the wheels and hard metal guides and cutting accuracy. Therefore the brush has to be checked every shift.

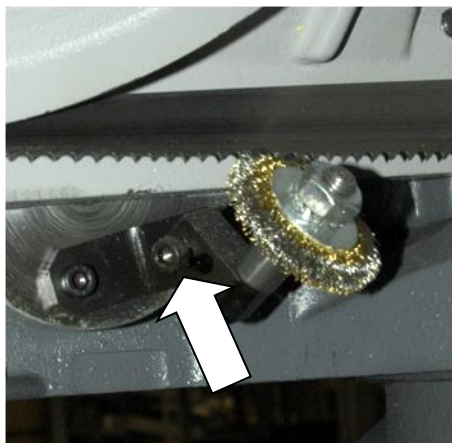

1. Release the tightening screw of the brush so that it is possible to move the brush.

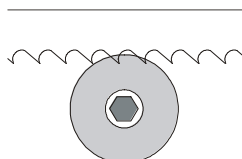

2. Adjust the brush to the saw band. **Its ends must not reach the saw band teeth bottoms.**

3. Tighten the screw again and turn on the band driver. If the chip removing brush is correctly fastened the brush turns smoothly with the saw band.

Attentionr!

Do not tighten the screw with brute force!

4.4.5. Adjusting the limit switch of the saw band stretching



After the saw band is replaced, the limit switch setting must be checked. If the limit switch is not set correctly, the band is stretched either too much or too little.



1. Stretch the band with help of the TENZOMAT to an optimal value (Tenzomat chart)
2. Release the nut on the stop screw
3. Start the band drive. Two scenarios may occur:
 - a) If the engine is switched on, but it does not run, turn the screw to the left until the engine starts to run
 - b) If the engine runs turn the screw to the right until it stops, then turn the screw shortly to the left until the engine starts running again
4. Lock the stop screw using locking nut and check the adjusting of the limit switch again

4.4.6. Saw frame lower position stop adjustment

The lower stop limits the lowest position of the saw frame. This stop has to be checked at least once a month. If the lower stop is adjusted incorrectly, the loading surface of the table can be cut too deeply or the material will not be cut completely

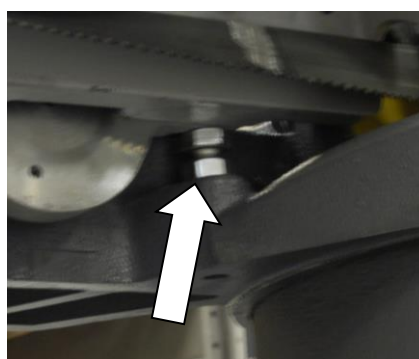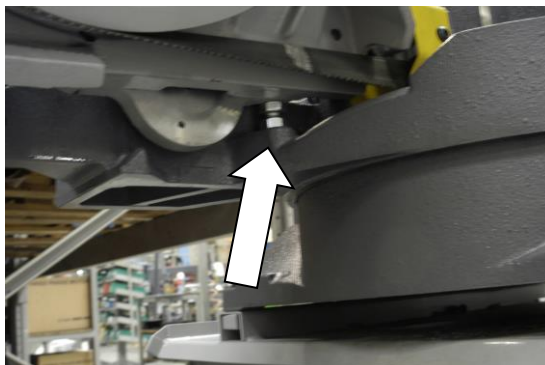

1. Raise the saw frame to the upper position
2. Release the nut of the adjusting screw and adjust the stop
3. Fasten the adjusting screw with the nut again
4. Set the limit switch of the lower arm position


4.4.7. Adjustment of the limit switch of saw frame lower stop

If you have adjusted the lower stop of the saw frame, the limit switch adjustment inspection is required

Setting check

Lower the arm to the lowest position. If the arm lays on the lower stop and the switch reacts, the setting is correct. In other case carry out the switch setting

Switch setting

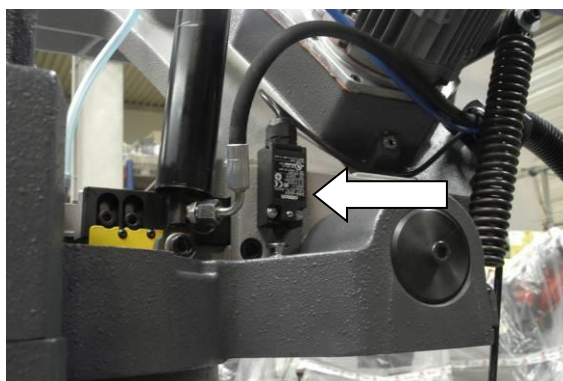

1. Release the nut of the stop screw and screw down the stop screw
2. Lower the arm to the lower stop and turn on the band driver
3. Screw out the stop screw until the band driver stops
4. Secure the screw with nut again and check the limit switch setting once more

4.5. Cooling agents and chip disposal

| The quality of the cooling agent will deteriorate due to: | If the solution is too weak: | If the solution is too strong: |
|--|--|--|
| <ul style="list-style-type: none"> • use of contaminated water • impurities • oil contamination from the outside (hydraulics, gears) • high operating temperatures • lack of air circulation • wrong concentration | <ul style="list-style-type: none"> • corrosion protection is diminished • lubrication decreases • microbial attack is more likely | <ul style="list-style-type: none"> • the cooling ability is decreased • foam production increases • emulsions stability deteriorates • sticky residue develops |

4.5.1. Coolant inspection

The state of the cooling agent has a significant influence on the cutting quality and on the lifespan of the machine. Lifetime of the cooling liquid is 1 year, after this time we recommend change the cooling liquid. This time is dependent on the degree of pollution of the cooling liquid (especially with oils) and on other factors.

Check level of the cooling liquid and function of the pump periodically!

Note:

If the state of the cooling liquid is not satisfactory, the cooling liquid must be replaced.

Check the state of the cooling agent according to the following table:

| Testing | Interval | Method | Condition | Precaution |
|----------------------|----------------|---------------------------------------|--|---|
| Liquid level | daily | visually | too low | check concentration, add water or emulsion |
| Concentration | daily | refractometer densimeter | too high too low | refill water refill base emulsion |
| Smell | daily | by sense of smell | unpleasant smell | good ventilation, add biocides or replace coolant |
| Contamination | daily | by sense of smell | visible oil leaks, sludge fungi | surface cleaning, fix leaks, add biocides or fungicides; clean the system with a cleanser* prior to the coolant replacement |
| Corrosion-protection | when necessary | visually chip test Herbert-test | insufficient corrosion protection | test stability, if necessary – increase concentration or pH value |
| Stability | when necessary | refractometer | oiling | add concentrate, enquire the supplier |
| Foam reaction | when necessary | shaking test | too much foam, foam disperses too slowly | avoid aeration, increase water hardness, fix with defomer |

* According to manufacturer's instructions

4.5.2. Cooling liquid preparation

Prepare a mixture of water and cooling liquid. Conform the notes of the manufacturer and keep the manufacturer's-approved concentration

All instructions are stated on the tank of the cooling liquid or in documentation of the cooling liquid. For cooling liquid usage and disposal heed the instructions of the manufacturer.

Fill the mixture of water and cooling liquid to the tank of the cooling system

When filling the tank with the cooling liquid take care that the liquid will not drip out of the tank and the tank does not overflow

Keep to the manufacturer specified recommendations for adding the anticorrosive agents, the antifreeze or other agents! Mixing two chemicals can produce toxic and aggressive substances, which can damage your health or the cooling system of the machine

Note: If the machine is equipped with Microniser (see. **Special accessory**), fill the tank of the Microniser with specified cooling liquid. Then the microniser is ready for the operation

The quality of the cooling agent will deteriorate due to:

- use of contaminated water
- impurities
- outside oil contamination (hydraulics, gears)
- high operating temperatures
- lack of air circulation
- wrong concentration

If the solution is too weak:

- corrosion protection is diminished
- lubrication decreases
- microbial attack is more likely

If the solution is too strong:

- the cooling ability is decreased
- foam behavior increases
- emulsions stability deteriorates
- sticky residue develops

4.5.3. Chips disposal

Chips resulting from cutting operations must be disposed of in accordance with the relevant regulations.

- Let the chips drip excess fluid!
- Put the chips into a watertight container. Make sure that the container does not leak, because even after a long dripping time, the chips still contain coolant residues.
- *Place the container into the care of a disposal company equipped for the disposal of chips contaminated with cooling liquid.* In case the machine is equipped with micronisation device, the chips must also be handed over to a disposal company.

4.6. Gearbox oils and greases

4.6.1. Gearbox oils

In gearboxes, oil is used for the whole lifetime of the gearbox. We recommend replacing of the filling oil in case of repair.

Use oils with DIN 51517 specification for the gearboxes. Select the ISO VG viscosity class according to the original oil.

Attention:

When replacing the oil, use oils recommended by BOMAR or oils from other manufacturers, which have comparable parameters. Do not forget, that mineral and synthetic oils must not be mixed!

Recommended oils and quantity according to the type of the band saw

| Band saw | Gearbox oil | Capacity |
|----------------------|--------------------|----------|
| Ergonomic 320.258 DG | Paramo PP7 | 2,0 l |
| Swarf conveyor | Shell Tivela S 320 | 0,075 l |

Comparative table of the gearbox oils

| Manufacturer | Viscosity grade | | |
|--------------|------------------------------|--|---------------------------------------|
| | ISO VG 100 | ISO VG 220 | ISO VG 320 |
| BP | Energol GR-XP 100 | Energol GR-XP 220 | Energol GR-XP 320 |
| Castrol | Alpha SP 100 Alpha MW 100 | Alpha SP 220 Alpha MW 220 | |
| Elf | Reductelf SP 100 | Reductelf SP 220 Reductelf Synthese 220 | Reductelf SP 320 |
| Esso | Spartan EP 100 | Spartan EP 220 | Spartan EP 320 |
| Mobil | Mobilgear 627 | Mobilgear SHC 220 Mobilgear 630 | Mobilgear 632 |
| ÖMV | | PG 220 | |
| Paramo | PP 7 | Paramo CLP 220 | Paramo CLP 320 |
| Shell | Shell Omala 100 | Shell Omala 220 Shell Tivela S 220 | Shell Omala 320 Shell Tivela S 320 |
| Total | Carter EP 100 | Carter EP 220 | Carter EP 320 |

4.6.2. Lubrication greases


For lubrication we recommend using lithium based class NGLI-2 saponified grease. Different greases are mixable, if their oil bases and density classes are identical.

Comparative table of the lubricant greases:

| Manufacturer | Type of the lubricant grease |
|----------------|---------------------------------|
| BP | Energrease LS - EP |
| DEA | Paragon EP1 |
| Esso | FETT EGL 3144 |
| | Beacon EP 1 |
| | Beacon EP 2 |
| FINA | FINA LICAL M12 |
| Klüber | Microlube GB0 |
| | Staburags NBU8EP |
| | Isoflex Spezial |
| Optimol | Optimol Longtime PD 0, PD1, PD2 |
| Shell Aseol AG | ASEOL Litea EP 806-077 |
| Texaco | Multifak EP1 |

4.6.3. Lubrication

There are several assemblies on the machine, that have to be lubricated to ensure the correct function of the machine.

| Place for lubrication | Description |
|---|--|
|  | <p>The upper pivot of the lifting cylinder – drip oil once a week.</p> |

4.6.4. Hydraulic oils

Replace the hydraulic oil once every 2 years, because the oil properties can deteriorate and cause problems with the hydraulic equipment. If the hydraulic system is equipped with filter (2SF 56/48-0,063), replace the filter too.

Use oils with specification DIN 51524-HLP, ISO 6743-4 and viscosity class ISO VG 32 in hydraulic aggregates. Hydraulic oils quantity – see chapter Hydraulic oil level check.

Note:

When replacing the oil, use oils recommended by BOMAR or oils, from other manufacturers which have comparable parameters. Do not forget, that mineral and synthetic oils must not be mixed!

Comparative table of the hydraulic oils:

| Manufacturer | Type | Manufacturer | Type |
|--------------|-----------------|--------------|-----------------|
| Agip | Oso 32 | Ina | Hidraol 32 HD |
| Aral | Vitam GF 32 | Klüber | Lamora HLP 32 |
| Avia | Avilub RSL 32 | Hungary | Hidrokomol P 32 |
| Benzina | OH-HM 32 | Mobil | Mobil DTE 25 |
| BP | Energol HLP 32 | ÖMV | HLP 32 |
| Bulgaria | MX-M/32 | Poland | Hydrol 30 |
| Castrol | Hyspin AWS 32 | Rumania | H 32 EP |
| Čepro | Mogul HM 32 | Russia | IGP 30 |
| DEA | Astron HLP 4hy6 | Shell | Tellus Oil 32 |
| Elf | Elfolna 32 | Sun | Sunvis 846 WR |
| Esso | Nuto H 32 | Texaco | Rando HD B 32 |
| Fam | HD 5040 | Valvoline | Ultramax AW 32 |
| Fina | Hydran 32 | | |

4.7. Machine cleaning

Clean the machine off cooling agent and impurities after every shift. Conserve the guiding surfaces, mainly.

- Guiding of the clamping jaws of the main and feeder vice.
- Guiding of the feeder.
- The loading surface of the main and feeder vice
- Thread rod of the main and feeder vice

4.8. Worn pieces replacement


4.8.1. Hard metal guides replacement

If the hard metal guides cannot be adjusted, they have to be replaced.

1. Remove the cooling agent hosepipe and dismantle the saw band and saw band guiding cube.
2. Fasten the guiding cube in a vice.



3. Loosen the mounting screws using a hex key

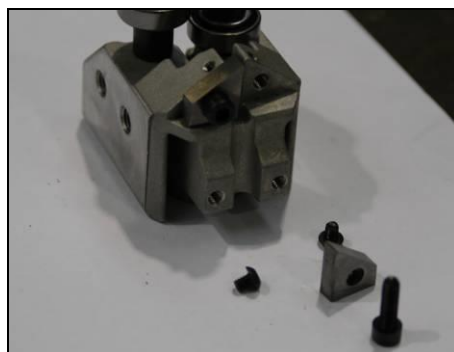

4. Unscrew the frontal screws, which hold the hard metal guides.
5. Now insert new hard metal guides and fasten them tightly and mount the guiding cube to the guiding lath.
6. Install the saw band and adjust guiding cube and hard metal guides.

Attention:

The vice has to have aluminium jaws or an aluminium insert to protect the pivot from damage.

4.8.2. Saw band guiding rollers replacement

If the saw band is not sufficiently guided by guiding rollers and/or if the rollers are visibly worn, they should be replaced.

Attention! Guiding rollers must be replaced together on both guide cubes!

1. Remove the cooling agent hosepipe and dismantle the saw band and guiding cube.



2. Grip the guide cube in a vice and screw out both fastening screws of the eccentrics.



3. Pull both guiding rollers from the eccentrics.



4. Put new guiding rollers on the eccentrics and mount the eccentrics to the guide cube.



5. Now insert a test piece of saw band (cca 15 - 20 cm) into the guide cube. Adjust both eccentrics so that the band runs in the middle of the milled groove. This groove is located between both eccentrics. Guide rollers may not press too much against the band but spin freely.


Optimal distance between the band and guiding roller is 0,05 mm.



6. Adjust the hard metal guides accordingly for the band to be able to move freely between them. Tighten the frontal screws of the hard metal guides, then tighten the mounting screws.
7. Now it is necessary to tighten the screws band guiding rollers.
8. Install the cube on the lath. Install the saw band and adjust the guiding cubes.

4.8.3. Worn brush replacement

If the chip removing brush is so worn, that it does not fulfill its function, it must be replaced.

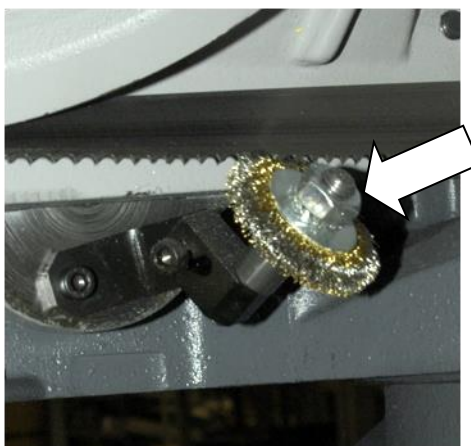

1. Release the nut of the brush, exchange the worn brush for a new one and screw the nut.
2. Set the brush to the saw band.

4.8.4. Stretching wheel replacement

1. Dismantle the saw band.



2. Screw off the stretching wheel screw and remove the washer.
3. Screw the auxiliary screw onto the shaft of the stretching wheel.



4. Put on the three-leg puller on the stretching wheel and pull off it from the shaft.



5. If the lower bearing stays on the shaft, pull of it from the shaft with a two-leg puller. Check both bearings; eventually replace them for new ones.



6. Insert the retaining ring into the hole of the new stretching wheel.

7. Insert a bearing into the hole in the wheel and push it to the retaining ring.



8. Clean the shaft and oil it. Install the new stretching wheel on the shaft.



9. Install the distance ring on the shaft and push it to the lower bearing.



10. Install second bearing on the shaft and push it to the distance ring.



11. Install the washer and screw on the stretching wheel.
12. Install the saw band. Wheel replacement is done.

4.8.5. Driving wheel replacement

1. Dismantle the saw band.



2. Screw of the fastening screw of the driving wheel and pull off the washer.
3. Screw on the auxiliary screw to the driving shaft.




4. Install the three-leg puller on the driving wheel and pull off it from the shaft.



5. Check, if the spring and the driving shaft are not damaged. Contact your supplier for parts replacement.



6. If the shaft and the feather are in good order, clean them, oil them and install them on the driving shaft.

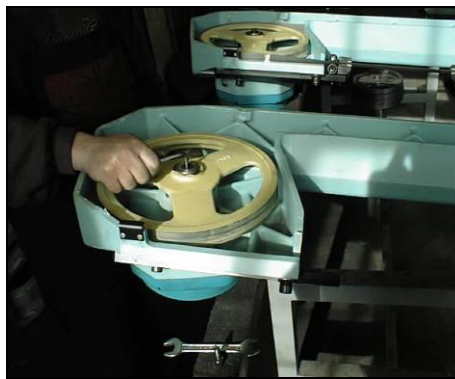


7. Install the washer and screw on the driving wheel.
8. Install the saw band.

4.8.6. Cooling pump replacement



Warning!

**Only a qualified technician can perform the installation!
Electrical accidents can be fatal!**


1. Disconnect the machine from electrical network.
2. Pull out the tank from the pedestal as far as possible.

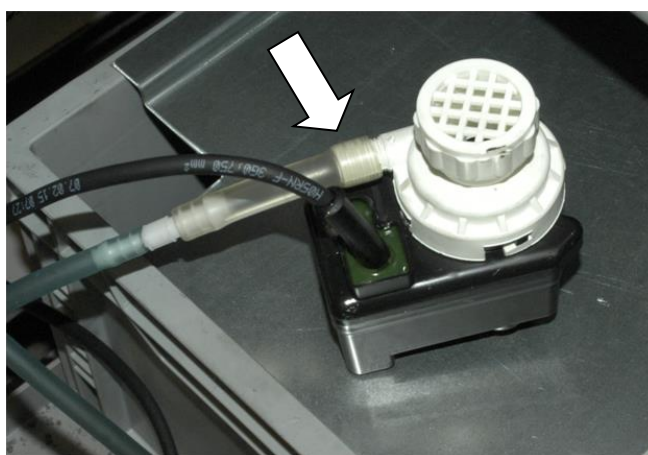

3. Pull out the cooling pump from the tank and disconnect the hose for the coolant distribution from the pump.

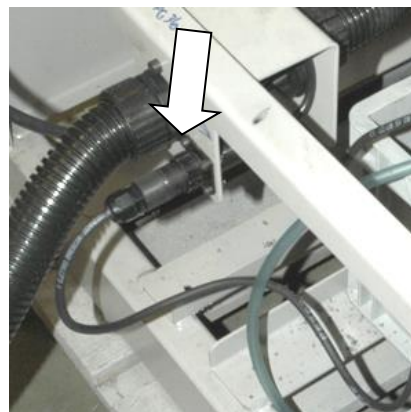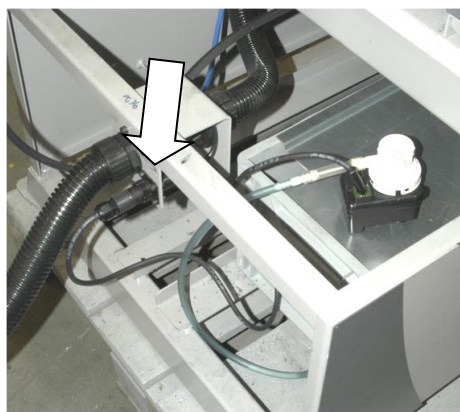

4. Disconnect the supply cable of the pump from the connector.

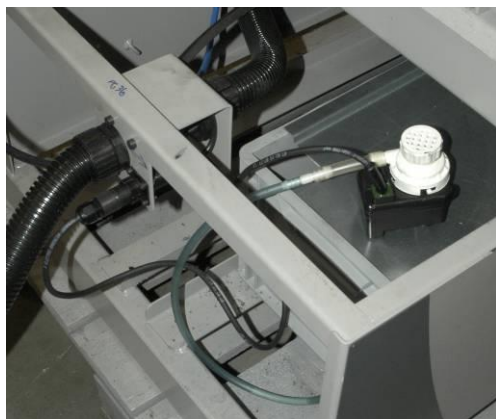

5. Complete the replacement by following these steps in reversed order.

5. **Závady / Störungen / Troubleshooting**

5.1. Mechanical problems

| Problem | Possible causes | Repair |
|--|--|---|
| 1. Slanting cut | - Wrongly adjusted hard metal guides. | Set according to the chapter „Servicing and adjustment“ |
| | - Worn hard metal guides. | Replace according to the chapter „Worn pieces replacement“ |
| | - Wrongly adjusted cubes of the saw band guiding. | Set according to the chapter „Servicing and adjustment“ |
| | - Worn bearings of the saw band guiding. | Replace according to the chapter „Worn pieces replacement“ |
| | - Wrongly adjusted swarf brush. | Set according to the chapter „Servicing and adjustment“ |
| | - Worn swarf brush. | Replace according to the chapter „Worn pieces replacement“ |
| | - Insufficient saw band stretching. | Increase the saw band stretching and set the limit switch. |
| | - Wrongly chosen tooth system of the saw band. | Replace the saw band; follow the instructions of the manufacturer for new saw band choice. |
| | - Worn saw band. | Replace the saw band. |
| | - Wrongly balanced roller conveyor. | Adjust the roller conveyor. |
| | - Dirty feeding board. | Cleanse the feeding board from debris, chip and residue material. |
| | - Guiding rail and guiding cube are loosened. | Tighten the guiding rail. |
| | - Guiding rail and cube are too far from the material. | Set the guiding cube to the material. |
| | - Too fast rate of movement into the cut. | Lower the material speed of descent of the arm. |
| 2. The cut is not cut upon desired angle | - Unexpected oscillation in material quality. | Adjust the cutting parameters and feeding speed according to the material. |
| | - Securing lever is loosened. | Check the securing lever efficiency and carry out its adjustment according to chapter „Servicing and adjustment“. |
| | - Set angle does not match the cutting angle. | Check the angle adjustment with a protractor and if need be adjust it according to chapter „Servicing and adjustment“. |
| | - Insufficient saw band stretching. | Stretch the saw band and set the limit switch according to chapter „Servicing and adjustment“. |
| | - Guiding cube holder and guiding cube are loosened. | Fasten the guiding holder and the cube. |
| 3. Short lifetime of the saw band | - Dirt between material and clamping jaw. | Cleanse the material and mating jaw. |
| | - Insufficient saw band stretching. | Increase the tightening of the saw band and set the sensor of saw band tightening according to chapter „Servicing and adjustment“. |
| | - Worn swarf brush. | Check the swarf brush condition and replace it in case of excessive wear as described in chapter „Worn pieces replacement“ |
| | - Wrongly adjusted swarf brush. | Check swarf brush adjustment, set it according to chapter „Servicing and adjustment“ |
| | - Over stretched saw band | Lower the stretching of the saw band and set the limit switch of the saw band stretching according to chapter „Servicing and adjustment“ |
| | - Wrongly adjusted hard metal guides. | Check the adjustment of the hard metal guides and carry out adjustment as described in chapter „Servicing and adjustment“ |
| | - Worn hard metal guides of the saw band. | Check the condition of the hard metal guides and if they are too worn, replace hard metal guides according to chapter „Worn pieces replacement“ |

| Problem | Possible causes | Repair |
|--|--|---|
| | - Worn saw band guide bearings. | Check the guiding bearings and if you notice any excessive damage, replace them according to chapter „Worn pieces replacement“ |
| | - Wrongly adjusted guiding cubes of the saw band. | Set the guiding cube according to chapter „Servicing and adjustment“ |
| | - Wrongly adjusted speed of descent of the arm and saw band speed. | Adjust the descending speed and speed of the saw band according to values published by the saw band manufacturer. |
| | - Different material quality. | Adjust the speed of descent and speed of the saw band according to desired material (perform a test cut). |
| | - Low quality saw band | Replace the saw band (contact your local accessory supplier for more information) |
| | - Wrongly chosen saw band tooth system. | Replace the saw band, keep to the instructions of the manufacturer. |
| | - Wrongly adjusted run of the saw band. | Check the space between the top of the saw band and driving wheel. Adjust the tracking as described in chapter „Servicing and adjustment“ if need be. |
| 4. Insufficient cut output. | - Worn saw band. | Replace the saw band, keep to the instructions of the manufacturer. |
| | - Wrong saw band tooth system. | Replace the saw band, keep to the instructions of the manufacturer. |
| | - Wrongly adjusted speed of descent of the arm and saw band speed.. | Adjust the descending speed and speed of the saw band according to values published by the saw band manufacturer |
| 5. The cut is not finished. | - Wrongly adjusted lower stop point of the saw frame. | Check lower limit switch and screw. |
| | - Stop point surface is messy. | Cleanse the stop point surface of the limit switch from debris and residue material. |
| 6. Regulation valve cannot be turned | - Metal chips between the valve and the panel. | Chips must be removed, then put an O-Ring of about 10x2 mm onto the shaft. |
| | - There are metal chips inside the valve. | Valve must be cleaned or changed. |
| 7. Saw band drive cannot be started. | - Pressure switch is wrongly adjusted. | Set the pressure switch according to chapter „Servicing and adjustment“ |
| | - Pressure switch is defective. | Replace defective parts of the pressure switch. |
| 8. Saw bands tend to rupture. | - Saw band run not adjusted properly | Adjust the distance of band from the rim according to operating instructions. |
| | - Wrongly adjusted band guiding (hard metal and bearings). | Hard metal pieces and bearings must be adjusted according to „Servicing and adjustment“. |
| | - Looseness in the lifting cylinder mounting. | |
| | - Bearings of guiding cubes are worn out (rolling elements are damaged or outside ring of bearing has conical form). | Bearings of guiding cubes must be replaced. Bearings must be adjusted according to operating instructions. |
| 9. Damage tooth system of the saw band | - Worn out pin of the upper or bottom holder of the lifting cylinder. | Exchange the upper or bottom holder of the lifting cylinder. |
| | - Geometry of hard metal guiding cubes is wrongly adjusted. | Hard metal guiding cubes must be adjusted. |
| | - Bearings of guiding cubes are worn out. | Bearings of guiding cubes must be replaced. |
| 10. The saw is cut downing. | - Grooving on the driving wheel is worn-out. | Driving wheel must be replaced. |
| 11. Cleansing of the saw band is not functional. | - Elastic wheel of the brush drive is worn-out. | Elastic wheel of the brush must be replaced. |
| | - The shaft of the brush drive is rusted. | The shaft of the brush must be cleaned and oiled. |

| Problem | Possible causes | Repair |
|--|---|---|
| | - The brush position and the brush cover is adjusted incorrectly – the cover prevents the brush from turning. | The brush cover must be repositioned, in order for the brush to be able to turn. |
| 12. The saw arm periodically rises and descends a few millimeters during the cut; this shortens the lifetime of the saw band considerably. | - Backlash in driving wheel mounting on the shaft. - Worn channel for spring. | Replace following parts: the driving shaft for a longer one, bearings, distance ring, driving wheel, spring, two covers on the forehead of the shaft + screws. |

5.2. Electrical problems

| Problem | Possible causes | Repair |
|--|---|--|
| 1. Machine is not possible to start. | - No voltage in the socket - Overload relay is defective (thermal protection) - Limit switch of either saw band stretching, band cover or saw arm is not closed | Line voltage must be checked. Each FA overload relay's condition (on/off) must be checked. Check the saw band stretching and covers. |
| 2. When the cut is finished, the frame is not raised. | - Bottom limit switch is adjusted wrongly. - A malfunction in the hydraulic (pneumatic) system. The HYTOS (BOSCH) magnetic valve is not working. | Bottom limit switch must be adjusted according to chapter ADJUSTING. Function of magnetic valve must be checked, valve must be switched on, and voltage across its terminals and coil must be checked. |
| 3. Electric motor and pump are without voltage. There is no voltage between the contactor and thermal protection | - Wrong contactor. | Replace the contactor of the engine. |
| 4. The speed indicator of the saw band is not functional. | - Sensor of speed is not adjusted. - Defective display - Defective sensor – diode of indicator speed does not light. | Sensor of speed must be adjusted. The display must be replaced. Sensor must be changed and adjusted. |
| 5. Occasional switching off of the hydraulic aggregate MA3 engine protection | - Too big working pressure in the hydraulic system. | Service engineer must reduce the pressure in hydraulic system. |
| 6. The hydraulic aggregate cannot be started | Auxiliary contact on thermo-relay FA1 is defective. | Replace the defective contact on the motor FA1 starter. |
| 7. Hydraulic aggregate is switched on but the saw arm or the main vice can't be moved | - Wrong connection of electrical supply. The electrical phases are connected conversely. | The phases must be switched. Only service engineer is allowed to do this. |
| 8. Cooling is not active | - Lack of cooling agent. - Thermal relay is defective - Input hosepipe is broken or obstructed. - Cooling pump protection is defective | Refill the tank with cooling agent. Replace the thermal relay Check the cooling circuit and eventually cleanse the cooling system. Check the protection of the cooling pump and change it if need be. |

| Problem | Possible causes | Repair |
|---------|------------------------------|---------------------------|
| | - Cooling pump is defective. | Replace the cooling pump. |

5.2.1. Hydraulic problems

| Problem | Possible causes | Repair |
|---|---|---|
| 1. Hydro generator is not supplying oil | • Reversed rotation | Check the correct connection of each phase. Reconnect the electrical phases properly. |
| | • Shortage of oil in the tank | Add hydraulic oil |
| | • Oil viscosity does not correspond to the prescribed viscosity value | Change hydraulic oil. |
| | • Hydro generator malfunction | Call service |
| | • Wrong power supply connection. | Check the correct connection of each phase. Reconnect the electrical phases properly. |
| 2. Hydraulic oil contains bubbles | • Hydraulic circuit is not adequately bled | Bleed the hydraulic circuit. |
| | • Low level of oil | Add hydraulic oil |
| | • The hydro generator gasket is damaged | Call service |
| 3. Increased mechanical noise | • Damaged clutch of the drive | Call service |
| | • Damaged or destroyed motor bearings | Call service |
| | • Air intake | Check for leaks. |
| 4. Low pressure, pump supplies oil | • Failure on the safety valve | Wrong settings. Check the settings and adjust the safety valve. |
| | • Wear of the hydro generator | Call service |
| | • External or internal leakages | Call service |
| 5. Hydro generator is seized | • Damage by solid particles in oil | Perform oil filtration or call the service. |
| | • Non-prescribed viscosity oil | Change hydraulic oil. |
| | • Wrong type of oil | Change hydraulic oil. |
| | • Exceeded lifespan of the pump | Call service |
| 6. Overheating oil | • Cooler malfunction | Check the cooler function or call service. |
| | • Wear of the pump, energy is converted into heat | Call service |
| 7. Hydraulic valve cannot be readjusted | • Electromagnet has no signal (voltage) - interrupted supply lines | Perform recheck. |
| | • Electromagnet coil burnt | Replace coil – Call service. |

- | | | |
|--|--|-------------------------------|
| | • the slider of the switchboard slackens | Replace slider – Call service |
|--|--|-------------------------------|

Note:**Frequency converter**

Connect the machine to electrical networks with corresponding technical parameters only.

We recommend protecting the machine with RCD protection with U characteristics, which is able to compensate changes of current escaping from the filter of the frequency converter, so that additional equipments will not be required. We don't recommend protecting the machine with a standard protection for currents smaller than 100 mA (the standard used is 30 mA) because of current escape in accordance to frequency converters used by machine. Alternative solution should be a current protection (FI) with sensitivity of 100 mA.

6. **Schémata / Schemas / Schematics**

6.1. Elektrická schémata / Elektroschemas / Wiring diagrams 3x400 V + PE, 50Hz

| | | | | | | | | | |
|--|---|--|---|--|---|--|---|---|---|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| <div>  <div> <p>Bomar, spol. s r.o. Těžební 1236/1 627 00 Brno Czech republic</p> </div> </div> <div> <h1>Ergonomic 320.258 G-DG-DGS</h1> <h2>ES-ER10F-201/202-V3.0</h2> <h3>Wiring diagram</h3> <h4>3x400V + PE, 50 Hz</h4> </div> | | | | | | | | | |
|  <p>BOMAR, s.r.o. Těžební 1236/1 CZ 627 00, Brno</p> | | <p>Společnost/Name: Ergonomic 320.258 G-DG-DGS</p> | | <p>Název stránky/Name page/Name sheet: Úvodní strana / Start page / Startseite</p> | | <p>Číslo dok./Doc.No./Anzahl der Dokumenten.: Napájení/Power supply/Einspeisung: Zpracování/Processing/Her verarbeit.: Datum/Date/Datum:</p> | | <p>ES-ER10F-201/202-V3.0 3x400V + PE, 50 Hz Koslin 9.3.2016</p> | |
| | | | | | | | | <p>Link/Page/ Seite: 1 Link/Page/ Seite: 12</p> | |



Obsah / Table of contents / Inhalt

| Strana Page Seite | Název strany Page name Seitenname | Datum Date Datum |
|-------------------------|--|------------------------|
| 1 | Úvodní strana / Start page / Startseite | 9.3.2016 |
| 2 | Obsah / Table of contents / Inhaltsverzeichnis | 9.3.2016 |
| 3 | Kusovník artiklů / Parts list / Artikelstückliste | 9.3.2016 |
| 3.a | Kusovník artiklů / Parts list / Artikelstückliste | 9.3.2016 |
| 3.b | Kusovník artiklů / Parts list / Artikelstückliste | 9.3.2016 |
| 3.c | Kusovník artiklů / Parts list / Artikelstückliste | 9.3.2016 |
| 4 | Rozmístění prvků v rozvaděči R1 / Placement of elements in enclosure R1 | 9.3.2016 |
| 5 | Rozmístění prvků v ovládacím panelu OP1 / Deployment of elements in control panel OP 1 | 9.3.2016 |
| 6 | Silová část / Power part / Feld partie | 9.3.2016 |
| 7 | Ovládací část / Control part / Betätigungsteurkreis | 9.3.2016 |
| 8 | Bezpečnostní okruh / Safety circle / Sicherheitsbereich | 9.3.2016 |
| 9 | Příslušenství / Accessories / Zubehör | 9.3.2016 |

Kusovník artiklů / Parts list / Stückliste

| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednávací číslo Type number Typennummer | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | Množství Quantity Menge | Umístění Location Stelle |
|---|---|---|---------------------------------------|--|-------------------------------|--------------------------------|
| -BM1 | Bezpečnostní relé 24VDC, 3NO Safety relay 24VDC, 3NO Sicherheitsrelais 24VDC, 3NO | BT50 | ABB | 91.051.063 | 1 | /8.6 |
| -FU1 | Pojistka trubičková - 2A/250V, pomalá, 5x20 Tube fuse - 2A/250V, slow, 5x20 Rohrsicherung - 2A / 250V, langsam, 5x20 | TZA/250V | ESKA | 91.230.001 | 1 | /6.5 |
| -FU2 | Pojistka trubičková - 2A/250V, pomalá, 5x20 Tube fuse - 2A/250V, slow, 5x20 Rohrsicherung - 2A / 250V, langsam, 5x20 | TZA/250V | ESKA | 91.230.001 | 1 | /6.5 |
| -FU3 | Pojistka trubičková - 2A/250V, pomalá, 5x20 Tube fuse - 2A/250V, slow, 5x20 Rohrsicherung - 2A / 250V, langsam, 5x20 | TZA/250V | ESKA | 91.230.001 | 1 | /6.8 |
| -M1 | Asynchronní motor 1.5kW, 4P, 3x230/400V Asynchronous motor 1.5kW, 4P, 3x230/400V Asynchronmotor 1.5kW, 4P, 3x230/400V | TM2 90 4L B14-C140 | EmP s.r.o. | 91.001.217 | 1 | /6.2 |
| -SN1 | Hlavice potenciometru - 24mm Head of potentiometer 24mm Leiter Potentiometer 24mm | S8877 BLK | GES-ELECTRONICS, a.s. | 91.060.063 | 1 | /7.8 |
| -RCF11 | Filtr RFC vývodový Effluent RFC filter Ableitenden RFC Filter | FBOPR1624 | Ing. Miroslav Viček | 91.041.015 | 1 | /6.1 |
| -RCF12 | Filtr RFC vývodový Effluent RFC filter Ableitenden RFC Filter | FBOPR1624 | Ing. Miroslav Viček | 91.041.015 | 1 | /6.1 |
| -FU1 | Sworka pojistková Fuse terminal Sicherungsklemme | WK4/THS15U | WIELAND | 91.251.102 | 1 | /6.5 |
| -FU2 | Sworka pojistková Fuse terminal Sicherungsklemme | WK4/THS15U | WIELAND | 91.251.102 | 1 | /6.5 |
| -FU3 | Sworka pojistková Fuse terminal Sicherungsklemme | WK4/THS15U | WIELAND | 91.251.102 | 1 | /6.8 |
| -FU4 | Sworka pojistková Fuse terminal Sicherungsklemme | WK4/THS15U | WIELAND | 91.251.102 | 1 | /6.4 |

The manufacturer reserves right to use an equivalent replacement device.

2

| | | | | |
|---|--|---|---|-------------------------------------|
|  BOMAR, s.r.o. Těžební 1236/1 CZ 627 00, Brno | Stroj/Machine/Maschine: Ergonomic 320.258 G-DG-DGS | Název stránky/Name page/Name sheet: Kusovník artiklů / Parts list / Artikelstückliste | Číslo dok./Doc.No./Anzahl der Dokumente.: ES-EX10F-201/202-V3.0 Napájení/Power supply/Einspeisung: 3x400V + PE, 50 Hz Zpracování/Processed/Hat. verarbeitet: Kostka Datum/Date/Datum: 9.3.2016 | Lič/Page/ Seit.: 3 3 12 |
|---|--|---|---|-------------------------------------|



Kusovník artiklů / Parts list / Stückliste

| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednávací číslo Type number Typennummer | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | Množství Quantity Menge | Umístění Location Stelle |
|---|--|---|---------------------------------------|--|-------------------------------|--------------------------------|
| -FU4 | Pojistka trubičková - 700mA/250V, pomalá, 5x20 Tube fuse - 700mA/250V, slow, 5x20 Rohrsicherung - 700mA / 250V, langsam, 5x20 | T700mA/250V | ESKA | 91.230.069 | 1 | /6.4 |
| -FU5 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THS5U | WIELAND | 91.251.102 | 1 | /6.5 |
| -FU5 | Pojistka trubičková - 700mA/250V, pomalá, 5x20 Tube fuse - 700mA/250V, slow, 5x20 Rohrsicherung - 700mA / 250V, langsam, 5x20 | T700mA/250V | ESKA | 91.230.069 | 1 | /6.5 |
| -KM11 | Ministrykač - 4kW/400V, 3P Mini contactor - 4kW/400V, 3P Mini-Schütz - 4kW / 400V, 3P | B6S-30-01-1.7-71 | ABB | 91.040.049 | 1 | /8.8 |
| -KM11 | Pomocné kontakty - 1xNO+1xNC Auxiliary contacts - 1xNO+1xNC Hilfskontakte - 1xNO+1xNC | CAF 6-11M | ABB | 91.041.042 | 1 | /8.8 |
| -KM12 | Ministrykač - 4kW/400V, 3P Mini contactor - 4kW/400V, 3P Mini-Schütz - 4kW / 400V, 3P | B6S-30-01-1.7-71 | ABB | 91.040.049 | 1 | /8.9 |
| -KM12 | Pomocné kontakty - 1xNO+1xNC Auxiliary contacts - 1xNO+1xNC Hilfskontakte - 1xNO+1xNC | CAF 6-11M | ABB | 91.041.042 | 1 | /8.9 |
| -PA1 | Pojistkový odpínač pro válcové vložky - 3P Switch fuse for the cylinder inserts - 3P Schalter Sicherung für den Zylinderinserte - 3P | E 93/32 | ABB | 91.241.014 | 1 | /6.2 |
| -QS1 | Rukojeť odpínače 48x48mm - černá Handle switch 48x48mm - black Griffschalter 48x48mm - Schwarz | OHBS3PH | ABB | 91.180.018 | 1 | /6.1 |
| -QS1 | Kryt svorek Terminal shroud Klemmenabdeckung | OTS40T3 | ABB | 91.170.017 | 1 | /6.1 |
| -RE1 | Patice pro relé Relay socket Relaissockel | CR-PSS | ABB | 91.051.048 | 1 | /7.5 |
| -RE1 | Patcové relé CR-P Plug-in relay CR-P Stecken Sie in Relais CR-P | CR-P024DC2 | ABB | 91.051.049 | 1 | /7.5 |

The manufacturer reserves right to use an equivalent replacement device.



BOMAR, s.r.o.
Těžební 1236/1
CZ 627 00, Brno

Stroj/Machine/Machine:
Ergonomic 320.258 G-DG-DGS

Název artiklu/Name page/Name set:
Kusovník artiklů / Parts list / Artikelstückliste

Číslo esk./Doc.No./Anzahl der Dokumente.: ES-ER10F-201/202-V3.0
Napájení/Power supply/Einspeisung.: 3x400V + PE, 50 Hz
Zpracování/Processed/Hat. verarbeitet.: Korka
Datum/Data/Datum.: 9.3.2016

Lič/Page/
Seit.: 3.a
Lič/Page/
Seit.: 12

Kusovník artiklů / Parts list / Stückliste

| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednáací číslo Type number Typennummer | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | Množství Quantity Menge | Umístění Location Stelle |
|---|---|--|---------------------------------------|--|-------------------------------|--------------------------------|
| -RE2 | Patice pro relé Relay socket Relaissockel | CR-P55 | ABB | 91.051.048 | 1 | /7.8 |
| -RE2 | Patčové relé CR-P Plug-in relay CR-P Stecken Sie in Relais CR-P | CR-P024DC2 | ABB | 91.051.049 | 1 | /7.8 |
| -SA1/1 | Kontaktní blok - 1NO Contact block - 1NO Kontaktblock - 1NO | M22-K10 | EATON | 91.061.022 | 1 | /7.3 |
| -SA1/1 | Kontaktní blok - 1NC Contact block - 1NC Kontaktblock - 1NC | M22-K01 | EATON | 91.061.024 | 1 | /7.6 |
| -SA1/2 | Hlavice s otočným přepínačem - 4 polohy Head with rotary switch - 4 positions Kopf mit Drehschalter - 4 Positionen | M22 - WRK4 | EATON | 91.060.087 | 1 | /7.5 |
| -SA1/2 | Upevňovací adaptér Mounting adapter Montageadapter | M22-A4 | EATON | 91.061.045 | 1 | /7.5 |
| -SA1/2 | Kontaktní blok - 1NO Contact block - 1NO Kontaktblock - 1NO | M22-K10 | EATON | 91.061.022 | 1 | /7.5 |
| -SA1/3 | Kontaktní blok - 1NO Contact block - 1NO Kontaktblock - 1NO | M22-K10 | EATON | 91.061.022 | 1 | /7.6 |
| -SB1 | Total stop - hlavice + 3xNC Emergency-stop mushroom push - button + 3xNC Not-Aus-Platz - Taster + 3 xNC | YW1B-V4E02R | IDEC | 91.060.084 | 1 | /8.4 |
| -SN1 | Sworka rychloupínací Fastconnect clamp Fast Connect Klemm | WAGO 224-112 | WAGO | 91.250.009 | 3 | /7.8 |
| -TR1 | Toroidní transformátor - 400V/230V/24V 175VA Toroidal transformer - 400V / 230V / 24V 175VA Ringkerntransformator - 400V / 230V / 24V 175VA | 400V/230V/24V 2,5A 175VA | KARBAN s.r.o. | 91.080.042 | 1 | /6.6 |
| -SQ3 | Bezpečnostní koncový spínač - 2xNC Safety Limit Switch - 2x NC Sicherheitsendschalter - 2x NC | QKS8 | KEDU | 91.173.012 | 1 | /8.4 |

The manufacturer reserves right to use an equivalent replacement device.



Kusovník artiklů / Parts list / Stückliste


| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednávací číslo Type number Typennummer | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | Množství Quantity Menge | Umístění Location Stelle |
|---|---|---|---------------------------------------|--|-------------------------------|--------------------------------|
| -PA1 | Pojistka válcová - 10A, 10x38, rychlá Tube fuse - 10A, 10x38, fast Rohrsicherung - 10A, 10x38, schnell | PV10 10A gG | OEZ | 91.231.008 | 3 | /6.2 |
| -SQ1 | Koncový spínač - 1NC+1NO Limit switch - 1NC+1NO Endschalter - 1NC+1NO | D4N-4A31 | OMRON | 91.173.007 | 1 | /7.3 |
| -SQ2 | Koncový spínač - 1NC+1NO Limit switch - 1NC+1NO Endschalter - 1NC+1NO | D4N-4A31 | OMRON | 91.173.007 | 1 | /7.4 |
| -DW1 | Usměrňovací můstek - 6A, 100V Rectifier bridge - 6A, 100V Brückengleichrichter - 6A, 100V | KBU6B | SOS Electronic, spol. s r.o. | 91.280.019 | 1 | /6.7 |
| -QS1 | 3 pólový odpojovač, 16A Disconnecter - 3P, 16A Trennschalter - 3P, 16A | OT16FT3 | ABB | 91.170.018 | 1 | /6.1 |
| -SB2 | Hlavice tlačítka zelená Head green button Head green button | ZB5AA3 | TELEMECANIQUE | 91.060.014 | 1 | /7.5 |
| -SB3 | Hlavice tlačítka černá Button black head Taste Mlsser | ZB5AA2 | TELEMECANIQUE | 91.060.013 | 1 | /7.6 |
| -SB4 | Hlavice prosvětleného tlačítka žlutá The button head backlit yellow Der Knopf Kopf von hinten beleuchtet gelb | ZB5AW3S | TELEMECANIQUE | 91.060.023 | 1 | /8.7 |
| -SB5 | Hlavice tlačítka černá Button black head Taste Mlsser | ZB5AA2 | TELEMECANIQUE | 91.060.013 | 1 | /7.2 |
| -SN1 | Potenciometr 4k7 Potentiometer 4k7 Potenzionmeter 4k7 | TP195 4K7-N20A | TES-Ostrava | 91.283.002 | 1 | /7.8 |
| -FW1 | Frekvenční měnič - 1.5kW, 3x400VAC Frequency converter - 1.5kW, 3x400VAC Frequenzumrichter - 1.5kW, 3x400VAC | VFD015EL43A | DELTA ELECTRONICS, INC. | 91.012.122 | 1 | /7.6 |

The manufacturer reserves right to use an equivalent replacement device.



| | | | | | | |
|-----|--|---|---|---|--|-------------------------|
| 3.b | BOMAR, s.r.o. Těžební 1236/1 CZ 627 00, Brno | Stroj/Machine/Machine: Ergonomic 320.258 G-DG-DGS | Název artiklu/Name part/Name set: Kusovník artiklů / Parts list / Artikelsstückliste | Číslo esk./Doc.No./Anzahl der Dokumente.: ES-ER10F-201/202-V3.0 | | Lič/Page/ Seit.: 3.c |
| | | | | Napájení/Power supply/Einspeisung: 3x400V + PE, 50 Hz | | Lič/Page/ Seit.: 3.c |
| | | | | Datum/Date/Datum: 9.3.2016 | | Lič/Page/ Seit.: 12 |


| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|---|---|---|---|---|---|---|---|---|---|


+R1

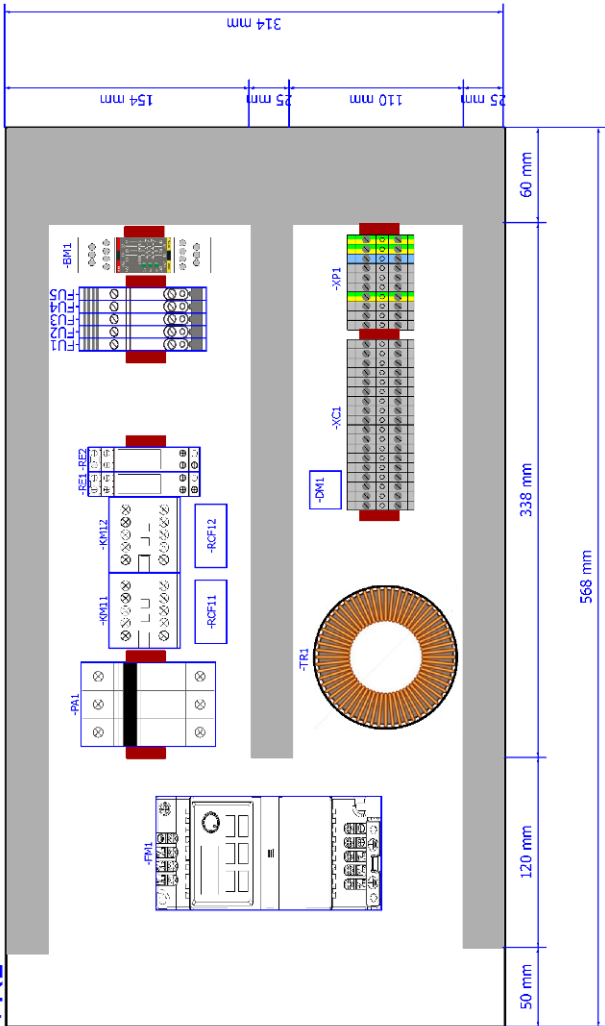


| | | | | | |
|-----|--|--|--|---|---|
| 3.c | BOMAR, s.r.o. Těžební 1236/1 CZ 627 00, Brno | Skup/Machine/Machine: Ergonomic 320.258 G-DG-DGS | Název stránky/Name page/Name sheet: Rozmístění prvků v rozvaděči R1 / Placement of elements in enclosure R1 / Platzierung der Elemente im Schaltschrank R1 | Křídlo esk./Doc.No/Anzahl der Dokumente.: ES-ERUDF-201/202-V3.0 Napájení/Power supply/Einspeisung: 3x400V + PE, 30 Hz Terminál/Terminal/Hit: verinnheit: Kosten Datum/Date/Datum: 9.3.2016 | Lis/Page/ Seite: 4 Lis/Page/ Seite: 12 |
| | | | | | |
| | | | | | |
| | | | | | |
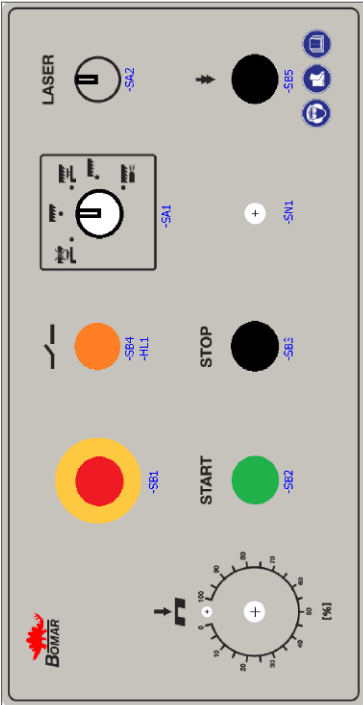
| | | | | | | | | | |
|--|---|---|---|---|---|---|---|---|---|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| <div>+OP1</div> <div></div> | | | | | | | | | |
| BOMAR, s.r.o. Těžební 1236/1 CZ 627 00, Brno | | Stroj/Machine/Machine: Ergonomic 320.258 G-DG-DGS | | Název stránky/Name page/Name sheet: Roznámístění prvků v ovládacím panelu OP1 / Deployment of elements in control panel OP 1 / Einsatz der Elemente in dem Bedienfeld OP 1 | | | | Kód dok./Doc.No/Anzahl der Dokumente.: ES-ERUDF-201/202-V3.0 Napájení/Power supply/Einspeisung: 3x400V + PE, 30 Hz Terminál/Terminal/Het.vern.bebat: Krokia Datum/Date/Datum: 9.3.2016 | |
|  | | | | | | | | Lst./Page/ Seiten: 5 Lst./Page/ Seiten: 12 | |

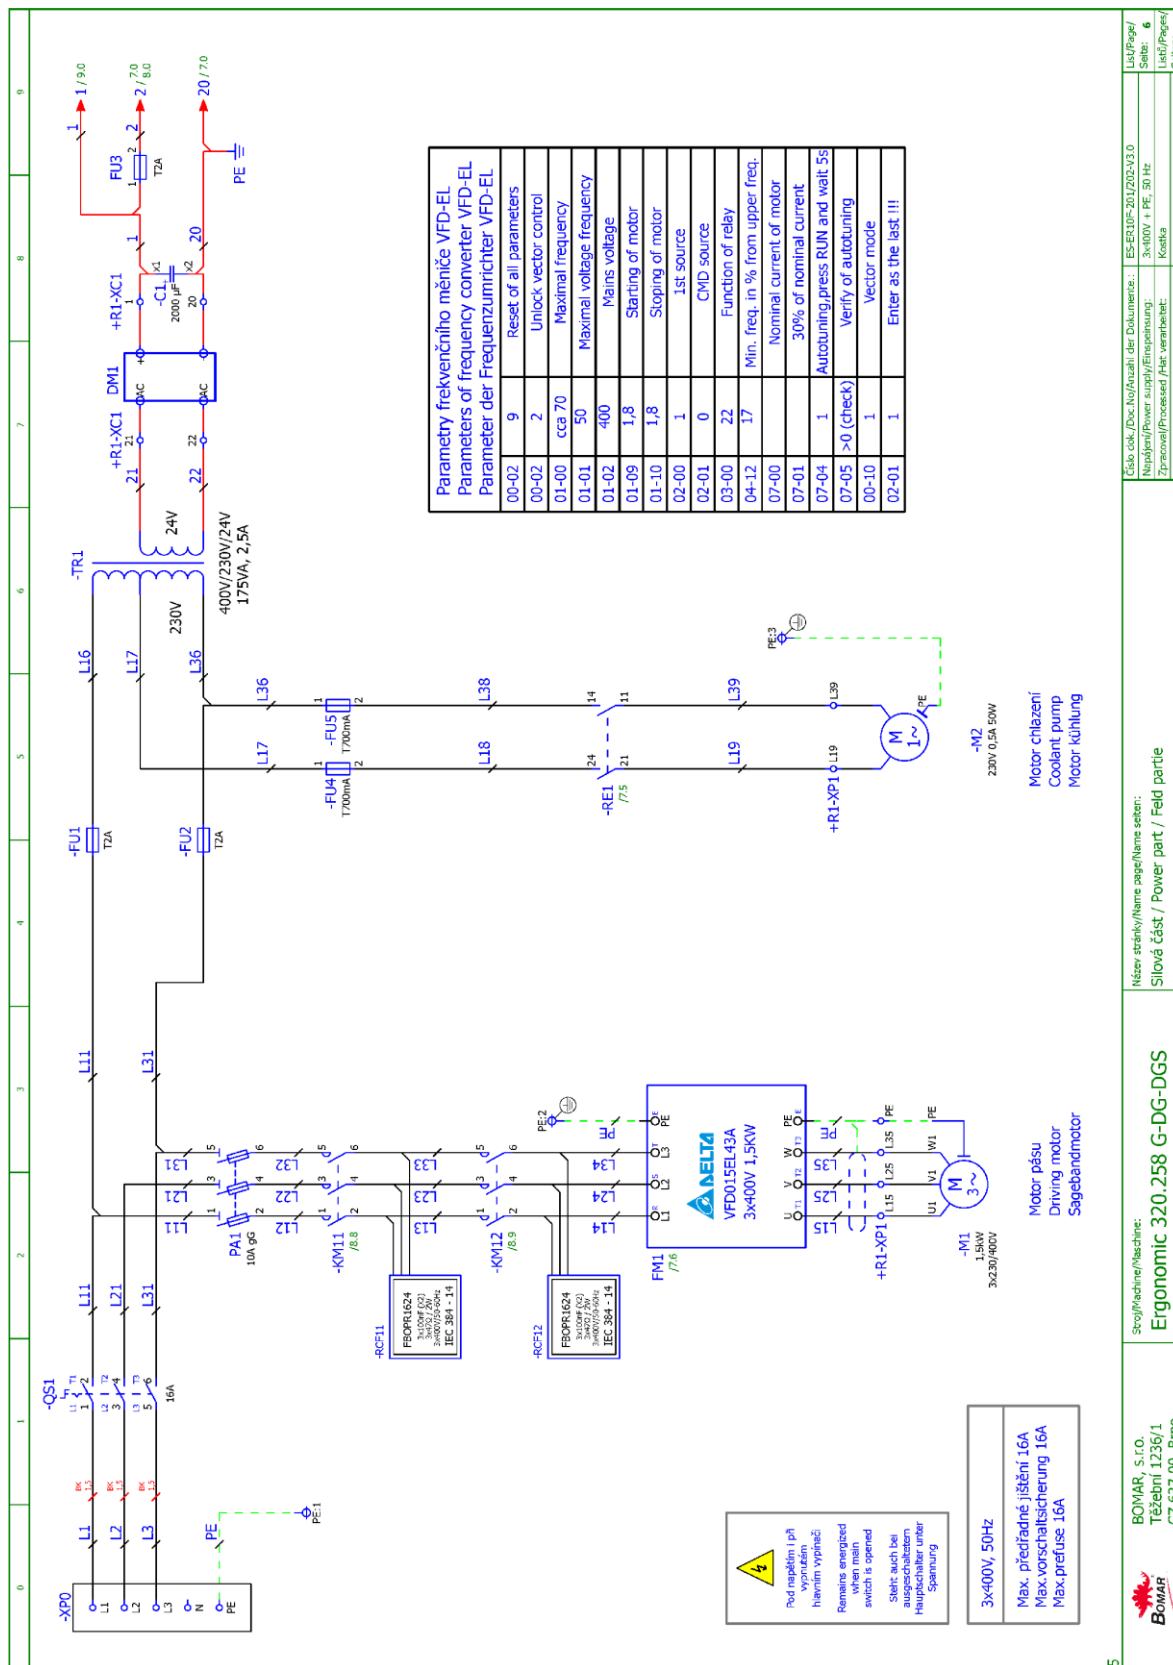

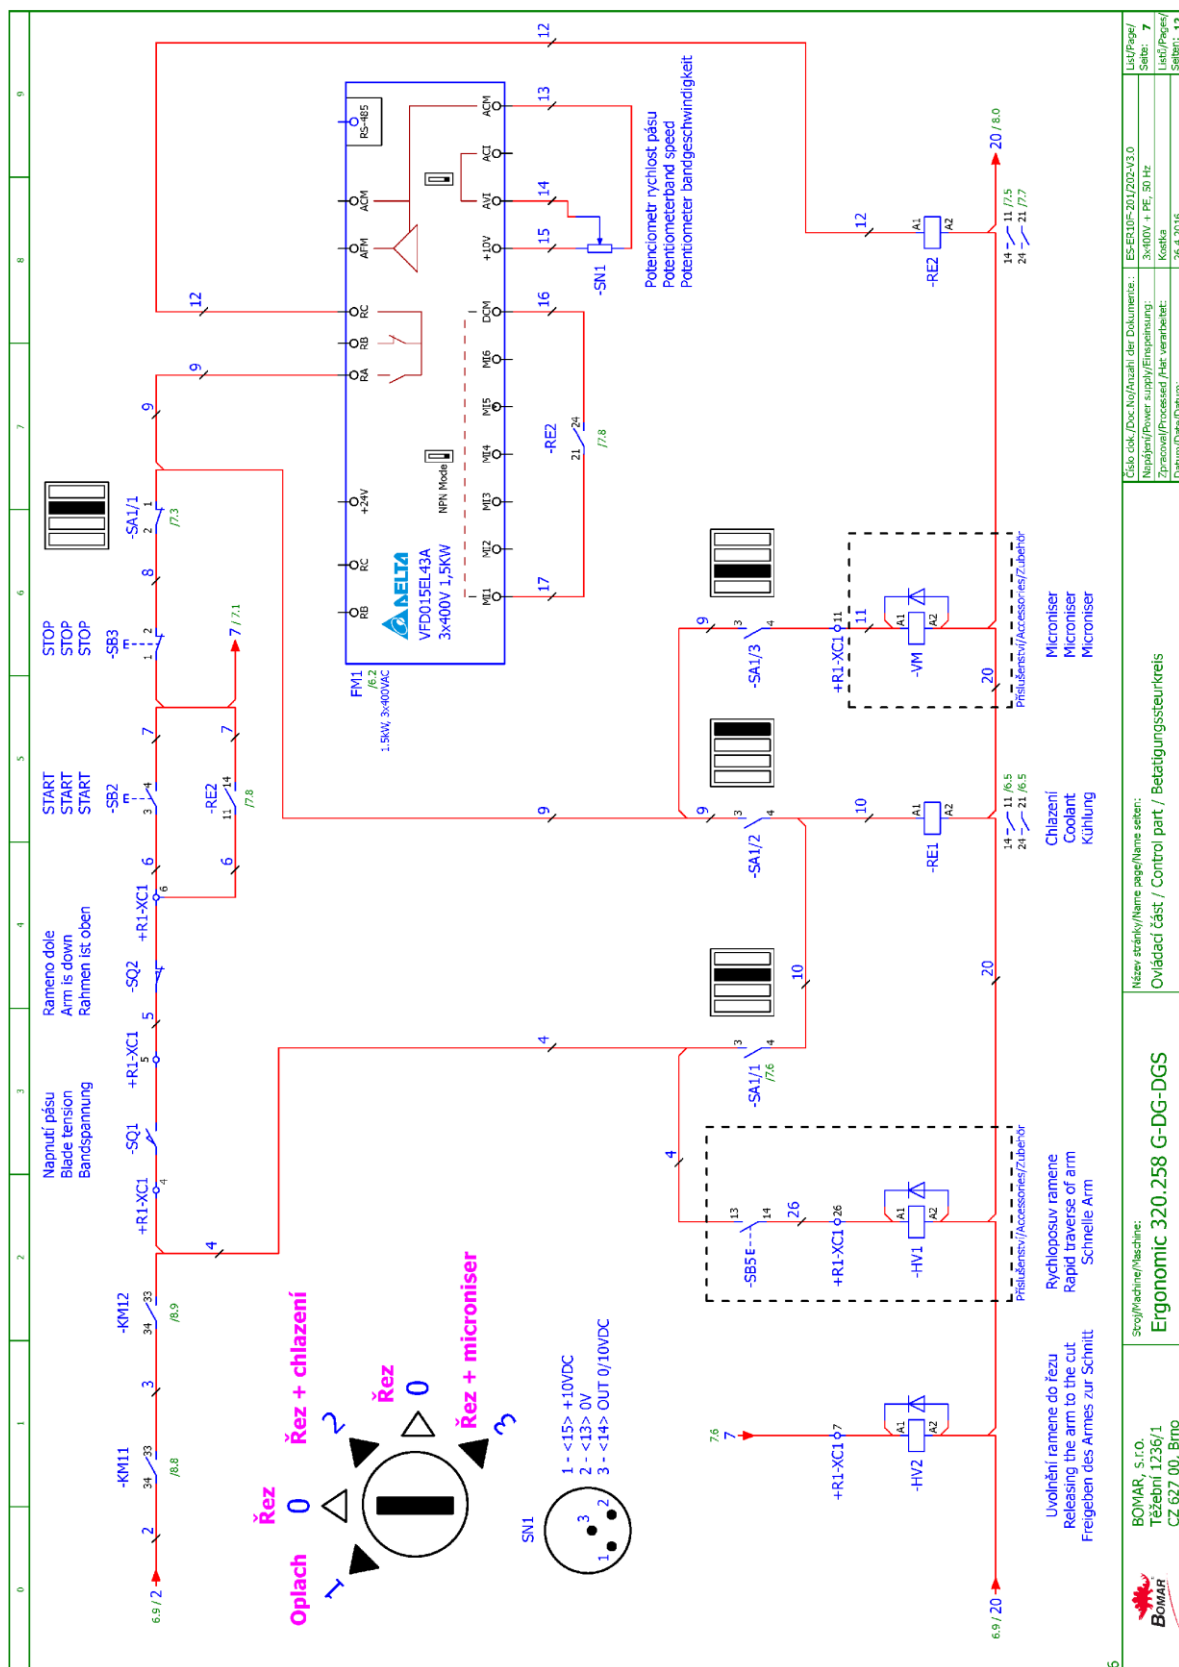



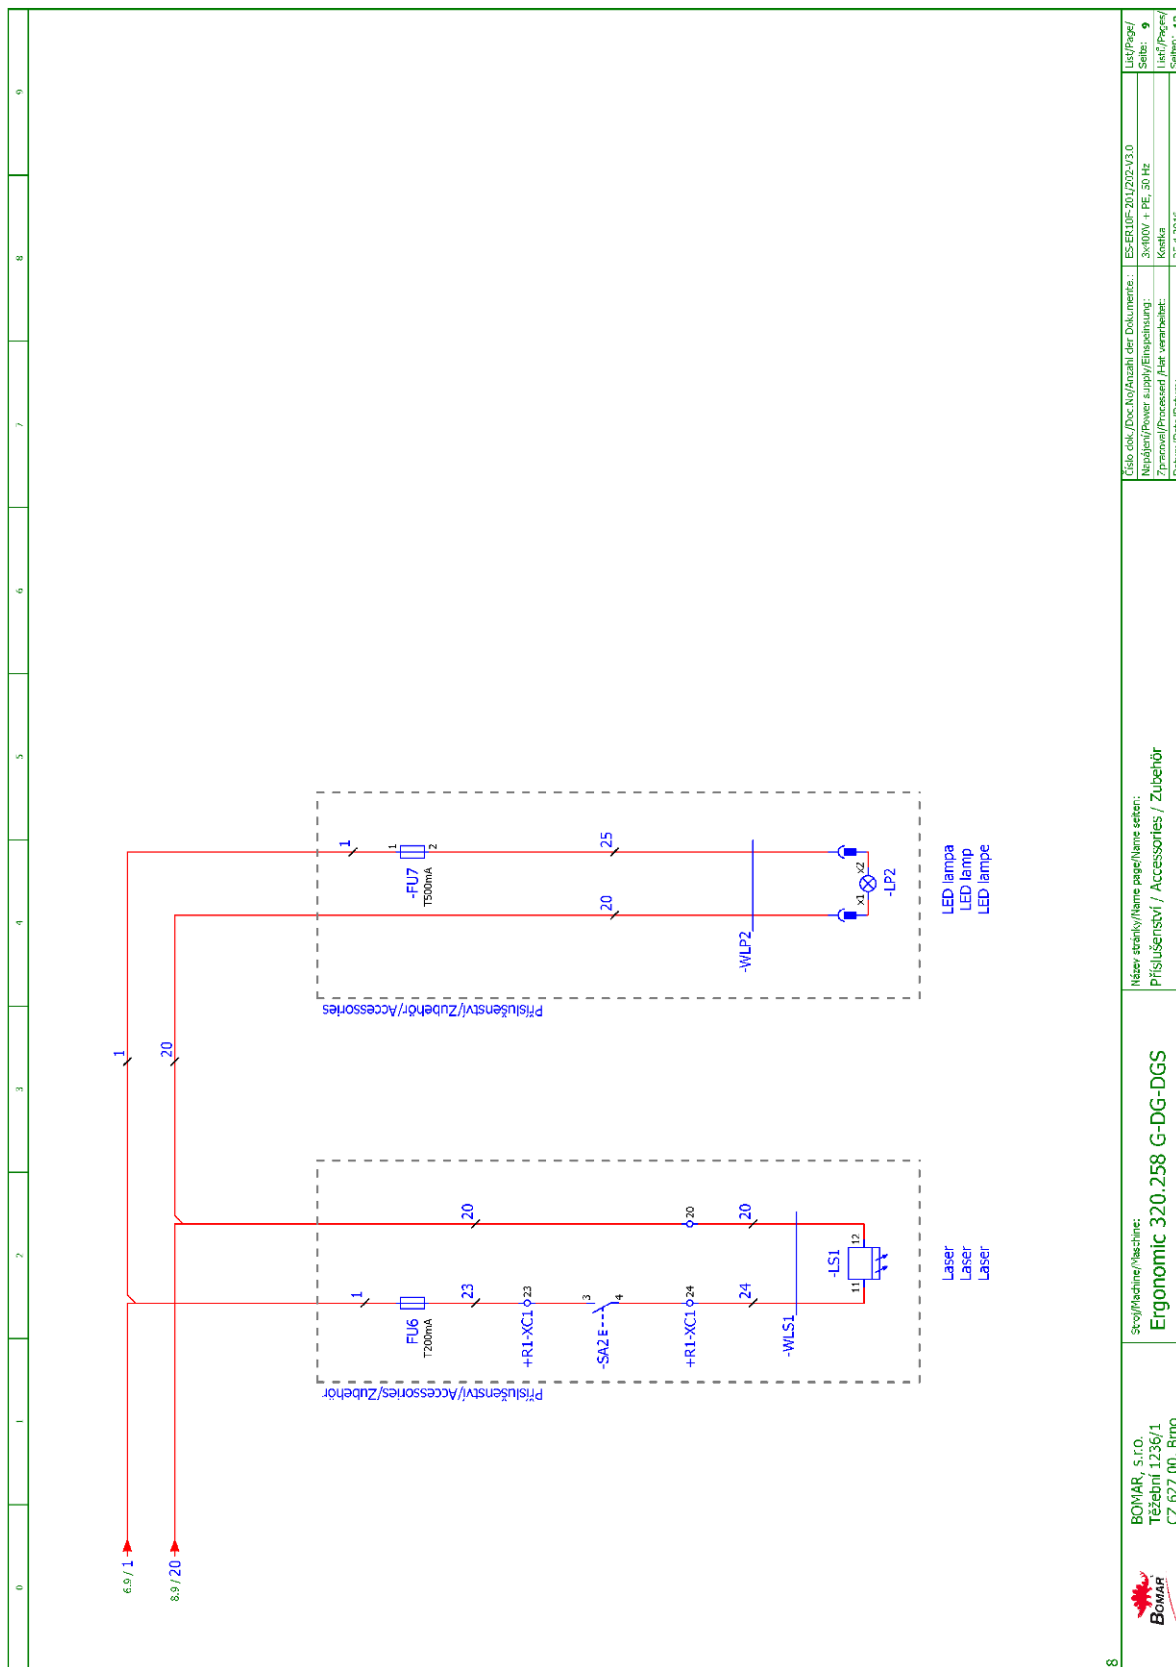

6.2. Elektrické schéma /Elektroschema /Wiring diagrams – 3x230 V + PE, 50H

| | | | | | | | | | | |
|---|---|---|----------------------------|---|---|---|---|---|---|--|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | |
| <div><div></div><div><p>Bomar, spol. s r.o. Těžební 1236/1 627 00 Brno Czech republic</p></div></div> <div><h1>Ergonomic 320.258 G-DG-DGS</h1><h2>ES-101.162-203-V3.1</h2><h3>Wiring diagram</h3><p>3x230V + PE, 50 Hz</p></div> | | | | | | | | | | |
| Stroj/Machine/Maschine: BOMAR, s.r.o. Těžební 1236/1 | | | Ergonomic 320.258 G-DG-DGS | | | | Název stránky/Name page/Name seiten: Úvodní strana / Start page / Startseite | | | Číslo dok./Doc.No/Anzahl der Dokumenten.: ES-101.162-203-V3.1 Název/Power supply/Einspeisung: 3x230V + PE, 50 Hz Zpracoval/Processed /Hat verarbeitet: 06.06.2019 |
|  | | | | | | | List/Page/ Seite: 1 | | | List/Page/ Seite: 13 |



| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|---|--|------------------------|---|---|---|---|---|---|---|
| Obsah / Table of contents / Inhalt | | | | | | | | | |
| Strana Page Seite | Název strany Page name Seitenname | Datum Date Datum | | | | | | | |
| /1 | Úvodní strana / Start page / Startseite | 06.06.2019 | | | | | | | |
| /2 | Obsah / Table of contents / Inhaltsverzeichnis | 06.06.2019 | | | | | | | |
| /3 | Kusovník artiklů / Parts list / Artikelstückliste | 06.06.2019 | | | | | | | |
| /3.a | Kusovník artiklů / Parts list / Artikelstückliste | 06.06.2019 | | | | | | | |
| /3.b | Kusovník artiklů / Parts list / Artikelstückliste | 06.06.2019 | | | | | | | |
| /3.c | Kusovník artiklů / Parts list / Artikelstückliste | 06.06.2019 | | | | | | | |
| /3.d | Kusovník artiklů / Parts list / Artikelstückliste | 06.06.2019 | | | | | | | |
| /4 | Rozmístění prvků v rozvaděči R1 / Placement of elements in enclosure R1 / Platzierung der Elemente im Schaltschrank R1 | 06.06.2019 | | | | | | | |
| /5 | Rozmístění prvků v ovládacím panelu OP1 / Deployment of elements in control panel OP 1 / Einsatz der Elemente in dem Bedienfeld OP 1 | 09.03.2016 | | | | | | | |
| /6 | Silová část / Power part / Feld partie | 06.06.2019 | | | | | | | |
| /7 | Ovládací část / Control part / Betätigungssteuirkreis | 01.02.2018 | | | | | | | |
| /8 | Bezpečnostní okruh / Safety circle / Sicherheitsbereich | 01.02.2018 | | | | | | | |
| /9 | Příslušenství / Accessories / Zubehör | 06.06.2019 | | | | | | | |

| | | | | | |
|--|--|--|--|---|--|
| | BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno | Stroj/Machine/Maschine: Ergonomic 320.258 G-DG-DGS | Název stránky/Page name/Name seiten: Obsah / Table of contents / Inhaltsverzeichnis | Číslo dok./Doc No./Anzahl der Dokumente.: ES-101.162-203-V3.1 Napájení/Power supply/Einspeisung: 3x230V + PE, 50 Hz Zpracováno/Processed /Fkt. verarbeitet: Datum/Date/Datum: 06.06.2019 | Úkl./Page/ Seite: 2 List./Pages/ Seiten: 13 |
|--|--|--|--|---|--|

Kusovník artiklů / Parts list / Stückliste

| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednávací číslo Type number Typennummer | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | Množství Quantity Menge | Umístění Location Stelle |
|---|--|---|---------------------------------------|--|-------------------------------|--------------------------------|
| -BM1 | Bezpečnostní relé 24VDC, 3NO Safety relay 24VDC, 3NO Sicherheitsrelais 24VDC, 3NO | BT50 | ABB | 91.051.063 | 1 | /8.6 |
| -FU1 | Pojistka trubičková - 2A/250V, pomalá, 5x20 Tube fuse - 2A/250V, slow, 5x20 Rohrsicherung - 2A / 250V, langsam, 5x20 | T2A/250V | ESKA | 91.230.001 | 1 | /6.4 |
| -FU2 | Pojistka trubičková - 2A/250V, pomalá, 5x20 Tube fuse - 2A/250V, slow, 5x20 Rohrsicherung - 2A / 250V, langsam, 5x20 | T2A/250V | ESKA | 91.230.001 | 1 | /6.4 |
| -FU3 | Pojistka trubičková - 2A/250V, pomalá, 5x20 Tube fuse - 2A/250V, slow, 5x20 Rohrsicherung - 2A / 250V, langsam, 5x20 | T2A/250V | ESKA | 91.230.001 | 1 | /6.9 |
| -SN1 | Hlavice potenciometru - 24mm Head of potentiometer 24mm Leiter Potentiometer 24mm | S8877 BLK | GES-ELECTRONICS, a.s. | 91.060.063 | 1 | /7.8 |
| -C1 | Kondenzátor Condenser Kondensator | 2200uF/50V | GM Electronic s.r.o. | 91.282.063 | 1 | /6.8 |
| -RCF11 | Filtr RFC vývodový Effluent RFC filter Ableitenden RFC Filter | FBOPR1624 | Ing. Miroslav Vlček | 91.041.015 | 1 | /6.1 |
| -RCF12 | Filtr RFC vývodový Effluent RFC filter Ableitenden RFC Filter | FBOPR1624 | Ing. Miroslav Vlček | 91.041.015 | 1 | /6.1 |
| -FU1 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSI5U | WIELAND | 91.251.102 | 1 | /6.4 |
| -FU2 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSI5U | WIELAND | 91.251.102 | 1 | /6.4 |
| -FU3 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSI5U | WIELAND | 91.251.102 | 1 | /6.9 |
| -FU4 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSI5U | WIELAND | 91.251.102 | 1 | /6.5 |

The manufacturer reserves right to use an equivalent replacement device.

| | | | | |
|--|---|---|---|--------------------------|
|  BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno | Strojí/Machine/Maschine: Ergonomic 320.258 G-DG-DGS | Název stránky/Name page/Namé seiten: Kusovník artiklů / Parts list / Artikelstückliste | Číslo dok./Doc.No./Anzahl der Dokumente: ES-101.162-203-V3.1 Napájení/Power supply/Einspeisung: 3x230V + PE, 50 Hz Zpracováno/Processed /Hat verarbeitet: 06.06.2019 | List/Pages/ Seite: 3 |
| | | | | List/Pages/ Seite: 13 |
| | | | | List/Pages/ Seite: 13 |



Kusovník artiklů / Parts list / Stückliste

| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednáací číslo Type number Typennummer | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | Množství Quantity Menge | Umístění Location Stelle |
|---|--|--|---------------------------------------|--|-------------------------------|--------------------------------|
| -FU4 | Pojistka trubičková - 700mA/250V, pomalá, 5x20 Tube fuse - 700mA/250V, slow, 5x20 Rohrsicherung - 700mA / 250V, langsam, 5x20 | T700mA/250V | ESKA | 91.230.069 | 1 | /6.5 |
| -FU5 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSIU | WIELAND | 91.251.102 | 1 | /6.5 |
| -FU5 | Pojistka trubičková - 700mA/250V, pomalá, 5x20 Tube fuse - 700mA/250V, slow, 5x20 Rohrsicherung - 700mA / 250V, langsam, 5x20 | T700mA/250V | ESKA | 91.230.069 | 1 | /6.5 |
| -FU6 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSIU | WIELAND | 91.251.102 | 1 | /4.6 |
| -FU7 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSIU | WIELAND | 91.251.102 | 1 | /4.6 |
| -KM11 | Ministrykač - 4kW/400V, 3P Mini contactor - 4kW/400V, 3P Mini-Schütz - 4kW / 400V, 3P | B65-30-01-1.7-71 | ABB | 91.040.049 | 1 | /8.8 |
| -KM11 | Pomocné kontakty - 1xNO+1xNC Auxiliary contacts - 1xNO+1xNC Hilfskontakte - 1xNO+1xNC | CAF 6-11M | ABB | 91.041.042 | 1 | /8.8 |
| -KM12 | Ministrykač - 4kW/400V, 3P Mini contactor - 4kW/400V, 3P Mini-Schütz - 4kW / 400V, 3P | B65-30-01-1.7-71 | ABB | 91.040.049 | 1 | /8.9 |
| -KM12 | Pomocné kontakty - 1xNO+1xNC Auxiliary contacts - 1xNO+1xNC Hilfskontakte - 1xNO+1xNC | CAF 6-11M | ABB | 91.041.042 | 1 | /8.9 |
| -PA1 | Pojistkový odpínač pro válkové vložky - 3P Switch fuse for the cylinder inserts - 3P Schalter Sicherung für den Zylinderinsätze - 3P | E 93/32 | ABB | 91.241.014 | 1 | /6.2 |
| -QS1 | Rukojeť odpínače 48x48mm - černá Handle switch 48x48mm - black Griffschalter 48x48mm - Schwarz | OHBS3PH | ABB | 91.180.018 | 1 | /6.1 |
| -QS1 | Kryt svorek Terminal shroud Klemmenabdeckung | OTS40T3 | ABB | 91.170.017 | 1 | /6.1 |

The manufacturer reserves right to use an equivalent replacement device.

| | | | | | |
|--|--|--|---|--|------------|
| | BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno | Stroj/Machine/Maschine: Ergonomic 320.258 G-DG-DGS | Název stránky/Name page/Name seiten: Kusovník artiklů / Parts list / Artikelstückliste | Číslo dok./Doc No./Anzahl der Dokumente: ES-101.162-203-V3.1 | Úč/Pages/ |
| | | | | Napájení/Power supply/Einspeisung: 3x230V + PE, 50 Hz | Strán: 3.8 |
| | | | | Zpracováno/Processed /Fert. verarbeitet: 06.06.2019 | Seiten: 13 |



Kusovník artiklů / Parts list / Stückliste

| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednávací číslo Type number Typennummer | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | Množství Quantity Menge | Umístění Location Stelle |
|---|--|---|---------------------------------------|--|-------------------------------|--------------------------------|
| -TR1 | Toroidní transformátor - 400V/230V/20V 3,5A 185VA Toroidal transformer - 400V / 230V / 20V 3.5A 185 VA Ringkerntransformator - 400V / 230V / 20V 3.5A 185 VA | 400V/230V/20V 3,5A 185VA | KARBAN s.r.o. | 91.080.041 | 1 | /6.6 |
| -SQ3 | Bezpečnostní koncový spínač - 2xNC Safety Limit Switch - 2x NC Sicherheitsendschalter - 2x NC | QKS8 | KEDU | 91.173.012 | 1 | /8.4 |
| -PA1 | Pojistka válcová - 10A, 10x38, rychlá Tube fuse - 10A, 10x38, fast Rohrsicherung - 10A, 10x38, schnell | PV10 10A gG | OEZ | 91.231.008 | 3 | /6.2 |
| -SQ1 | Koncový spínač - 1NC+1NO Limit switch - 1NC+1NO Endschalter - 1NC+1NO | D4N-4A31 | OMRON | 91.173.007 | 1 | /7.3 |
| -SQ2 | Koncový spínač - 1NC+1NO Limit switch - 1NC+1NO Endschalter - 1NC+1NO | D4N-4A31 | OMRON | 91.173.007 | 1 | /7.4 |
| -FM1 | Frekvenční měnič - 1.5kW, 3x230VAC Frequency converter - 1.5kW, 3x230VAC Frequenzumrichter - 1.5kW, 3x230VAC | VFD015EL23A | DELTA ELECTRONICS, INC. | 91.012.172 | 1 | /6.2 |
| -DM1 | Usměrnovací můstek - 6A,100V Rectifier bridge - 6A, 100V Brückengleichrichter - 6A, 100V | KBU6B | SOS Electronic, spol. s r.o. | 91.280.019 | 1 | /6.7 |
| -QS1 | 3 pólový odspínač, 16A Disconnecter - 3P, 16A Trennschalter - 3P, 16A | OT16FT3 | ABB | 91.170.018 | 1 | /6.1 |
| -SB2 | Hlavice tlačítka zelená Head green button Head green button | ZB5AA3 | TELEMECANIQUE | 91.060.014 | 1 | /7.5 |
| -SB3 | Hlavice tlačítka černá Button black head Taste Miesser | ZB5AA2 | TELEMECANIQUE | 91.060.013 | 1 | /7.6 |
| -SB4 | Hlavice prosvětleného tlačítka žlutá The button head backlit yellow Der Knopf Kopf von hinten beleuchtet gelb | ZB5AW35 | TELEMECANIQUE | 91.060.023 | 1 | /8.7 |
| -SB5 | Hlavice tlačítka černá Button black head Taste Miesser | ZB5AA2 | TELEMECANIQUE | 91.060.013 | 1 | /7.2 |

The manufacturer reserves right to use an equivalent replacement device.

| | | | | | | |
|---|--|--|--|--|--|--------------|
|  | BOMAR, s.r.o. Těšební 1256/1 CZ 627 00, Brno | Stroj/Machine/Maschine: Ergonomic 320.258 G-DG-DGS | Název stránky/Name page/Name seiten: Kusovník artiklů / Parts list / Artikelstückliste | Číslo dok./Doc No./Anzahl der Dokumente: ES-101.162-203-V3.1 | | List/Page/ |
| | | | | Napájení/Power supply/Einspeisung: 3x230V + PE, 50 Hz | | Seite: 3.6 |
| | | | | Zpracováno/Processed /Fert. verarbeitet: 06.06.2019 | | List/./Page/ |
| | | | | Datum/Date/Datum: | | Seite: 13 |


Kusovník artiklů / Parts list / Stückliste

| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednávací číslo Type number Typennummer | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | Množství Quantity Menge | Umístění Location Stelle |
|---|---|---|---------------------------------------|--|-------------------------------|--------------------------------|
| -SN1 | Potenciometr 4k7 Potenziometer 4k7 | TP195 4k7-N20A | TES-Ostrava | 91.283.002 | 1 | /7.8 |
| -RCF0 | Vstupní odrušovací filtr 10A Inout noise filter 10A Eingangsausfilter 10A | 10EB15/50/CF15 | WIDECOM TECHNOLOGY s.r.o. | 91.041.072 | 1 | /6.2 |


The manufacturer reserves right to use an equivalent replacement device.

3.c


| | | | |
|---|--|---|--|
|  <p>BOMAR, s.r.o. Těšební 1236/1 CZ 627 00, Brno</p> | <p>Stroj/Machine/Maschine: Ergonomic 320.258 G-DG-DGS</p> | <p>Název stránky/Name page/Name seiten: Kusovník artiklů / Parts list / Artikelstückliste</p> | <p>Číslo dok./Doc.No./Anzahl der Dokumente: ES-101.162-203-V3.1 Napájení/Power supply/Fingerversorgung: 3x230V + PE, 50 Hz Zpracování/Processed/Has verarbeitet: 06.06.2019 Datum/Data/Datum: Lst./Page/ Seite: 3.d List/Page/ Seite: 13</p> |
|---|--|---|--|

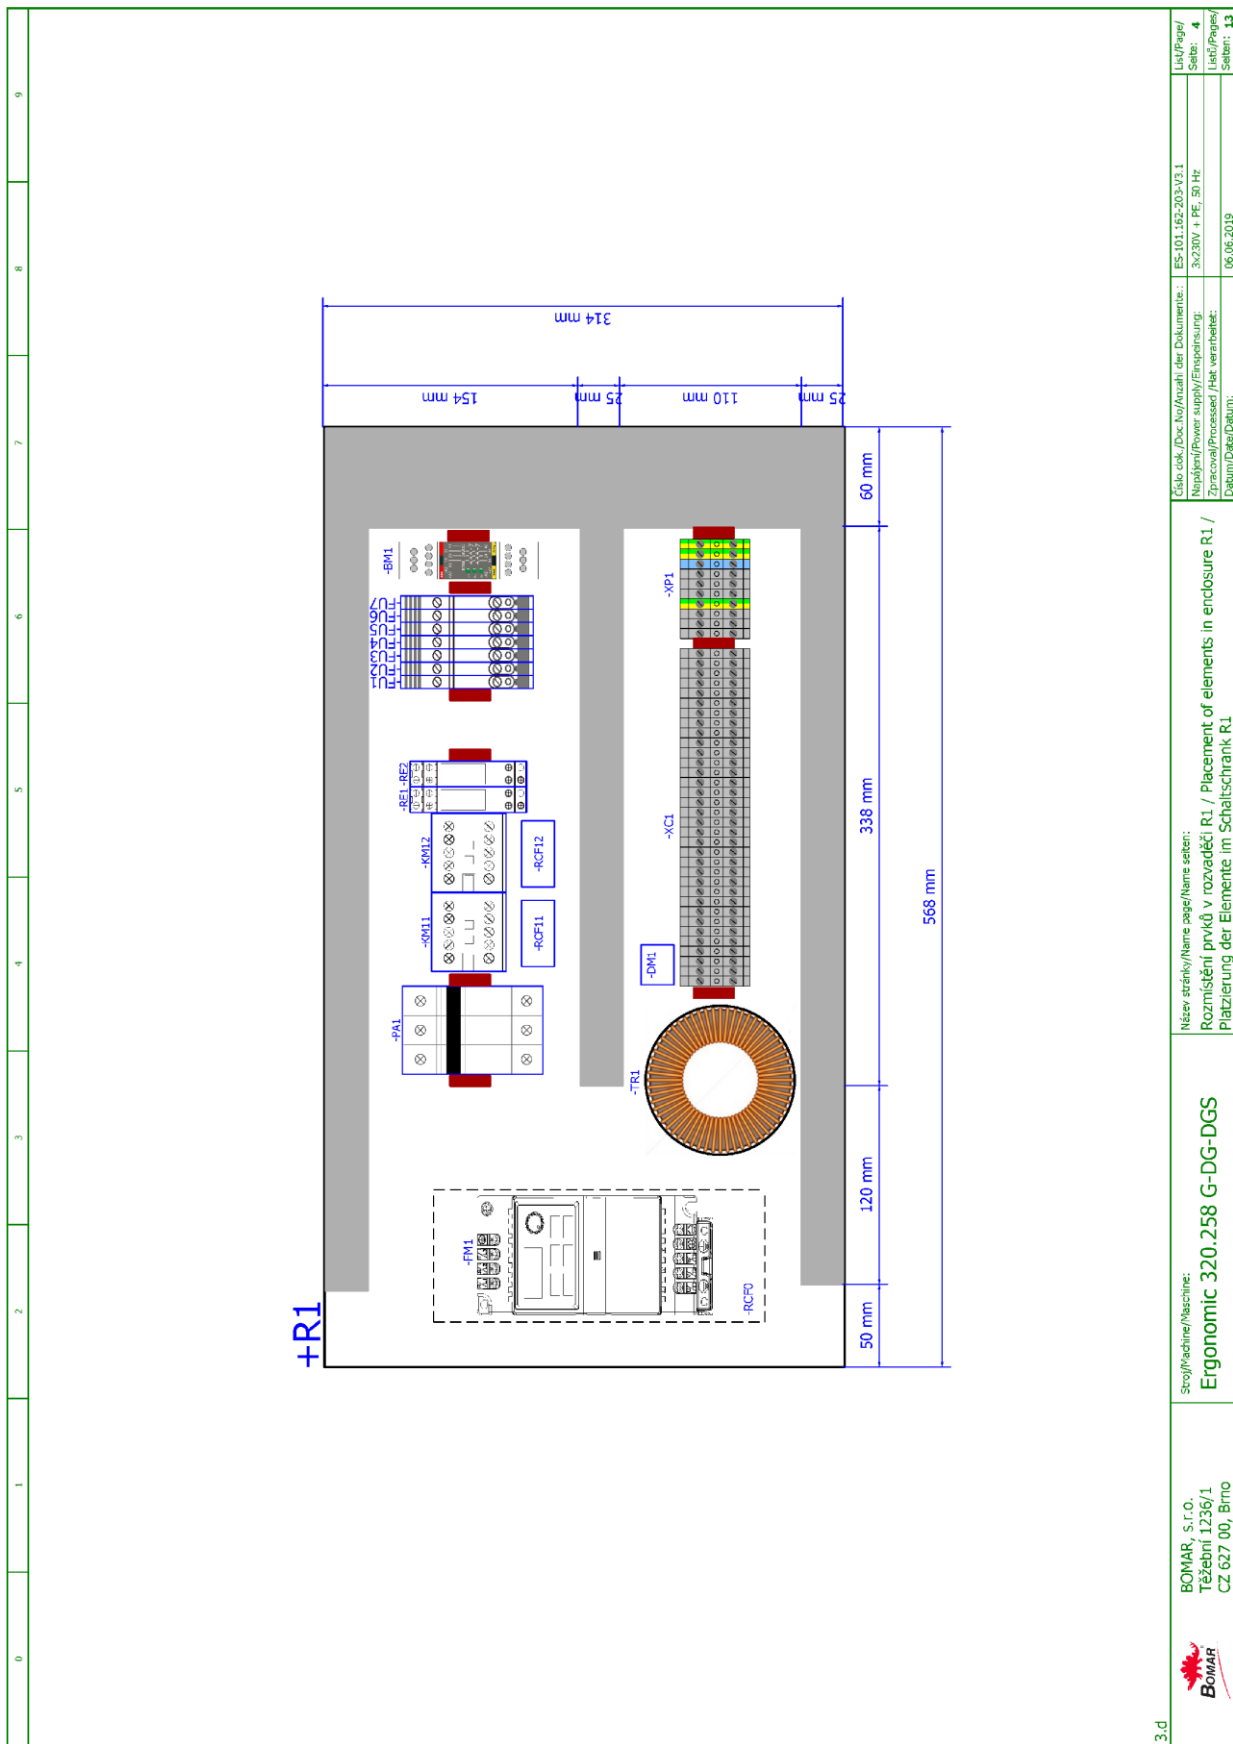


| | | | | | | | | | |
|---|---|---|--|---|---|--|---|---|--|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| <div><div>+OP1</div><div></div></div> | | | | | | | | | |
| BOMAR, s.r.o., Těšební 1236/1 CZ 627 00, Brno | | | Stroj/Machine/Maschine: Ergonomic 320.258 G-DG-DGS | | | Název stránky/Name page/Name seiten: Rozmístění prvků v ovládacím panelu OP1 / Deployment of elements in control panel OP 1 / Einsatz der Elemente in dem Bedienfeld OP 1 | | | Číslo dok./Doc.No./Anzahl der Dokumente: ES-101.162-203-V3.1 Napájení/Power supply/Einspeisung: 3x230V + PE, 50 Hz Zpracování/Processed /Hat verarbeitet: 09.03.2016 |
| | | | Lid./Page/ Seite: 5 Lid./Page/ Seite: 13 | | | | | | |

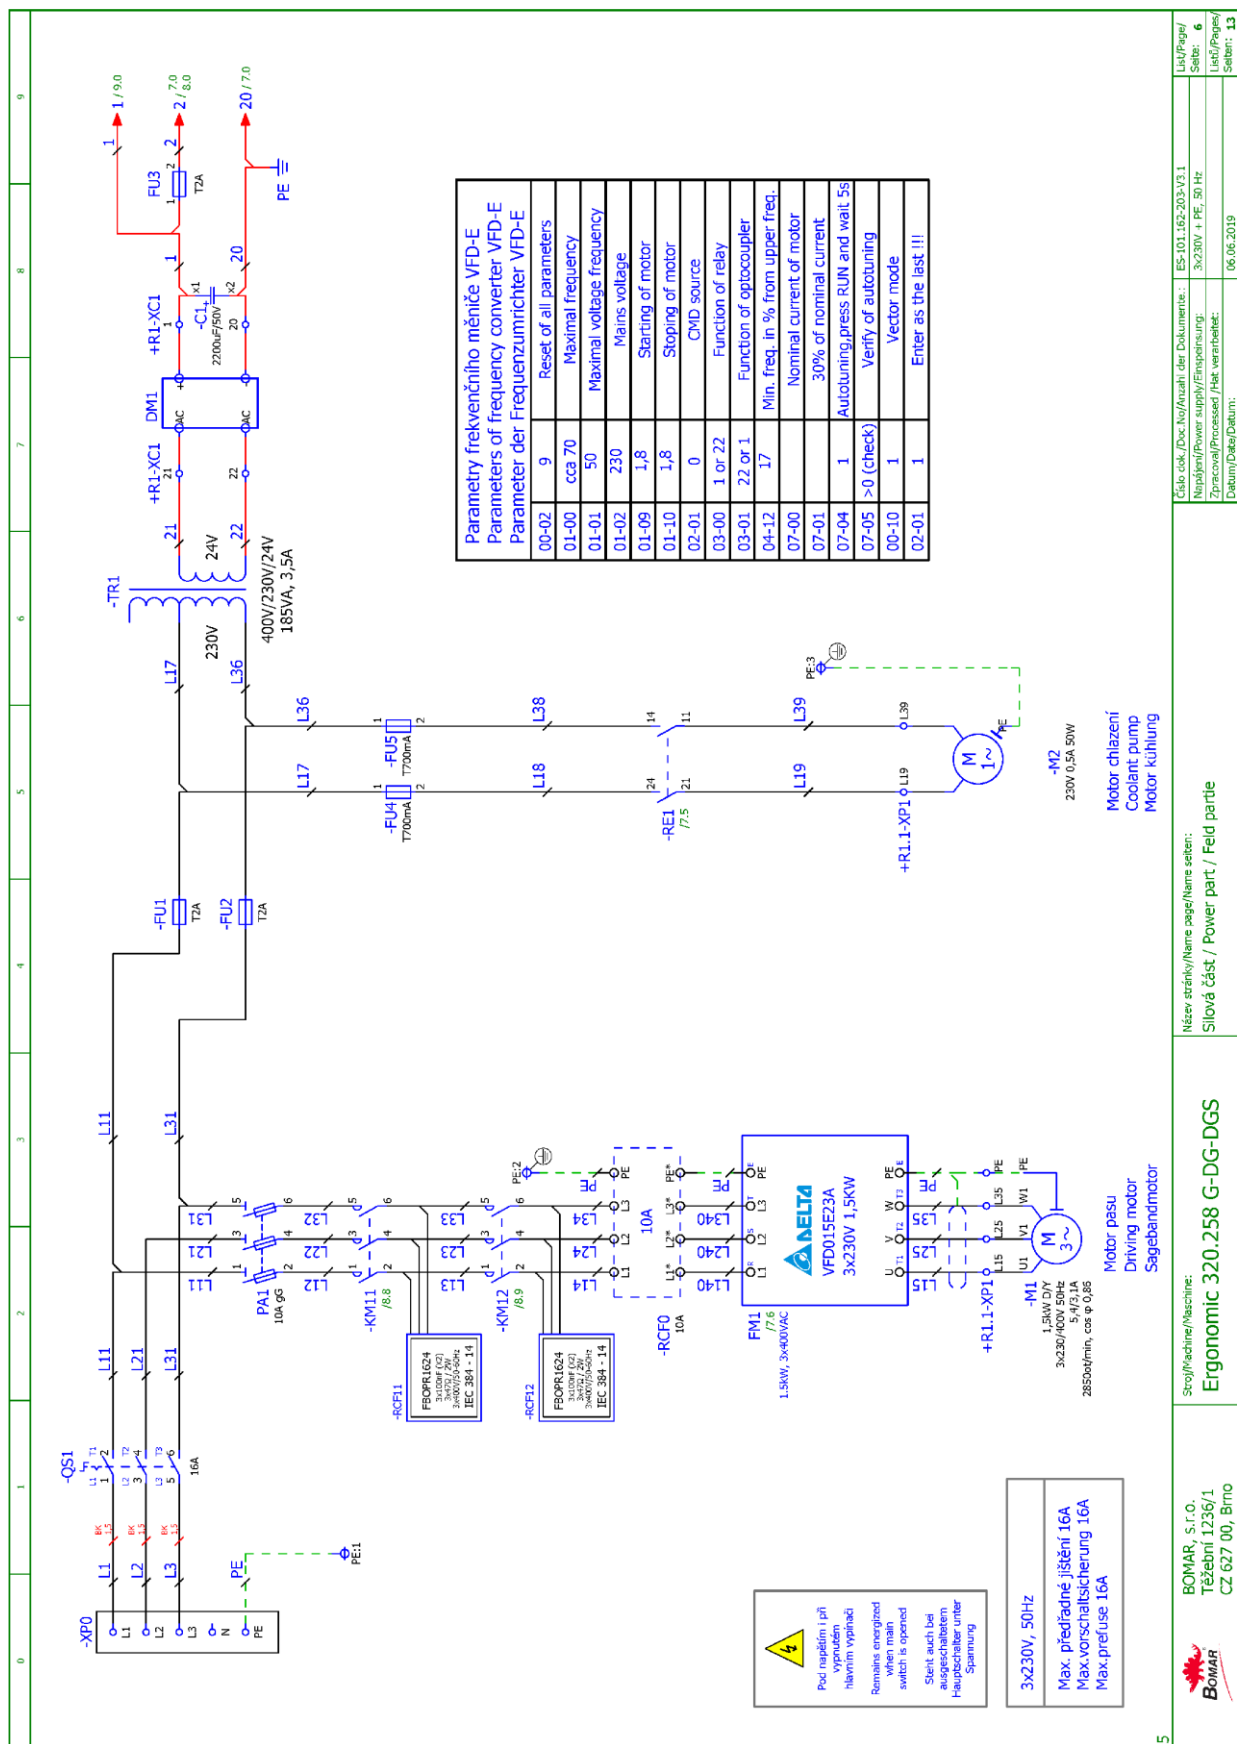



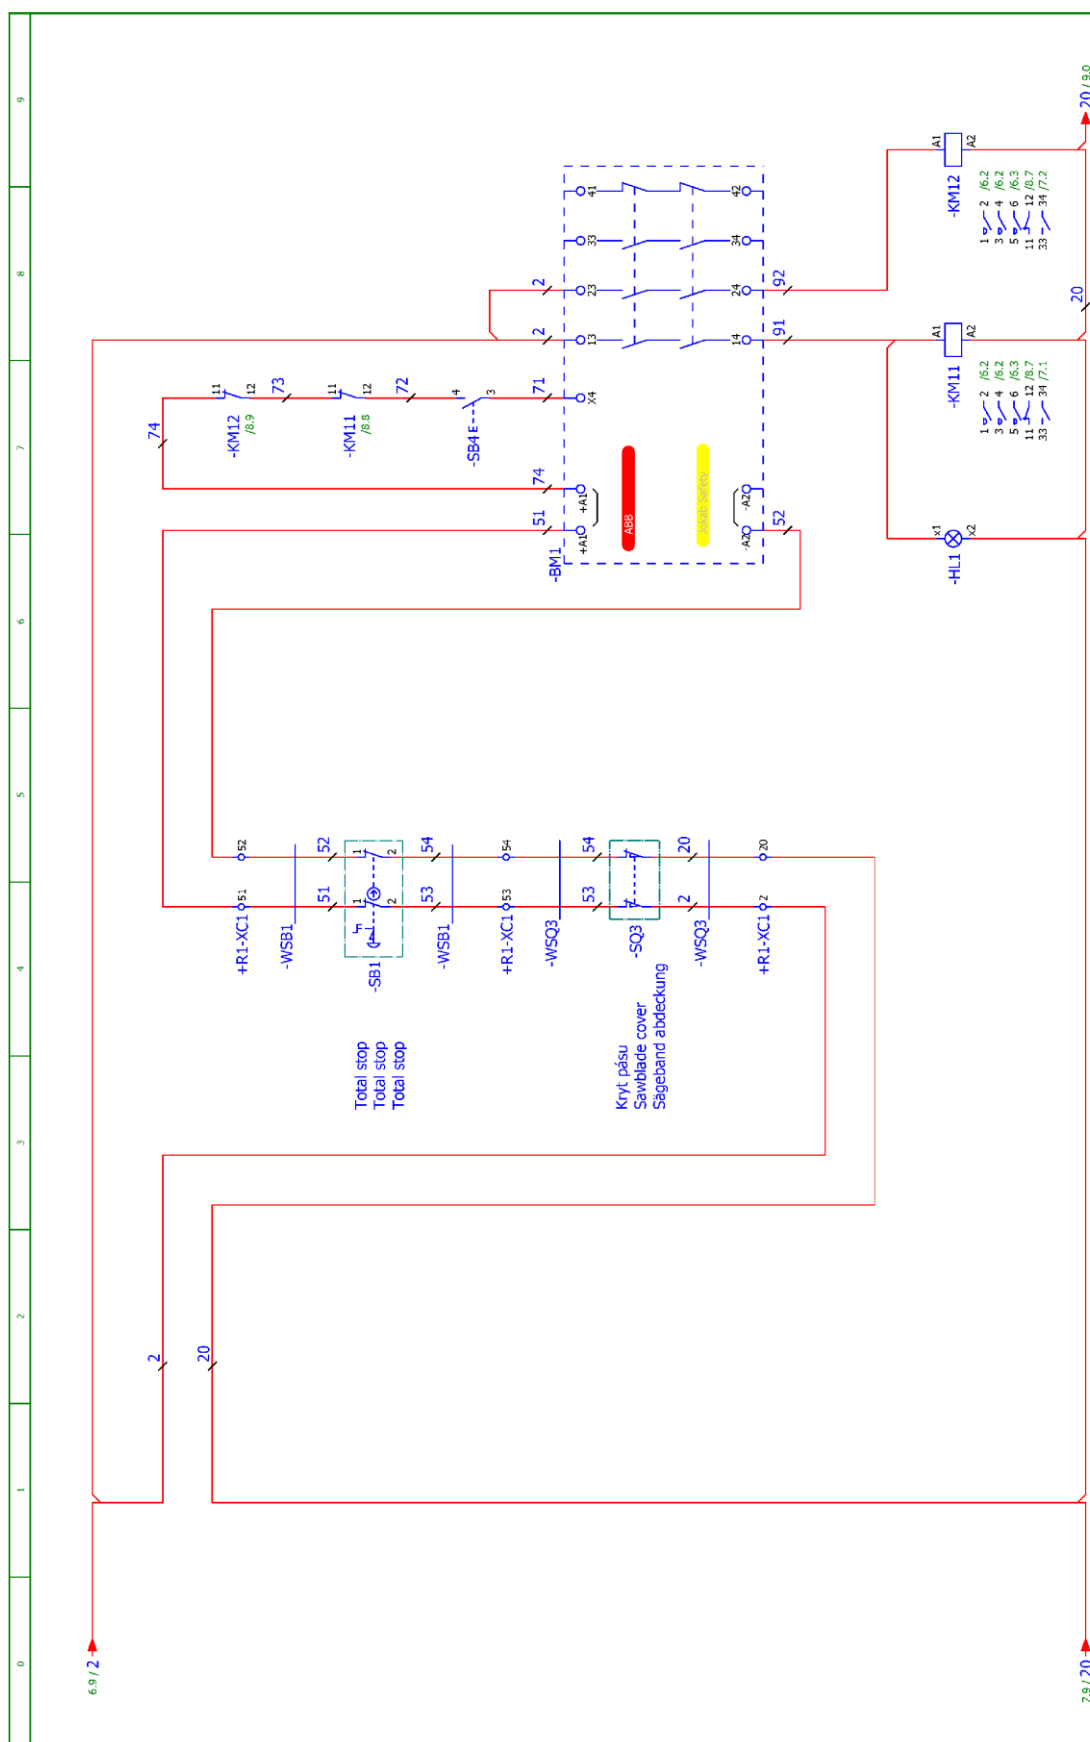

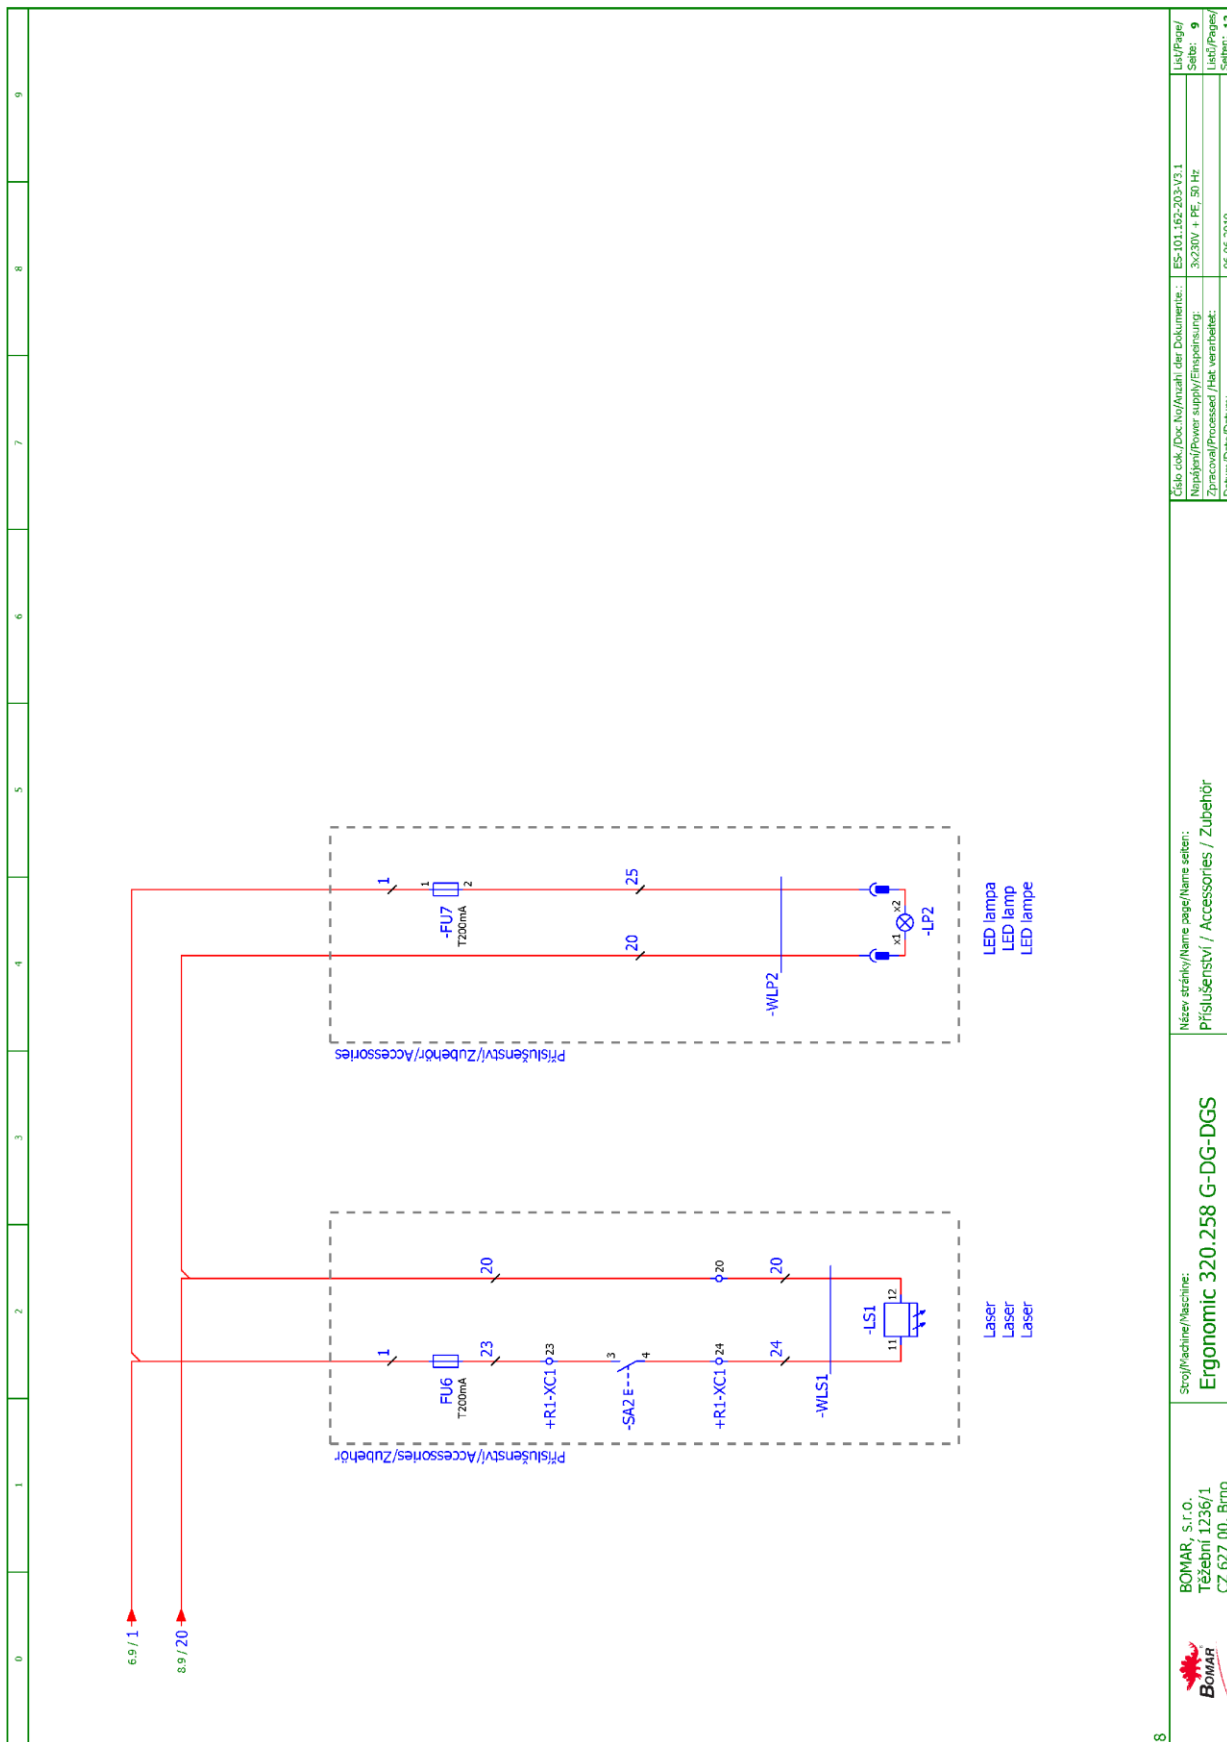

8



BOMAR, s.r.o.
Těšební 1236/1
CZ 627 00, Brno

Stroj/Machine/Maschine:
Ergonomic 320.258 G-DG-DGS

Název stránky/Name page/Name seiten:
Přislušenství / Accessories / Zubehör

Číslo dok./Doc.No./Anzahl der Dokumente: ES-101.162-203-V3.1
Napájení/Power supply/Einspeisung: 3x230V + PE, 50 Hz
Zpracováno/Processed / Hat verarbeitet: 06.06.2019

Liš/Paper/
Seiten: 9
Liš/Paper/
Seiten: 13

6.3. Elektrické schéma / Elektroschema / Wiring diagrams –
 – 3x230 V + PE, 50/60 Hz
 –frekv. měnič / Frequenzumrichter / frequency convertor

| | | | | | | | | | |
|---|---|---|---|---|---|--|---|---|---|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| <div>  <div> <p>Bomar, spol. s r.o. Těžební 1236/1 627 00 Brno Czech republic</p> </div> <div> <p>Ergonomic 320.258 DG ES-101.162-T3-V4.0 Wiring diagram 3x230V + PE, 50/60 Hz</p> </div> </div> | | | | | | | | | |
|  <p>BOMAR, s.r.o. Těžební 1236/1 CZ 627 00, Brno</p> | | <p>Stroj/Machine/Maschine: Ergonomic 320.258 DG</p> | | <p>Název stránky/Name page/Name seiten: Úvodní strana / Start page / Startseite</p> | | <p>Číslo dok./Doc.No./Anzahl der Dokumente: ES-101.162-T3-V4.0 Napájení/Power supply/Einspeisung: 3x230V + PE, 50/60 Hz Zpracoval/Processed /Hat verarbeitet: Datum/Date/Datum: 31.01.2020</p> | | <p>List/Page/ Seite: 1 List/Page/ Seiten: 13</p> | |

Obsah / Table of contents / Inhalt

| Strana Page Seite | Název strany Page name Seitenname | Datum Date Datum |
|-------------------------|--|------------------------|
| /1 | Úvodní strana / Start page / Startseite | 31.01.2020 |
| /2 | Obsah / Table of contents / Inhaltsverzeichnis | 31.01.2020 |
| /3 | Kusovník artiklů / Parts list / Artikelstückliste | 31.01.2020 |
| /3.a | Kusovník artiklů / Parts list / Artikelstückliste | 31.01.2020 |
| /3.b | Kusovník artiklů / Parts list / Artikelstückliste | 31.01.2020 |
| /3.c | Kusovník artiklů / Parts list / Artikelstückliste | 31.01.2020 |
| /3.d | Kusovník artiklů / Parts list / Artikelstückliste | 31.01.2020 |
| /4 | Rozmístění prvků v rozvaděči R1 / Placement of elements in enclosure R1 / Platzierung der Elemente im Schaltschrank R1 | 31.01.2020 |
| /5 | Rozmístění prvků v ovládacím panelu OP1 / Deployment of elements in control panel OP 1 / Einsatz der Elemente in dem Bedienfeld OP 1 | 09.03.2016 |
| /6 | Silová část / Power part / Feld partie | 31.01.2020 |
| /7 | Ovládací část / Control part / Betätigungsteurkreis | 01.02.2018 |
| /8 | Bezpečnostní okruh / Safety circle / Sicherheitsbereich | 01.02.2018 |
| /9 | Příslušenství / Accessories / Zubehör | 06.06.2019 |

| | | | | | | |
|---|---|--|--|--|---|---|
| 1 |  | BOMAR, s.r.o. Tržební 1236/1 CZ 627 00, Brno | Stroj/Machine/Maschine: Ergonomic 320.258 DG | Název stránky/Name page/Name seiten: Obsah / Table of contents / Inhaltsverzeichnis | Číslo dok./Doc.No./Anzahl der Dokumente: ES-101.162-T3-V4.0 Napájení/Power supply/Einspeisung: 3x230V + PE, 50/60 Hz Zpracoval/Processed /Hat verarbeitet: Datum/Date/Datum: | List/Page/ Seite: 2 List/Page/ Seiten: 13 |
| | | | | | | |
| | | | | | | |
| | | | | | | |

| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|---|---|--|---|---|---------------------------------------|--|---|-------------------------------|--------------------------------|
| Kusovník artiklů / Parts list / Stückliste | | | | | | | | | |
| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednáací číslo Type number Typennummer | | | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | | Množství Quantity Menge | Umístění Location Stelle |
| -BM1 | Bezpečnostní relé 24VDC, 3NO Safety relay 24VDC, 3NO Sicherheitsrelais 24VDC, 3NO | BT50 | | | ABB | 91.051.063 | | 1 | /8.6 |
| -FU3 | Pojistka trubičková - 2A/250V, pomalá, 5x20 Tube fuse - 2A/250V, slow, 5x20 Rohrsicherung - 2A / 250V, langsam, 5x20 | T2A/250V | | | ESKA | 91.230.001 | | 1 | /6.9 |
| -SN1 | Hlavice potenciometru - 24mm Head of potentiometer 24mm Leiter Potentiometer 24mm | S8877 BLK | | | GES-ELECTRONICS, a.s. | 91.060.063 | | 1 | /7.8 |
| -C1 | Kondenzátor Condenser Kondensator | 2200uF/50V | | | GM Electronic s.r.o. | 91.282.063 | | 1 | /6.8 |
| -RCF11 | Filtr RFC vývodový Efficient RFC filter Ableitenden RFC Filter | FBOPR1624 | | | Ing. Miroslav Vlček | 91.041.015 | | 1 | /6.1 |
| -RCF12 | Filtr RFC vývodový Efficient RFC filter Ableitenden RFC Filter | FBOPR1624 | | | Ing. Miroslav Vlček | 91.041.015 | | 1 | /6.1 |
| -FU1 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSI5U | | | WIELAND | 91.251.102 | | 1 | /4 |
| -FU2 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSI5U | | | WIELAND | 91.251.102 | | 1 | /4 |
| -FU3 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSI5U | | | WIELAND | 91.251.102 | | 1 | /6.9 |
| -FU4 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSI5U | | | WIELAND | 91.251.102 | | 1 | /6.5 |
| -FU4 | Pojistka trubičková - 700mA/250V, pomalá, 5x20 Tube fuse - 700mA/250V, slow, 5x20 Rohrsicherung - 700mA / 250V, langsam, 5x20 | T700mA/250V | | | ESKA | 91.230.069 | | 1 | /6.5 |
| -FU5 | Svorka pojistková Fuse terminal Sicherungsklemme | WK4/THSI5U | | | WIELAND | 91.251.102 | | 1 | /6.5 |

The manufacturer reserves right to use an equivalent replacement device.

| | | | | | |
|--|---|--|--|--|-------|
|  BOMAR, s.r.o. Trzební 1236/1 CZ 627 00, Brno | Struč/Machine/Machine: Ergonomic 320.258 DG | Název stránky/Name page/Name sheet: Kusovník artiklů / Parts list / Artikelstückliste | Číslo dok./Doc.No./Anzahl der Dokumente.: ES-101.162-T3-V4.0 | | 13/13 |
| | | | Napájení/Power supply/Einspeisung: 3x230V + PE, 50/60 Hz | | 3 |
| | | | Zpracoval/Processed /Hat verarbeitet: | | 3 |
| | | | Datum/Date/Datum: 31.01.2020 | | 13 |

The manufacturer reserves right to use an equivalent replacement device.

| | | | | |
|--|---|---|--|---|
|  BOMAR, s.r.o. Tržební 1236/1 CZ 627 00, Brno | Stručná informace: Ergonomic 320.258 DG | Název stránky/Name page/Name seiten: Kusovník artiklů / Parts list / Artikelstückliste | Číslo dok./Doc.No./Anzahl der Dokumente: ES-101.162-T3-V4.0 | List/Page/ Seite: 3.a |
| | | | | Napájení/Power supply/Einspeisung: 3x230V + PE, 50/60 Hz |
| | | | | Zpracování/Processed /Hat verarbeitet: 31.01.2020 |
| | | | | List/Page/ Seiten: 13 |

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|---|---|---|---|---|---|---|---|---|---|

Kusovník artiklů / Parts list / Stückliste

| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednáací číslo Type number | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | Množství Quantity Menge | Umístění Location Stelle |
|---|--|---------------------------------|---------------------------------------|--|-------------------------------|--------------------------------|
| -RE1 | Patice pro relé Relay socket Relaissocket | CR-PSS | ABB | 91.051.048 | 1 | /7.5 |
| -RE1 | Patčové relé CR-P Plug-in relay CR-P Stecken Sie in Relais CR-P | CR-P024DC2 | ABB | 91.051.049 | 1 | /7.5 |
| -RE2 | Patice pro relé Relay socket Relaissocket | CR-PSS | ABB | 91.051.048 | 1 | /7.8 |
| -RE2 | Patčové relé CR-P Plug-in relay CR-P Stecken Sie in Relais CR-P | CR-P024DC2 | ABB | 91.051.049 | 1 | /7.8 |
| -SA1/1 | Kontaktní blok - INO Contact block - INO Kontaktblock - INO | M22-K10 | EATON | 91.061.022 | 1 | /7.3 |
| -SA1/1 | Kontaktní blok - INC Contact block - INC Kontaktblock - INC | M22-K01 | EATON | 91.061.024 | 1 | /7.6 |
| -SA1/2 | Hlavice s otočným přepínačem - 4 polohy Head with rotary switch - 4 positions Kopf mit Drehschalter - 4 Positionen | M22 - WRK4 | EATON | 91.060.087 | 1 | /7.5 |
| -SA1/2 | Upevňovací adaptér Mounting adapter Montageadapter | M22-A4 | EATON | 91.061.045 | 1 | /7.5 |
| -SA1/2 | Kontaktní blok - INO Contact block - INO Kontaktblock - INO | M22-K10 | EATON | 91.061.022 | 1 | /7.5 |
| -SA1/3 | Kontaktní blok - INO Contact block - INO Kontaktblock - INO | M22-K10 | EATON | 91.061.022 | 1 | /7.6 |
| -SB1 | Total stop - hlavice + 2xNC Emergency-stop - button + 2xNC Not-Aus-Plz - Taster + 2xNC | YW1B-V4E02R | IDEC | 91.060.084 | 1 | /8.4 |
| -SN1 | Svorka rychloupínací Fastconnect clamp Fast Connect Klemm | WAGO 224-112 | WAGO | 91.250.009 | 3 | /7.8 |

The manufacturer reserves right to use an equivalent replacement device.

| | | | | | | |
|-----|--|--|---|--|--|------------|
| 3.a | BOMAR, s.r.o. Tržební 1236/1 CZ 627 00, Brno | Stroj/Machine/Maschine: Ergonomic 320.258 DG | Název stránky/Name page/Name seiten: Kusovník artiklů / Parts list / Artikelstückliste | Číslo dok./Doc.No./Anzahl der Dokumente.: ES-101.162-T3-V4.0 | | List/Page/ |
| | | | | Napájení/Power supply/Einspeisung: 3x230V + PE, 50/60 Hz | | Seite: 3.b |
| | | | | Zpracoval/Processed /Hat verarbeitet: 31.01.2020 | | Seite: 13 |

| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|---|--|---|--|---|---------------------------------------|--|---|-------------------------------|--------------------------------|
| Kusovník artiklů / Parts list / Stückliste | | | | | | | | | |
| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | | Objednáací číslo Type number Typennummer | | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | | Množství Quantity Menge | Umístění Location Stelle |
| -TR1 | Toroidní transformátor - 400V/230V/20V 3,5A 185VA Toroidal transformer - 400V / 230V / 20V 3.5A 185 VA Ringkerntransformator - 400V / 230V / 20V 3.5A 185 VA | | 400V/230V/20V 3,5A 185VA | | KARBAN s.r.o. | 91.080.041 | | 1 | /6.6 |
| -SQ3 | Bezpečnostní koncový spínač - 2xNC Safety Limit Switch - 2x NC Sicherheitsendschalter - 2x NC | | QKS8 | | KEDU | 91.173.012 | | 1 | /8.4 |
| -SQ1 | Koncový spínač - 1NC+1NO Limit switch - 1NC+1NO Endschalter - 1NC+1NO | | D4N-4A31 | | OMRON | 91.173.007 | | 1 | /7.3 |
| -SQ2 | Koncový spínač - 1NC+1NO Limit switch - 1NC+1NO Endschalter - 1NC+1NO | | D4N-4A31 | | OMRON | 91.173.007 | | 1 | /7.4 |
| -FM1 | Frekvenční měnič - 1.5kW, 3x230VAC Frequency converter - 1.5kW, 3x230VAC Frequenzumrichter - 1.5kW, 3x230VAC | | VFD015EL23A | | DELTA ELECTRONICS, INC. | 91.012.172 | | 1 | /6.2 |
| -DM1 | Usměrňovací můstek - 6A, 100V Rectifier bridge - 6A, 100V Brückengleichrichter - 6A, 100V | | KBU68 | | SOS Electronic, spol. s r.o. | 91.280.019 | | 1 | /6.7 |
| -PA1 | Pojistka válcová - 10A, 10x38, CC Tube fuse - 10A, 10x38, CC Rohrsicherung - 10A, 10x38, CC | | PRO-FER-ATDR10 | | Mersen | 91.230.080 | | 1 | /6.2 |
| -PA1 | Pojistkový odpojovač - 3P CC Fuse disconnecter - 3P CC Sicherungstrenner - 3P CC | | PRO-FER-USCC3 | | Mersen | 91.241.022 | | 1 | /6.2 |
| -PA2 | Pojistka válcová - 2A, 10x38, CC Tube fuse - 2A, 10x38, CC Rohrsicherung - 2A, 10x38, CC | | PRO-FER-ATDR2 | | Mersen | 91.230.079 | | 2 | /6.5 |
| -PA2 | Pojistkový odpojovač - 2P CC Fuse disconnecter - 2P CC Sicherungstrenner - 2P CC | | PRO-FER-USCC2 | | Mersen | 91.241.021 | | 1 | /6.5 |
| -SB2 | Hlavice tlačítka zelená Head green button Head green button | | ZB5AA3 | | TELEMECANIQUE | 91.060.014 | | 1 | /7.5 |
| -SB3 | Hlavice tlačítka černá Button black head Taste Mitesser | | ZB5AA2 | | TELEMECANIQUE | 91.060.013 | | 1 | /7.6 |

The manufacturer reserves right to use an equivalent replacement device.

| | | | | | |
|-----|--|---|---|--|---|
| 3.b | BOMAR, s.r.o. Tržební 1236/1 CZ 627 00, Brno | Stroj/Machine/Maschine: Ergonomic 320.258 DG | Název stránky/Name page/Name seiten: Kusovník artiklů / Parts list / Artikelstückliste | Číslo dok./Doc.No./Anzahl der Dokumente.: ES-101.162-T3-V4.0 Nápis/Power supply/Einspeisung: 3x230V + PE, 50/60 Hz Zpracoval/Processed /Hat verarbeitet: 31.01.2020 | List/Page/ Seite: 3.c List/Page/ Seite: 13 |
|-----|--|---|---|--|---|

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|---|---|---|---|---|---|---|---|---|---|

Kusovník artiklů / Parts list / Stückliste

| Označení přístroje Device identification Geräteidentifikation | Typ přístroje Device description Gerätebeschreibung | Objednáací číslo Type number Typennummer | Výrobce Manufacturer Hersteller | Skladové číslo Part number Lagernummer | Množství Quantity Menge | Umístění Location Stelle |
|---|---|--|---------------------------------------|--|-------------------------------|--------------------------------|
| -SB4 | Hlavice prosvětleného tlačítka žlutá The button head backlit yellow Der Knopf Kopf von hinten beleuchtet gelb | ZB5AW35 | TELEMECANIQUE | 91.060.023 | 1 | /8.7 |
| -SB5 | Hlavice tlačítka černá Button black head Taste Milesser | ZB5AA2 | TELEMECANIQUE | 91.060.013 | 1 | /7.2 |
| -SN1 | Potenciometr 4k7 Potenciometer 4k7 Potenziometer 4k7 | TP195 4k7-N20A | TES-Ostrava | 91.283.002 | 1 | /7.8 |
| -RCF0 | Vstupní odrušovací filtr 10A Inout noise filter 10A Eingangsausfilter 10A | 10EB15/50/CF15 | WIDECOM TECHNOLOGY s.r.o. | 91.041.072 | 1 | /6.2 |

The manufacturer reserves right to use an equivalent replacement device.

| | | | | | | | | | |
|--|--|------------------------|--|---|--|--|--|----------------------|--|
| 3.c | | Struj/Machine/Machine: | | Název stránky/Name page/Name seiten: | | Číslo dok./Doc.No./Anzahl der Dokumente: | | List/Page/ Seite: | |
| BOMAR, s.r.o. Tržební 1236/1 CZ 627 00, Brno | | Ergonomic 320.258 DG | | Kusovník artiklů / Parts list / Artikelstückliste | | ES-101.162-T3-V4.0 Napájení/Power supply/Einspeisung: 3x230V + PE, 50/60 Hz Zpracoval/Processed /Hat verarbeitet: 31.01.2020 | | 3.d | |
| | | | | | | | | List/Page/ Seite: | |
| | | | | | | | | 13 | |

| | | | | | | | | | | | | | | | | | | | |
|---|---|---|-------------------------|---|----------------------|---|---|-------------------------------------|---|--|--|---|--|--------------------|--|------------|--|------------|--|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | | | | | | | | | | |
| <div><div>+R1</div><div>50 mm120 mm338 mm568 mm60 mm25 mm110 mm154 mm314 mm</div></div> | | | | | | | | | | | | | | | | | | | |
| 3.d | | | Stroj/Machine/Maschine: | | Ergonomic 320.258 DG | | | Název stránky/Name page/Name sheet: | | Rozmístění prvků v rozvaděči R1 / Placement of elements in enclosure R1 / Platzierung der Elemente im Schaltschrank R1 | | Číslo dok./Doc.No/Anzahl der Dokumente: | | ES-101.162-T3-V4.0 | | List/Page/ | | List/Page/ | |
| BOMAR, s.r.o. | | | Těžební 1236/1 | | CZ 627 00, Brno | | | Nápis/Power supply/Einspeisung: | | 3x230V + PE, 50/60 Hz | | Zpracoval/Processed /Hat verarbeitet: | | 31.01.2020 | | List/Page/ | | List/Page/ | |
| BOMAR | | | | | | | | Datum/Date/Datum: | | | | | | | | List/Page/ | | List/Page/ | |
| | | | | | | | | | | | | | | | | List/Page/ | | List/Page/ | |
| | | | | | | | | | | | | | | | | List/Page/ | | List/Page/ | |

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |








| | | | | |
|---|---|---|--|--------------------------------|
|  BOMAR s.r.o. Těžební 1236/1 CZ 627 00, Brno | Stroj/Machine/Machine: Ergonomic 320.258 DG | Název stránky/Name page/Name sheet: Príslušenství / Accessoires / Zubehör | Číslo dok./Doc.No/Anzahl der Dokumente.: ES-101.162-T3-V4.0 | List/Page/ Seite: 9 |
| | | | Napájení/Power supply/Einspeisung: 3x230V + PE, 50/60 Hz | List/Page/ Seite: |
| | | | Zpracování/Processed /Hst verarbeitet: Datum/Date/Datum: | List/Page/ Seite: |
| | | | Datum/Date/Datum: | List/Page/ Seite: 13 |

6.4. Hydraulické schema / Hydraulisches Schéma / Hydraulic diagram

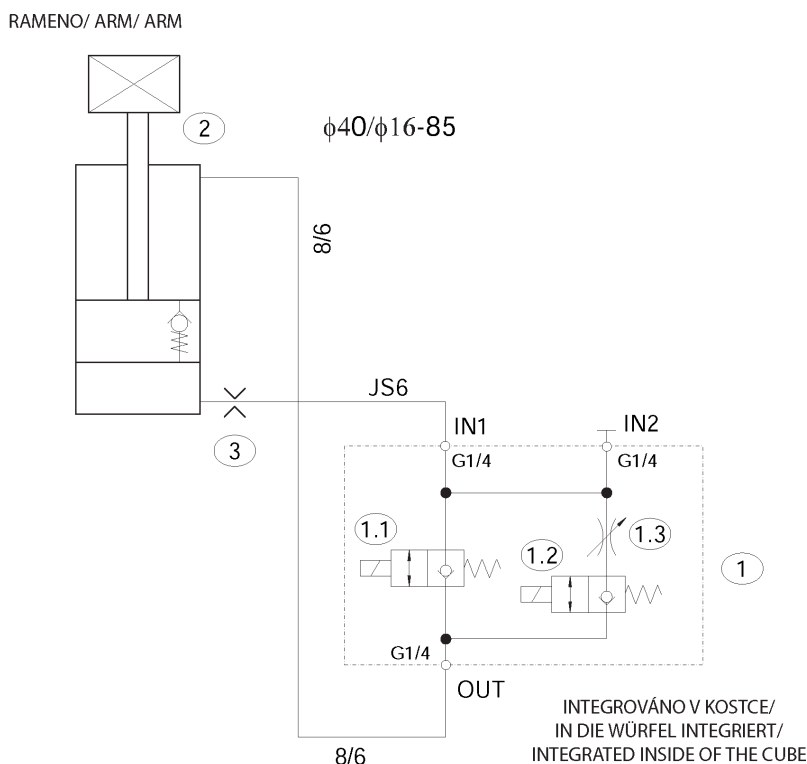

POHYB VZHŮRU MANUÁLNÍ, POHYB DOLŮ VYVOZEN TÍHOU RAMENE
(RAMENO ZAVĚŠENO NA KLOUBU S KOMPENZAČNÍMI PRUŽINAMI)/
BEWEGUNG AUFWÄRTS MANUELL, BEWEGUNG ABWÄRTS MIT DEM GEWICHT
DES ARMES GESHAFT (DAS ARM IST AN DEM GELENK MIT AUSGLEICHSPEDERN GEHÄNGT)
UPWARD MOVEMENT OF THE SAW ARM IS MANUAL, DOWNWARD MOVEMENT IS CAUSED
BY THE WEIGHT OF THE ARM (THE ARM IS HUNG ON A JOINT WITH COMPENSATING SPRINGS)

Elektrický proud procházející cívkami/
Der elektrische Strom, der durch den Spülen fließt/
Electric current passing through the coils: 0,708 A

Typ / Type / Type

Ergonomic 320.250 DGS, Ergonomic 275.230 DGS

Neuvedené světlosti / Unerwähnt Lichtbreite / Unlisted inside diameters

Hydraulická hadice/ Hydraulikschläuche/ Hydraulic hose JS6
Pneumatická hadice/ Druckluftschlauch/ Pneumatic hose 8/6

Pmax (ventily/ ventilen/ valves 1.1, 1.2)


10 bar

| Poz. | Název položky | Typ | Popis | Poznámka | ks |
|------|---|---|--|---|-------|
| Pos. | Bezeichnung | Typ | Beschreibung | Hinweis | Menge |
| Pos. | Item | Type | Description | Note | Pcs. |
| 1 | Kostka ventilů / Ventilklotz / Valve cube | 92.153.071 | | f.FMV | 1 |
| 1.1 | Rozvaděč / Schaltschrank / Switchboard | Sedlový / Sitzverteilerventil/ Saddle valve / | Totalstop | Ovlád. napětí / Steuerspannung / Control voltage 24V DC | 1 |
| 1.2 | Rozvaděč / Schaltschrank / Switchboard | Sedlový / Sitzverteilerventil/ Saddle valve | Rychloposuv/ Eilgang / Speed shift | Ovlád. napětí / Steuerspannung / Control voltage 24V DC | 1 |
| 1.3 | Škrťací ventil / Drosselventil / Throttle valve | Jehlový / Nadeldrosselventil/ Needle valve | | Rozsah / Anwendungsbereich /Range 0 - 360° (0,1,2,...,7) | 1 |
| 2 | Zdvíhací válec / Hubzylinder / Lift cylinder | 201.ER257-010 | Bomar | Přepouštěcí / Überlaufhubzylinder/ By pass cylinder | 1 |
| 3 | Clona / Schürze / Shield | 30.0911-044 | Bomar | 1mm | 1 |

7. Výkresy sestav pro objednání náhradních dílů / Zeichnungen für Bestellung der Ersatzteile / Drawing assemblies for spare parts order

- Při objednávání náhradních dílů vždy uvádějte: typ stroje (např. Ergonomic 320.258 DG), výrobní číslo (např. 125) a rok výroby (např. 1999).
- In die Bestellung der Ersatzteile führen Sie immer an: Maschinentyp (z. B. Ergonomic 320.258 DG), Serien Nr. (z. B. 125) und Baujahr (z. B. 1999).
- For spare parts order, you must always to allege: type of machine (for example Ergonomic 320.258 DG), serial number (for example 125, see cover page) and year of construction (for example 1999).

7.1. Ergonomic 320.258 DG

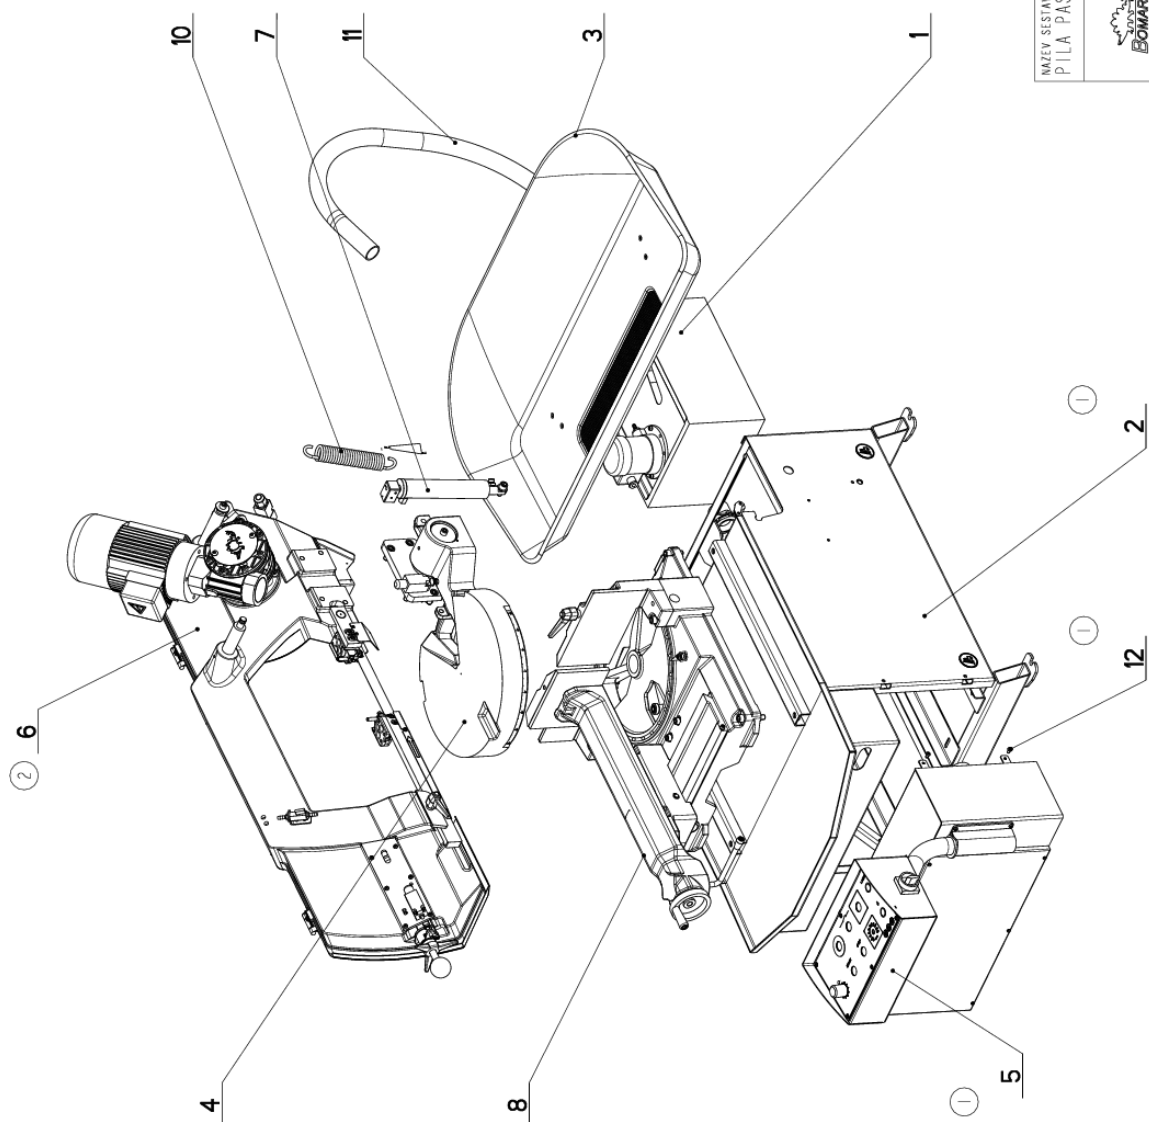

DORAZ: 201.ER259-120
UPINANI HORNI: 201.ER2514-110

| NAZEV SESTAVY | CISLO SESTAVY | STROJ |
|---------------------|---------------|-----------|
| PILA PASOVA | 201.ER250-100 | ERG250DGS |
| Konstruoval: MUSIL | | |
| Datum: 06. 11. 2017 | | |
| Meritko: 1:10 | | |



7.2. Kusovník / Piece list / Stückliste - Ergonomic 320.258 DG

| Cislo Sestavy 201.ER250-100 | | Ver. 2 | Nazev sestavy PILA PASOVA/BAND SAW/BANDSÄGE | | |
|--------------------------------|--------------------|-----------|--|--------------------------------|----|
| Poz. | Objednací číslo | Ver. | Nazev položky | Rozmer | Ks |
| 1 | 201.0506-100 | 6 | CHLAZENÍ / COOLING / KÜHLUNG | | 1 |
| 2 | 201.ER251-110 (1) | 1 | PODSTAVEC / BASE / UNTERSATZ | | 1 |
| 3 | 201.ER251-302 | 2 | VANA / TANK / WANNE | | 1 |
| 4 | 201.ER252-100 | 0 | KONZOLA OTOCNA / TURNABLE CONSOL / DREHKONSOLE | | 1 |
| 5 | 201.ER2530-010 (1) | 0 | ROZVADEC ELEKTRO / ELECTRO DISTRIBUTOR / SCHALTSCHRAUK | | 1 |
| 6 | 201.ER254-100 (2) | 0 | RAMENO / SAW ARM / SÄGERAHMEN | | 1 |
| 7 | 201.ER257-010 | 3 | VALEC ZVEDACÍ / LIFTING CYLINDER / HEBEZYLINDER | | 1 |
| 8 | 201.ER259-100 | 1 | STUHL / TABLE / TISCH | | 1 |
| 9 | 30.ER299-001 | 0 | STITEK TYPOVÝ / MACHINE LABEL / MASCHINE SCHILD | P 0.5x65 | 1 |
| 10 | 31.ER254-006 | 0 | PRUŽINA / SPRING / FEDER | d 6,3 | 1 |
| 11 | 41.001.005 | 0 | HADICE / HOSE / SCHLAUCH | PG36 | 1 |
| 12 | 90.013.27.007 (1) | 0 | SROUB PULKULATÝ / HALF ROUND BOLT / HALBRUNDSCHRAUBE | M6x10 | 4 |
| 13 | 99.900.040 | 0 | SAMOLEPKA / STICKER / AUFKLEBER | | 1 |
| 14 | 99.900.045 | 0 | SAMOLEPKA / STICKER / AUFKLEBER | | 2 |
| 15 | 99.900.053 | 0 | SAMOLEPKA / STICKER / AUFKLEBER | | 1 |
| 16 | 99.900.068 | 0 | SAMOLEPKA / STICKER / AUFKLEBER | použití vysokozvýšeného vozíku | 4 |

1. ZRUS, PODSTAVEC 201.ER251-100 A NAHR. 201.ER251-110 ZRUS.OVLADACÍ. PANEL 201.0513-340, NAHR. ROZVADECEM 201.ER2530-010,
PRID. 2x SROUB M6x10 90.013.27.007. 072/ZMI48 13.6.2017 SLEZACKOVA
2. ZRUS. RAMENO 201.ER254-000 A NAHR. 201.ER254-100 127/ZMI66 24.4.2019 IVICIC

Cislo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Police (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.3. Ergonomic 320.258 DG

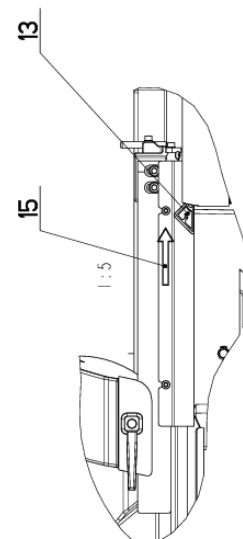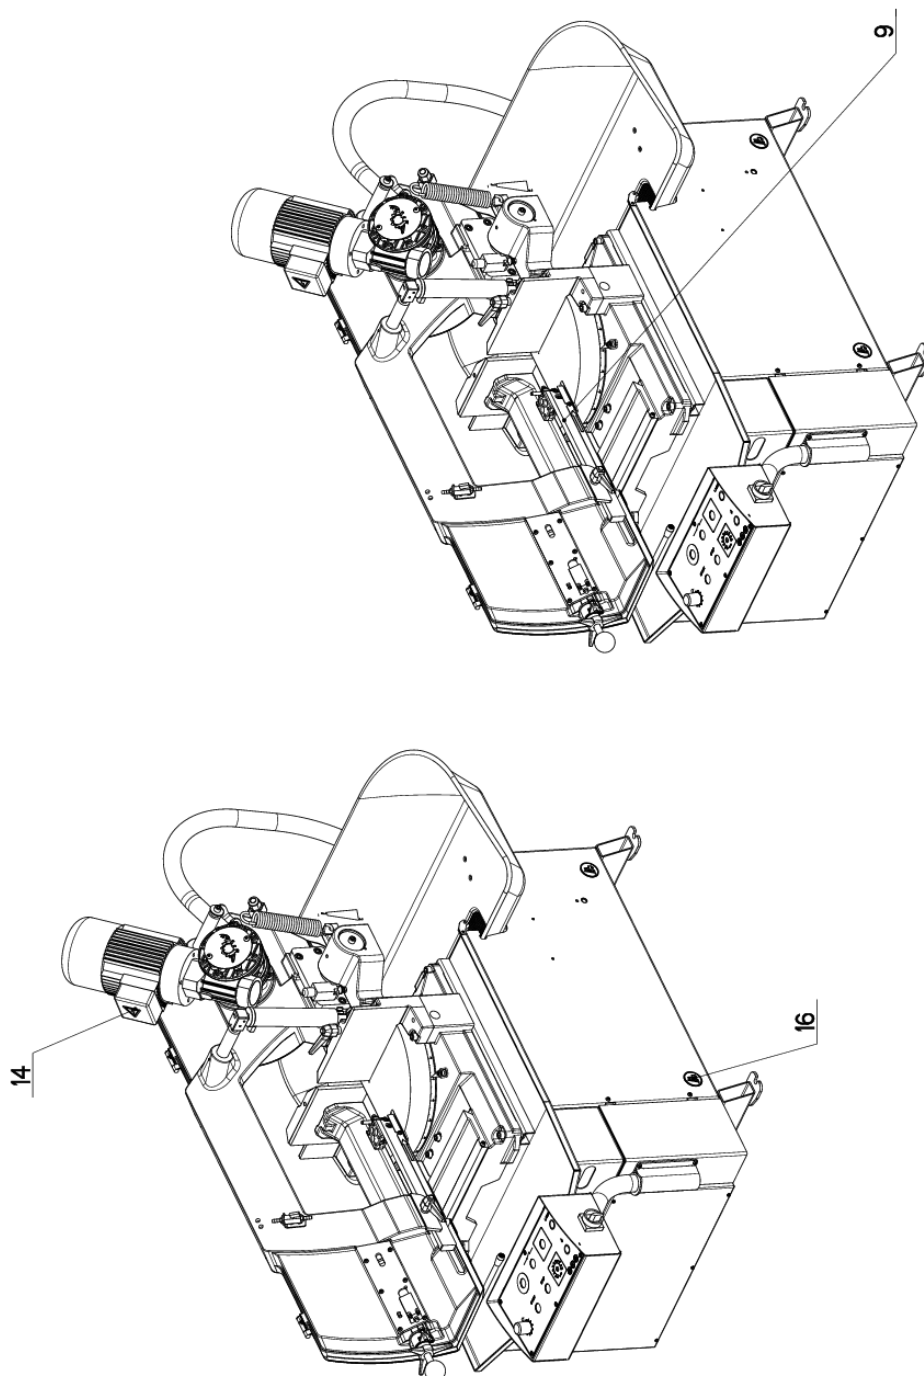

| | | |
|------------------------------|--------------------------------|--------------------|
| NAZEV SESTAVY PILA PASOVA | CISLO SESTAVY 201.ER250-100 | STROJ ERG250DGS |
| Konstruoval: MUSIL | | |
| Datum: 06. 11. 2017 | | |
| Meritko: 1:10 | | |


7.4. Kusovník / Piece list / Stückliste - Ergonomic 320.258 DG


| Cislo Sestavy 201.ER250-100 | | Ver. 2 | Nazev sestavy PILA PASOVA/BAND SAW/BANDSÄGE | | |
|--------------------------------|--------------------|-----------|--|--------------------------------|----|
| Poz. | Objednací číslo | Ver. | Nazev položky | Rozmer | Ks |
| 1 | 201.0506-100 | 6 | CHLAZENÍ / COOLING / KÜHLUNG | | 1 |
| 2 | 201.ER251-110 (1) | 1 | PODSTAVEC / BASE / UNTERSATZ | | 1 |
| 3 | 201.ER251-302 | 2 | VANA / TANK / WANNE | | 1 |
| 4 | 201.ER252-100 | 0 | KONZOLA OTOCNA / TURNABLE CONSOL / DREHKONSOLE | | 1 |
| 5 | 201.ER2530-010 (1) | 0 | ROZVADEC ELEKTRO / ELECTRO DISTRIBUTOR / SCHALTSCHRAUK | | 1 |
| 6 | 201.ER254-100 (2) | 0 | RAMENO / SAW ARM / SÄGERAHMEN | | 1 |
| 7 | 201.ER257-010 | 3 | VALEC ZVEDACÍ / LIFTING CYLINDER / HEBEZYLINDER | | 1 |
| 8 | 201.ER259-100 | 1 | STUL / TABLE / TISCH | | 1 |
| 9 | 30.ER299-001 | 0 | STITEK TYPOVÝ / MACHINE LABEL / MASCHINE SCHILD | P 0.5x65 | 1 |
| 10 | 31.ER254-006 | 0 | PRUŽINA / SPRING / FEDER | d 6,3 | 1 |
| 11 | 41.001.005 | 0 | HADICE / HOSE / SCHLAUCH | PG36 | 1 |
| 12 | 90.013.27.007 (1) | 0 | SROUB PULKULATÝ / HALF ROUND BOLT / HALBRUNDSCHRAUBE | M6x10 | 4 |
| 13 | 99.900.040 | 0 | SAMOLEPKA / STICKER / AUFKLEBER | | 1 |
| 14 | 99.900.045 | 0 | SAMOLEPKA / STICKER / AUFKLEBER | | 2 |
| 15 | 99.900.053 | 0 | SAMOLEPKA / STICKER / AUFKLEBER | | 1 |
| 16 | 99.900.068 | 0 | SAMOLEPKA / STICKER / AUFKLEBER | použití vysokozvýšeného vozíku | 4 |

1. ZRUS, PODSTAVEC 201.ER251-100 A NAHR. 201.ER251-110 ZRUS.OVLADACI. PANEL 201.0513-340, NAHR. ROZVADECEM 201.ER2530-010,
PRID. 2x SROUB M6x10 90.013.27.007. 072/ZMI48 13.6.2017 SLEZACKOVA
2. ZRUS. RAMENO 201.ER254-000 A NAHR. 201.ER254-100 127/ZMI66 24.4.2019 IVICIC

Cislo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Police (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.5. Chlazení / Cooling / Kühlung

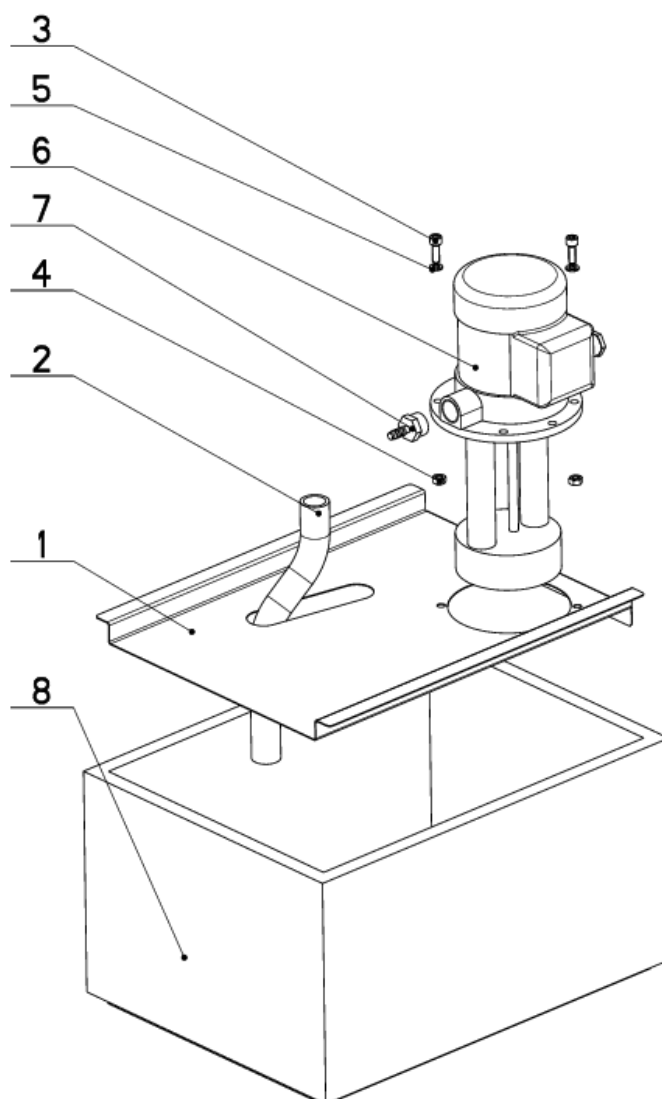
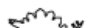
| | | |
|---|-------------------------------|------------------|
| NAZEV SESTAVY CHLAZENÍ | ČÍSLO SESTAVY 201.0506-100 | STROJ ERGO250 |
|  | Konstruoval: NEUMANN | |
| | Datum: 15. 08.2018 | |
| | Meritko: 1:5 | |

7.6. Kusovník / Piece list / Stückliste - Chlazení / Cooling / Kühlung

| Císlo Sestavy 201.0506-100 | | Ver. 6 | Název sestavy CHLAZENÍ/COOLING/KÜHLUNG | | |
|-------------------------------|-------------------|-----------|--|-------------|----|
| Poz. | Objednáci číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 30.8006-501 (5) | 2 | VÍKO / COVER / DECKEL | P 0.8 x329 | 1 |
| 2 | 42.020.003 | 0 | HADICE / HOSE / SCHLAUCH | 19x3 | 1 |
| 3 | 90.001.25.076 (6) | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M6x18 | 2 |
| 4 | 90.100.55.004 (6) | 0 | MATICE / NUT / MUTTER | MATICE - M6 | 2 |
| 5 | 90.152.50.001 (6) | 0 | PODL. VEJÍROVA ZN / / | 6.4 | 2 |
| 6 | 91.020.035 (4) | 0 | CERPADLO CHLAZENÍ / COOLING PUMP / KÜHLMITTELPUMPE | 230/400V | 1 |
| 7 | 94.202.020 (4) | 0 | REDUKCE / REDUCTION / REDUKTION | 1/2"-6 | 1 |
| 8 | 94.403.003 | 0 | NADŘÍZ / CONTAINER / BEHALTER | | 1 |

1. ZRUS. CERPADLO 91.020.005 A NAHR. 91.020.019, ZRUS. VÍKO 30.0506-201 A NAHR. 30.8006-301, ZRUS. SOUC. 30.0506-003,
90.100.55.004, 94.202.005, 42.020.001, 99.260.001, 94.202.002. 299/ZM274 12.11.2013 SLEZACKOVA

2. PRIDANO SITO 30.8006-002. 024/ZM100 27.4.2016 SLEZACKOVA

3. ZRUSEN DRZAK 30.8006-002 A NAHR. 30.ER251-014. 155/ZM281 16.9.2016 SLEZACKOVA

4. ZRUS. CERPADLO 91.020.019 A NAHR. 91.020.035, ZRUS. VÍKO 30.8006-301 A NAHR. 30.8006-401, ZRUS. DRZAK 30.ER251-014,
PRID. REDUKCE 94.202.020, 4xPODLOZKA 6,4(90.152.50.001), 4xMATICE M6(90.100.55.004), 4xSROUB M6x18(90.001.25.076)
112/ZM151 19.4.2017 SLEZACKOVA


5. ZRUSENO VÍKO 30.8006-401 A NAHR. 30.8006-501. 127/ZM172 10.5.2017 SLEZACKOVA

6. ZM. POCTU ZE 4 DILU SROUBENÍ NA 2: 90.001.25.076, 90.100.55.004, 90.152.50.001. 159/ZM284 15.8.2018 SZABARI

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednáci číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

Císlo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednáací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.7. Podstavec / Base / Untersatz

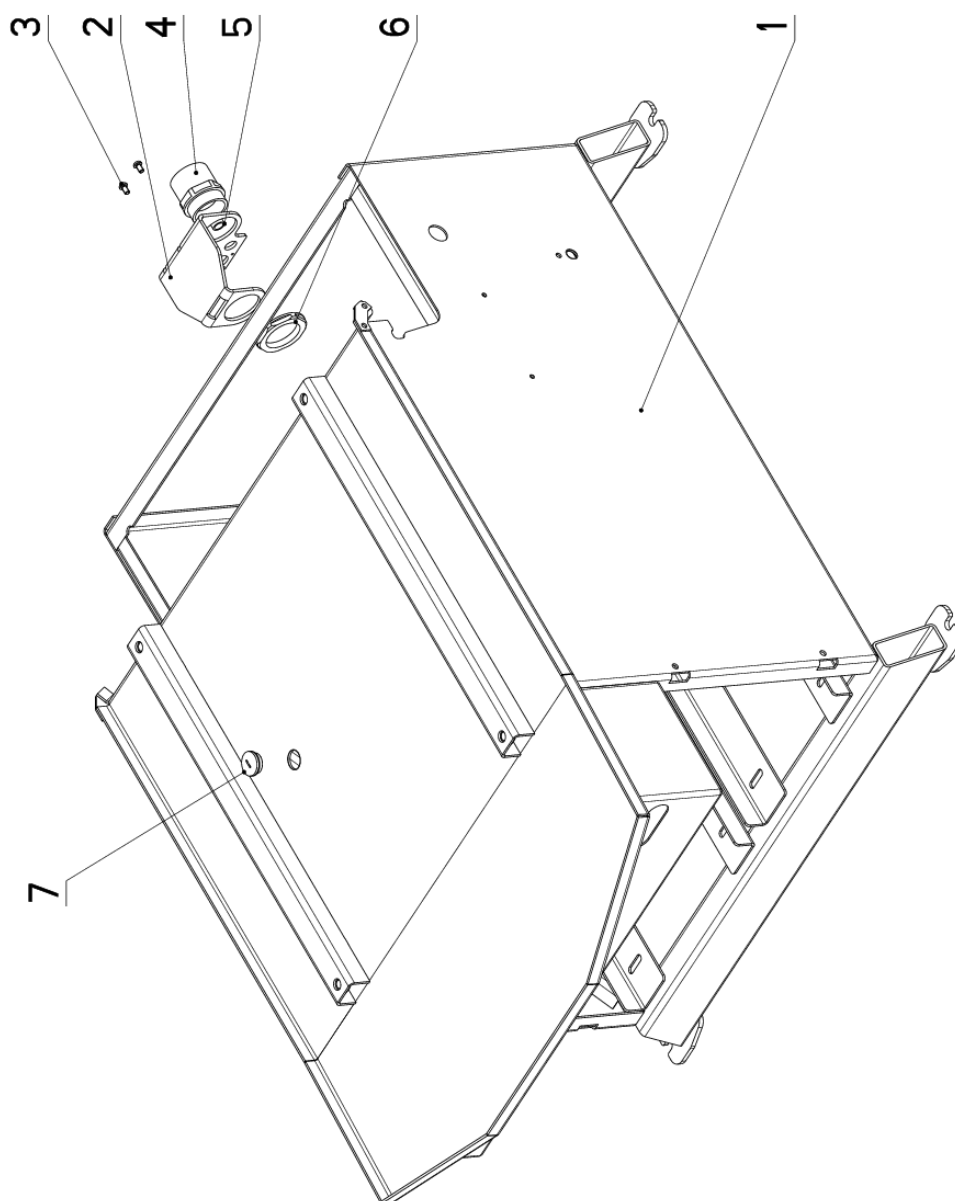

| | | |
|----------------------------|--------------------------------|---------------------|
| NAZEV SESTAVY PODSTAVEC | CÍSLO SESTAVY 201.ER251-110 | STROJ EGO 250DGS |
| Konstruoval: MUSIL | | |
| Datum: 19. 06. 2018 | | |
| Měřítko: 1:5 | | |


7.8. Kusovník / Piece list / Stückliste - Podstavec / Base / Untersatz


| Císlo Sestavy 201.ER251-110 | | Ver. 1 | Název sestavy PODSTAVEC/BASE/UNTERSATZ | | |
|--------------------------------|-----------------|-----------|--|---------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 30.ER251-111 | 2 | PODSTAVEC / BASE / UNTERSATZ | | 1 |
| 2 | 30.ER251-604 | 1 | DRŽÁK / HOLDER / HALTER | P4x110 | 1 |
| 3 | 90.013.27.007 | 0 | ŠROUB PULKULATÝ / HALF ROUND BOLT / HALBRUNDSCHRAUBE | M6x10 | 2 |
| 4 | 91.071.005 | 0 | PRŮCHODKA / LEADTHROUGH / DURCHFÜHRUNG | | 1 |
| 5 | 91.071.015 | 0 | VÝVODKA / BUSHING / TÜLLE | | 1 |
| 6 | 91.072.008 | 0 | MATICE / NUT / MUTTER | | 1 |
| 7 | 91.074.013 (1) | 0 | UCPAVKA / PLUG / STOPFEN | M25x1,5 | 1 |

1. PRIDANA UCPAVKA 91.074.013. 219/ZM315 18.10.2017 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.9. Vana/ Tank/ Wanne

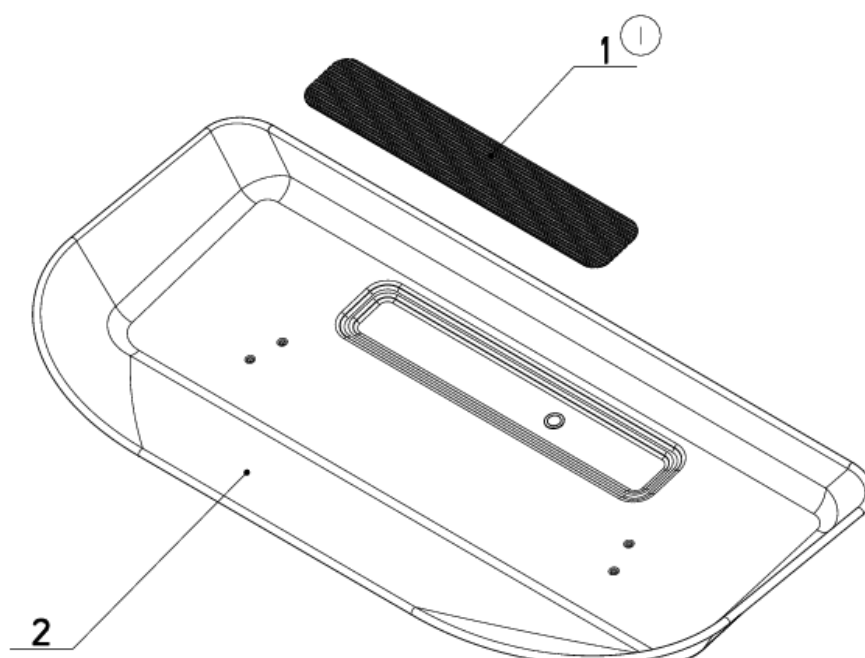

| | | |
|---|--------------------------------|-------------------|
| NAZEV SESTAVY VANA | CISLO SESTAVY 201.ER251-302 | STROJ ERGO.250 |
|  | Konstruoval: FABER | |
| | Datum: 23. 10.2017 | |
| | Meritko: 13:100 | |

7.10. Kusovník / Piece list / Stückliste - Vana/ Tank/ Wanne


| Císlo Sestavy 201.ER251-302 | | Ver. 2 | Název sestavy VANA / TANK / WANNE | |
|--------------------------------|------------------|-----------|--------------------------------------|--------|
| Poz. | Objednáci číslo | Ver. | Název položky | Rozměr |
| 1 | 30.ER251-304 (1) | 0 | SITO / SIEVE / GITTERWERK | Plx95 |
| 2 | 30.ER251-305 | 1 | VANA / TANK / WANNE | |

1. PRIDAN KROUZEK 20x2(96.002.046), PODLOZKA 20(90.167.00.001), ZRUS.VANA 31.ER251-302.1 A NAHR.30.ER251-305.
213/ZM177 9.6.2016 SLEZACKOVA

2. ZRUS. TRUBKA 30.ER251-303, PODLOZKA 90.167.00.001, KROUZEK 96.002.046. 265/ZM345 21.10.2016 SLEZACKOVA

| | | | | |
|--|--|--|--|--|
| Císlo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position; Objednáci číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung | | | | |
|--|--|--|--|--|

7.11. Konzola otočná / Turnable consol / Drehkonsole

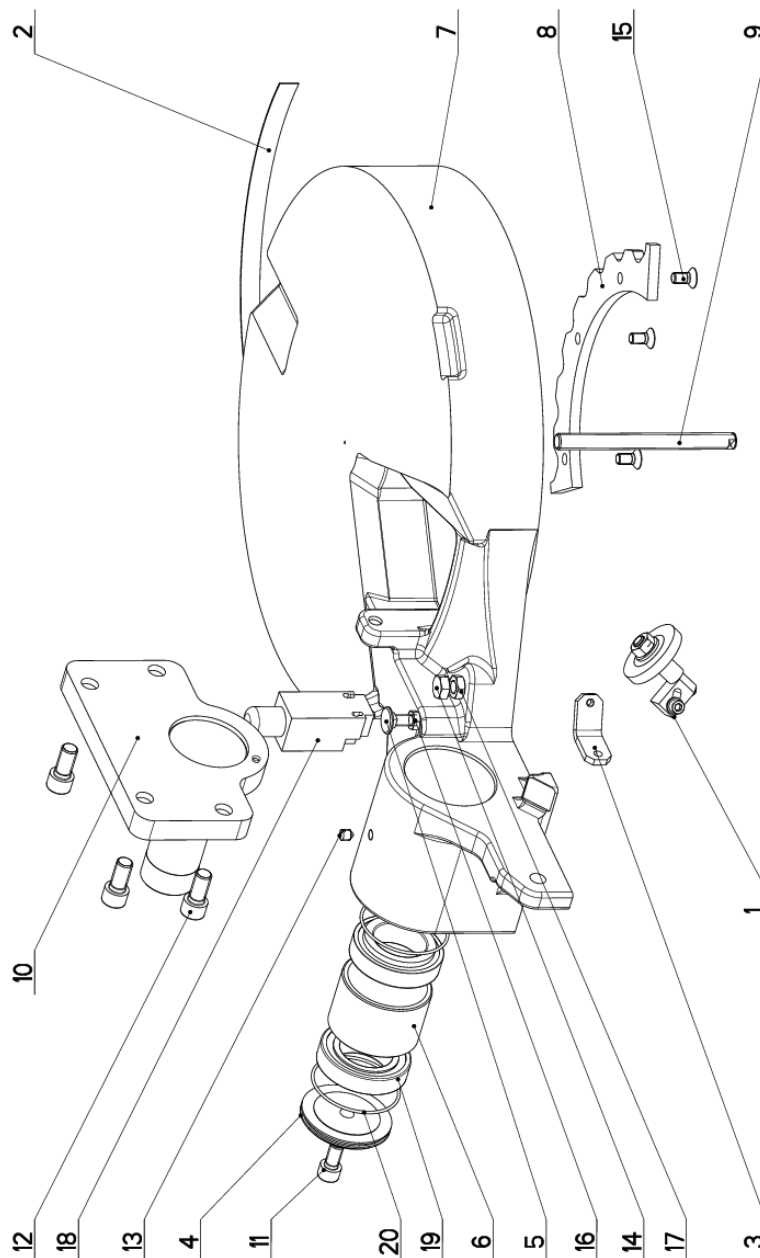


| | | |
|---------------------------------|--------------------------------|---------------------|
| NAZEV SESTAVY KONZOLA OTOCNA | CISLO SESTAVY 201.ER252-100 | STROJ ERG0250DGS |
| Konstruoval: MUSIL | | |
| Datum: 05. 01.2016 | | |
| Meritko: 33:100 | | |

7.12. Kusovník / Piece list / Stückliste - Konzola otočná / Turnable consol / Drehkonsole

| Císlo Sestavy 201.ER252-100 | | Ver. 0 | Název sestavy KONZOLA OTOČNÁ/TURNABLE CONSOL/DREHKONSOLE | | |
|--------------------------------|-----------------|-----------|---|--------------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 201.0704-100 | 0 | KARTAC / BRUSH / BÜRSTE | | 1 |
| 2 | 30.0502-605 | 0 | MÉRITKO / MEASURE / SKALA | P 0.5 x15 | 1 |
| 3 | 30.0514-603 | 0 | DRŽÁK / HOLDER / HALTER | P 5x20 | 1 |
| 4 | 30.0702-012 | 0 | VÍKO / COVER / DECKEL | d 70 | 1 |
| 5 | 30.0702-013 | 0 | SROUB / BOLT / SCHRAUBE | M8 | 1 |
| 6 | 30.8002-403 | 0 | POUZDRO / SLEEVE / BÜCHSE | TR 70x5 | 1 |
| 7 | 30.ER252-101 | 0 | KONZOLA OTOČNÁ / TURNABLE CONSOL / DREHKONSOLE | | 1 |
| 8 | 30.ER252-102 | 0 | SEGMENT / SEGMENT / SEGMENT | P 8x105 | 1 |
| 9 | 30.ER252-103 | 0 | SROUB / BOLT / SCHRAUBE | M12 | 1 |
| 10 | 30.ER252-114 | 0 | KONZOLA / CONSOLE / KONSOLE | | 1 |
| 11 | 90.001.25.046 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M10x20 | 1 |
| 12 | 90.001.25.057 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M12x25 | 4 |
| 13 | 90.003.20.010 | 0 | SROUB STAVEČI / ADJUSTMENT BOLT / STELLSCHRAUBE | SROUB M8x10 | 1 |
| 14 | 90.005.55.024 | 0 | SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE | SROUB M10x25 | 1 |
| 15 | 90.011.27.012 | 0 | SROUB ZAPUSTNÝ / COUNTERSINK BOLT / SENKSCHRAUBE | SROUB M8x16 | 3 |
| 16 | 90.101.55.001 | 0 | MATICE / NUT / MUTTER | MATICE M8 | 1 |
| 17 | 90.101.55.002 | 0 | MATICE / NUT / MUTTER | MATICE M10 | 1 |
| 18 | 91.173.007 | 0 | SPINAC KONCOVÝ / END SWITCH / ENDSCHALTER | | 1 |
| 19 | 95.300.002 | 0 | LOŽISKO KUŽELÍK / BEARING / LAGER | | 2 |
| 20 | 96.001.018 | 0 | TESNENÍ / SEALING / DICHTUNG | 32008AX | 2 |

Císlo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.13. Kartáč / Brush / Bürste

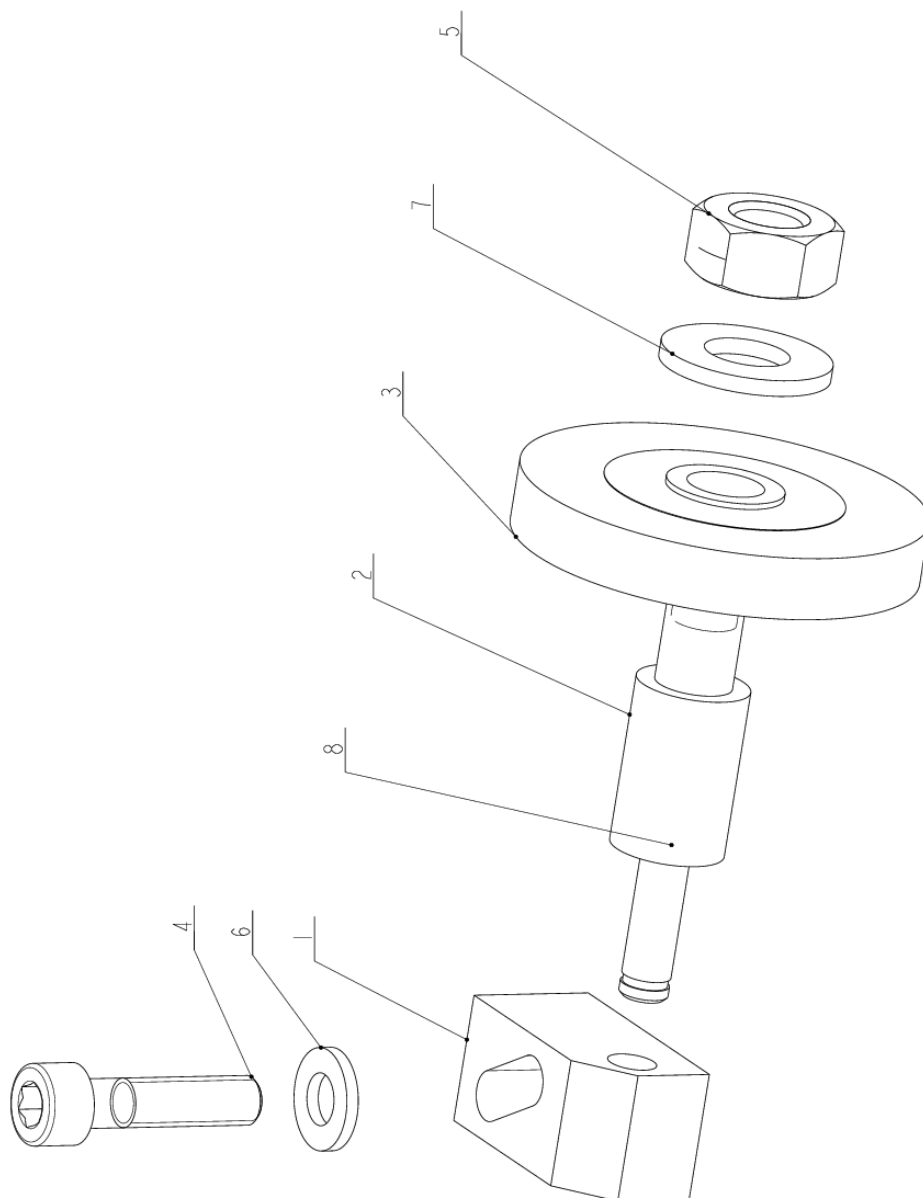

| | | |
|--------------------------|-------------------------------|-------|
| NAZEV SESTAVY KARTAC | CISLO SESTAVY 201.0704-100 | STROJ |
| Konstruoval: VINOHRADSKY | | |
| Datum: 23. 03.2018 | | |
| Meritko: 2:1 | | |


7.14. Kusovník / Piece list / Stückliste - Kartáč / Brush / Bürste

| Cislo Sestavy 201.0704-100 | | Ver. 0 | Název sestavy KARTAC/BRUSH/BÜRSTE | | | |
|-------------------------------|-----------------|-----------|---|--------------------|----|--|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks | |
| 1 | 30.0104-022 | 0 | DRŽÁK / HOLDER / HALTER | HR 16x16 | 1 | |
| 2 | 30.0704-029 | 0 | HRDEL / SHAFT / WELLE | d 14 | 1 | |
| 3 | 31.0704-031 | 0 | KARTAC / BRUSH / BÜRSTE | D 50 / d 9.5 | 1 | |
| 4 | 90.001.25.019 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSHSCRAUBE | M6x25 | 1 | |
| 5 | 90.100.55.006 | 0 | MATICE / NUT / MUTTER | MATICE _ M10 | 1 | |
| 6 | 90.150.50.004 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHLEIBE | PODLOŽKA 6,4 | 1 | |
| 7 | 90.150.50.006 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHLEIBE | PODLOŽKA 10,5 | 1 | |
| 8 | 95.800.001 | 0 | KROUZEK POJIST.VNEJS / OUTSIDE SAFETY RING / SICHERUNGSRING AUßEN | POJISTNY KROUZEK 6 | 1 | |

Cislo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung


7.15. Rozvaděč elektro / Electro distributor / Schaltschrank

| Císlu Sestavy 201.ER2530-010 | | Ver. 0 | Název sestavy ROZVADEC ELEKTRO/ELECTRO DISTRIBUTOR/SCHALTSCHRANK | | |
|---------------------------------|-----------------|-----------|---|-----------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 201.0513-340 | 1 | OVLADACÍ PANEL / CONTROL PANEL / BEDIENPULT | | 1 |
| 2 | 30.0513-304 | 4 | PANEL / PANEL / PANEL | P 1,5x314 | 1 |
| 3 | 30.ER2530-011 | 0 | ROZVADEC ELEKTRO / ELECTRO DISTRIBUTOR / SCHALTSCHRANK | | 1 |
| 4 | 30.ER2530-012 | 0 | VÍKRO / COVER / DECKEL | | 1 |
| 5 | 91.071.022 | 0 | VÝVODKA / BUSHING / TÜLLE | | 1 |
| 6 | 91.072.016 | 0 | MATICE / NUT / MUTTER | | 1 |

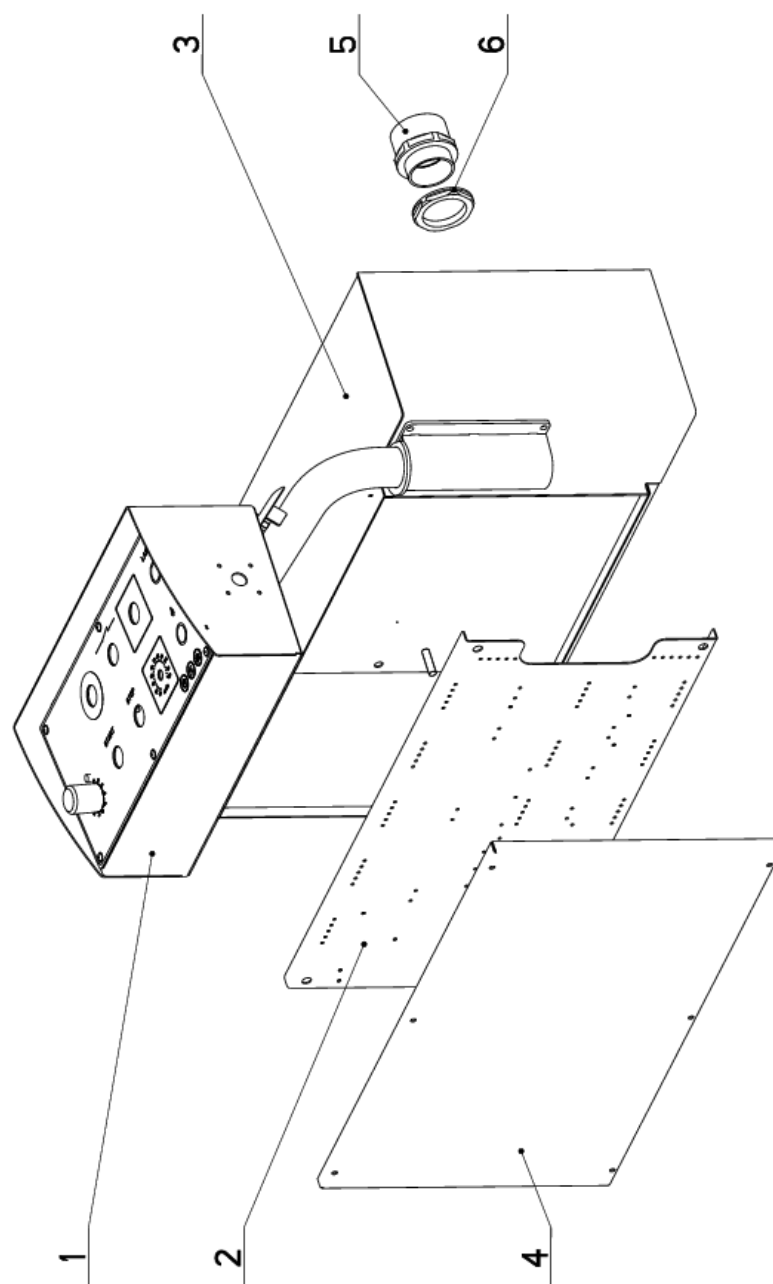

Císlu Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.16. Ovládací panel / Control panel / Bedienpult

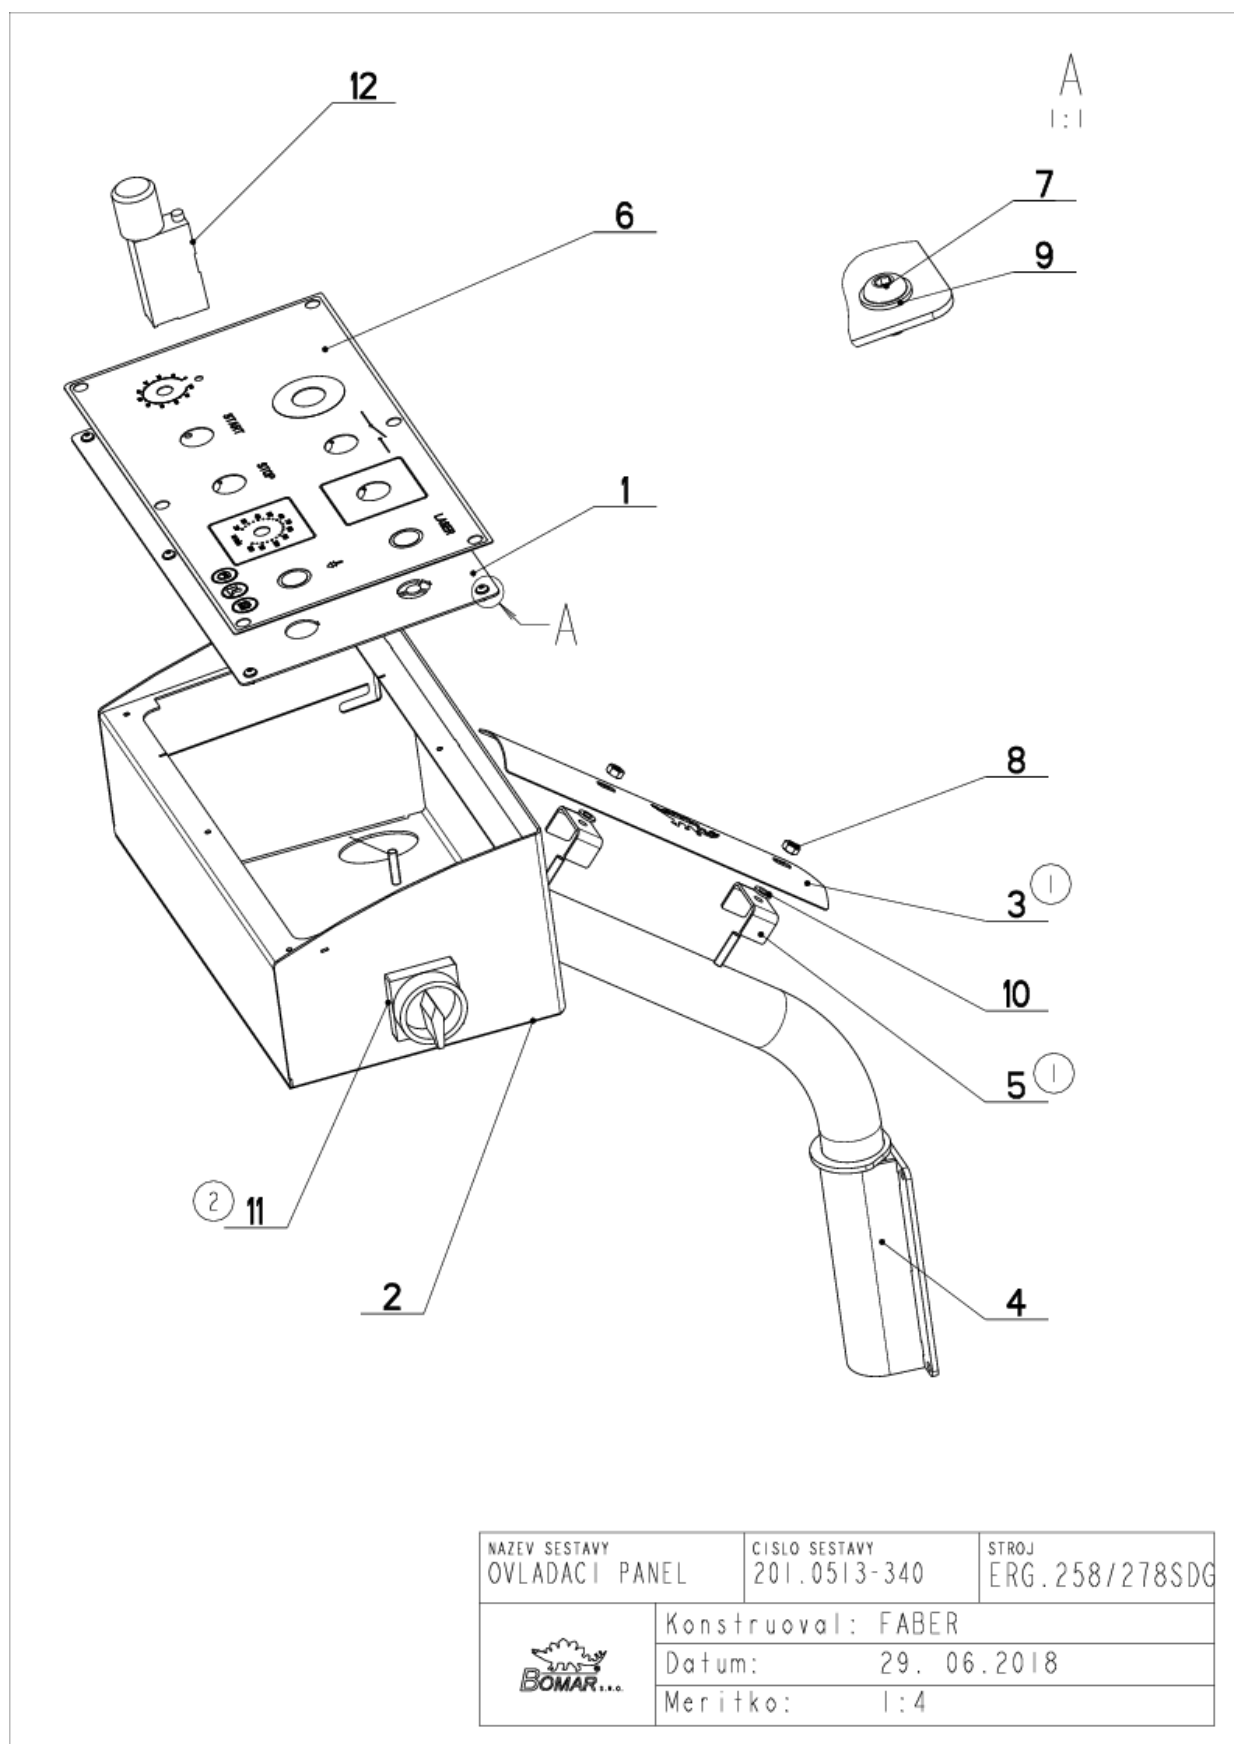

7.17. Kusovník / Piece list / Stückliste

Ovládací panel / Control panel / Bedienpult


| Císlo Sestavy 201.0513-340 | | Ver. 2 | Název sestavy OVLADACÍ PANEL/CONTROL PANEL/BEDIENPULT | | |
|-------------------------------|-------------------|-----------|--|-----------------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 30.0513-241 | 0 | OVLADACÍ PANEL / CONTROL PANEL / BEDIENPULT | | 1 |
| 2 | 30.0513-320 | 0 | NOHA / LEG / STANDER | | 1 |
| 3 | 30.0513-344 (1) | 0 | KRYT / COVER / ABDECKUNG | P 1x64 | 1 |
| 4 | 30.2814-607 | 2 | DRŽAK / HOLDER / HALTER | | 1 |
| 5 | 30.ER2530-308 (1) | 0 | DRŽAK / HOLDER / HALTER | P 2x20 | 2 |
| 6 | 31.0513-404 | 0 | SAMOLEPKA / STICKER / AUFKLEBER | | 1 |
| 7 | 90.013.27.001 | 0 | SROUB / BOLT / SCHRAUBE | M4x8 | 6 |
| 8 | 90.100.55.004 | 0 | MATICE / NUT / MUTTER | MATICE _ M6 | 2 |
| 9 | 90.150.50.002 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHEIBE | PODLOŽKA 4,3 | 6 |
| 10 | 90.150.50.004 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHEIBE | PODLOŽKA 6,4 | 2 |
| 11 | 91.170.028 (2) | 0 | VYPINAC / SWITCH / SCHALTER | VYPINAC | 1 |
| 12 | 92.152.001 | 0 | VENTIL SKRTICI / CHOKE VALVE / DROSSELVENTIL | VS01-04/R 2.5-0 | 1 |

1. ZRUS. DRŽAK 30.9307-109 A NAHR. 30.ER2530-308, PRID. KRYT 30.0513-344. 155/ZM365 10.11.2016 SLEZACKOVA

2. PRID. 1xVYPINAC 91.170.028; 115/ZM213 29.6.2018 SCERBA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Police (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.18. Rameno / Saw arm / Sägerahmen

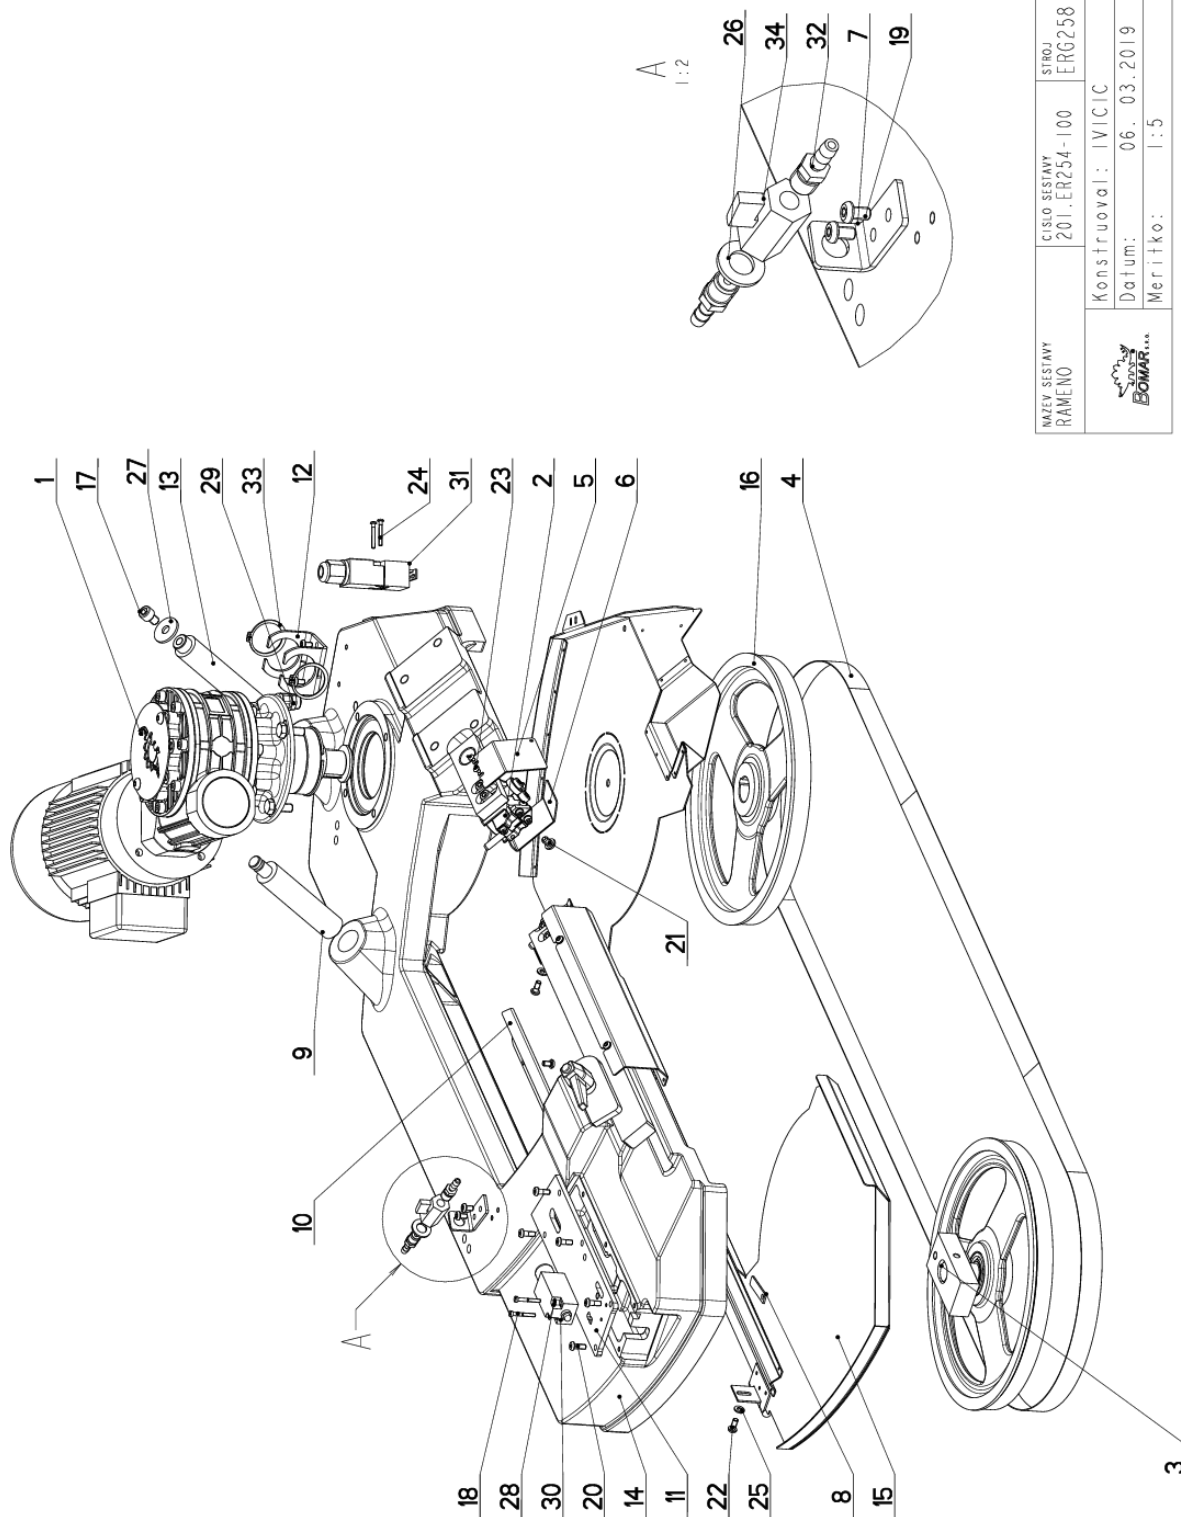


| | | |
|-------------------------|--------------------------------|-----------------|
| NAZEV SESTAVY RAMENO | CÍSLO SESTAVY 201.ER254-100 | STROJ ERG258 |
| Konstruoval: IVICIC | | |
| Datum: 06. 03.2019 | | |
| Meritko: 1:5 | | |

7.19. Kusovník / Piece list / Stückliste - Rameno / Saw arm / Sägerahmen

| Cislo Sestavy 201.ER254-100 | | Ver. 0 | Název sestavy RAMENO / SAW ARM / SÄGERAHMEN | | Rozměr | | Ks |
|--------------------------------|-----------------|-----------|---|--|--------|---------------------|----|
| Poz. | Objednací číslo | Ver. | Název položky | | | | |
| 1 | 201.ER255-100 | 0 | POHON / DRIVE / ANTRIEB | | | | 1 |
| 2 | 201.ER256-000 | 2 | VEDENÍ PASU / BELT GUIDE / SÄGEBANDFÜHRUNG | | | | 1 |
| 3 | 201.ER258-000 | 0 | MAPINANI / TENSIONING / SPANNUNG | | | | 1 |
| 4 | 30.0504-961 | 0 | PAS PILONY / SAW BELT / SÄGEBAND | | | 2910x25x71x0.9 | 1 |
| 5 | 30.0704-038 | 0 | KRYT PASU / BELT COVER / BANDABDECKUNG | | | P 1.5x60 | 1 |
| 6 | 30.0704-043 | 0 | KRYT PASU / BELT COVER / BANDABDECKUNG | | | P 1.5x46 | 1 |
| 7 | 30.1814-011 | 2 | DRŽAK / HOLDER / HALTER | | | P 3x76 | 1 |
| 8 | 30.ER254-002 | 0 | PLECH / PLATE / BLECH | | | P 2x12 | 1 |
| 9 | 30.ER254-003 | 1 | CEP / LUG / BOLZEN | | | d 30 | 1 |
| 10 | 30.ER254-004 | 1 | KRYT RAMENE / SHOULDER COVER / RAHMENABDECKUNG | | | P 1.5x61 | 1 |
| 11 | 30.ER254-007 | 1 | KRYT MAPINANI / TENSIONING COVER / BANDSPANNUNGSABDECKUNG | | | P 6x80 | 1 |
| 12 | 30.ER254-008 | 2 | DRŽAK / HOLDER / HALTER | | | P 4x60 | 1 |
| 13 | 30.ER254-009 | 1 | TYC / POLE / STANGE | | | d 30 | 1 |
| 14 | 30.ER254-101 | 0 | RAMENO / SAW ARM / SÄGERAHMEN | | | | 1 |
| 15 | 30.ER254-305 | 1 | KRYT RAMENE / SHOULDER COVER / RAHMENABDECKUNG | | | | 1 |
| 16 | 30.ER205-601 | 0 | KOLO HWACI / DRIVE WHEEL / ANTRIEBSRAD | | | | 1 |
| 17 | 90.001-25.044 | 0 | SHOUB INBUS / ALLEN HEAD BOLT / INBUSCHRAUBE | | | M10x14 | 1 |
| 18 | 90.012-56.007 | 0 | SHOUB / ROLLER BOLT / ZYLINDERSCHEIBE | | | SHOUB MAX30 | 2 |
| 19 | 90.013-27.007 | 0 | SHOUB PULKULATY / HALF ROUND BOLT / HALBRUNDSCHRAUBE | | | M6x10 | 6 |
| 20 | 90.013-27.008 | 0 | SHOUB PULKULATY / HALF ROUND BOLT / HALBRUNDSCHRAUBE | | | M6x16 | 6 |
| 21 | 90.013-27.011 | 0 | SHOUB PULKULATY / HALF ROUND BOLT / HALBRUNDSCHRAUBE | | | M6x12 | 1 |
| 22 | 90.013-27.012 | 0 | SHOUB PULKULATY / HALF ROUND BOLT / HALBRUNDSCHRAUBE | | | M6x14 | 2 |
| 23 | 90.013-27.017 | 0 | SHOUB PULKULATY / HALF ROUND BOLT / HALBRUNDSCHRAUBE | | | M4x6 | 2 |
| 24 | 90.013-97.104 | 0 | SHOUB PULKULATY / HALF ROUND BOLT / HALBRUNDSCHRAUBE | | | M4x30 | 2 |
| 25 | 90.150-56.004 | 0 | PODLOZKA / WASHER / UNTERLEGSCHIEBE | | | PODLOZKA 6,4 | 2 |
| 26 | 90.150-56.007 | 0 | PODLOZKA / WASHER / UNTERLEGSCHIEBE | | | PODLOZKA 13 | 1 |
| 27 | 90.151-56.001 | 0 | PODLOZKA / WASHER / UNTERLEGSCHIEBE | | | PODLOZKA 10 | 1 |
| 28 | 90.152-56.005 | 0 | PODLOZKA VEJTIROVA / / | | | PODLOZKA 4,3 | 2 |
| 29 | 91.070-011 | 0 | VYKODKA / BUSHING / FÜLLE | | | M16x1.5 | 1 |
| 30 | 91.173-007 | 0 | SPINAC KONCOVY / END SWITCH / ENDSCHALTER | | | -RWK | 1 |
| 31 | 91.173-012 | 0 | SPINAC KONCOVY / END SWITCH / ENDSCHALTER | | | | 1 |
| 32 | 94.292-002 | 0 | REDUKCE / REDUCTION / ADAPTOR / REDUKTION | | | GES 6/8/1/4" | 2 |
| 33 | 95.800-016 | 0 | SEGR HRDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEW | | | POJISTNY KROUZEK 42 | 2 |
| 34 | 99.240-003 | 0 | VENTIL / VALVE / VENTIL | | | 1/4" | 1 |

Cislo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Police (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.20. Pohon / Drive / Antrieb

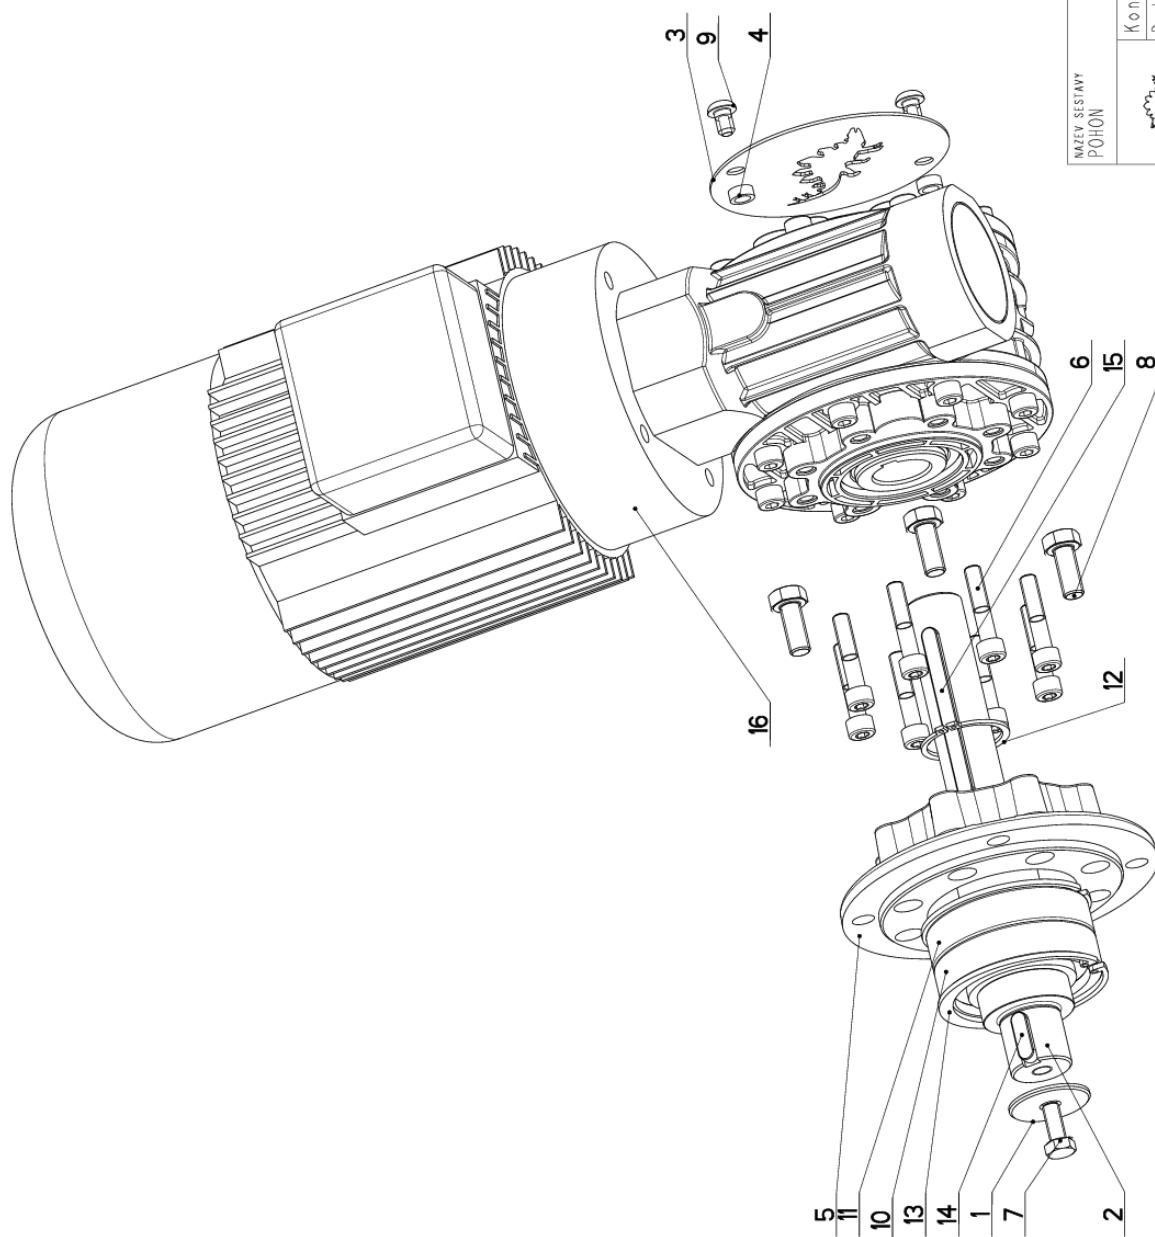

| | | |
|------------------------|--------------------------------|-------|
| NAZEV SESTAVY POHON | CÍSLO SESTAVY 201.ER255-100 | STROJ |
| Konstruoval: IVICIC | | |
| Datum: 15. 05.2019 | | |
| Meritko: 1:2 | | |


7.21. Kusovník / Piece list / Stückliste


Pohon / Drive / Antrieb

| Císlo Sestavy 201.ER255-100 | | Ver. 0 | Název sestavy POHON/DRIVE / ANTRIEB | | |
|--------------------------------|-----------------|-----------|---|----------------------------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 30.0505-011 | 1 | PODLOŽKA / WASHER / UNTERLEGSCHIEBE | TYC 40 | 1 |
| 2 | 30.ER255-101 | 0 | HRDEL / SHAFT / WELLE | D 45 | 1 |
| 3 | 30.ER255-105 | 0 | KRYT / COVER / ABDECKUNG | PI, 5x118 | 1 |
| 4 | 30.ER255-107 | 0 | DISTANC / DISTANCE / DISTANZ | TR 12x2 | 2 |
| 5 | 30.ER255-202 | 0 | PŘÍRUBA / FLANGE / FLANSCH | ODLITEK | 1 |
| 6 | 90.001.25.036 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M8x40 | 8 |
| 7 | 90.005.55.015 | 0 | SROUB 6HRANNY / 6 SIDED BOLT / SECHSKANTSCHRAUBE | SROUB M8x20 | 1 |
| 8 | 90.005.55.024 | 0 | SROUB 6HRANNY / 6 SIDED BOLT / SECHSKANTSCHRAUBE | SROUB M10x25 | 4 |
| 9 | 90.013.27.011 | 0 | SROUB PULKULATY / HALF ROUND BOLT / HALBRUNDSCHRAUBE | M8x12 | 2 |
| 10 | 95.001.021 | 0 | LOŽISKO / BEARING / LAGER | 6208 2RS | 1 |
| 11 | 95.200.001 | 0 | LOŽISKO / BEARING / LAGER | VALEČKOVÁ L. IRADA | 1 |
| 12 | 95.800.015 | 0 | SEGR HRDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN | POJISTNÝ KROUŽEK 40 | 1 |
| 13 | 95.801.013 | 0 | SEGR DIRA / INSIDE SAFETY RING / SICHERUNGSRING INNEN | POJISTNÝ KROUŽEK 80 | 2 |
| 14 | 95.810.007 | 0 | PERO TESNE / TIGHT SPRING / PASSFEDER | PERO 8x7x25 | 1 |
| 15 | 95.810.028 | 0 | PERO TESNE / TIGHT SPRING / PASSFEDER | PERO 8x7x90 | 1 |
| 16 | 99.001.260 | 0 | POHON / DRIVE / ANTRIEB | M170-PAM90-20/I-FP-i20-B14 | 1 |

Císlo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.22. Vedení pásu / Belt guide / Sägebandführung

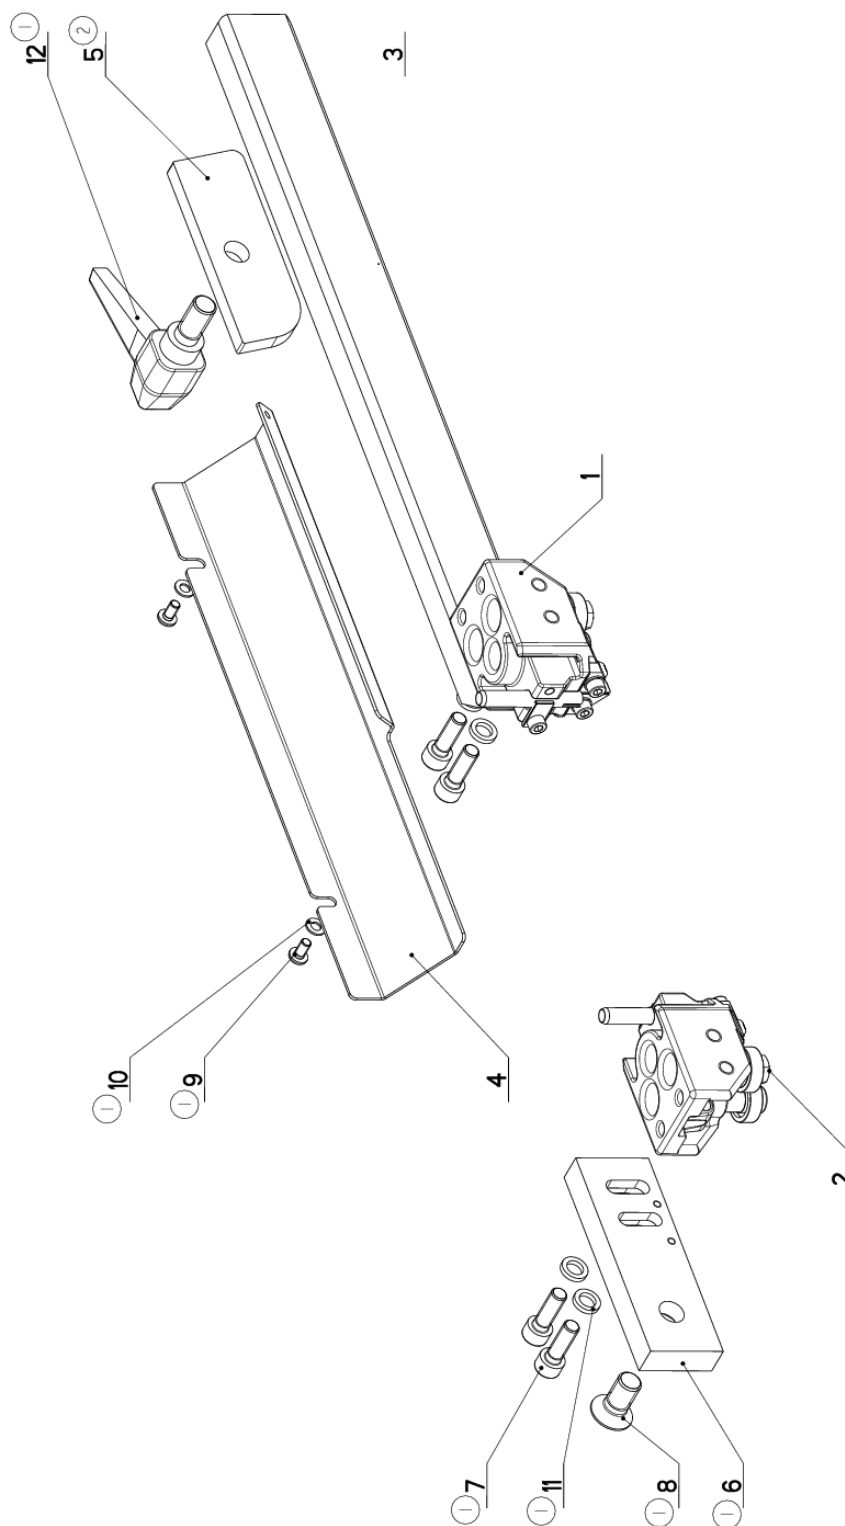

| | | |
|--|--------------------------------|------------------|
|  NAZEV SESTAVY VEDENÍ PASU | ČÍSLO SESTAVY 201.ER256-000 | STROJ ERG 250 |
| | Konstruoval: MUSIL | |
| | Datum: 20. 10. 2017 | |
| | Meritko: 1:2 | |
| | | |

7.23. Kusovník / Piece list / Stückliste - Vedení pásu / Belt guide / Sägebandführung

| Císlo Sestavy 201.ER256-000 | | Ver. 2 | Název sestavy VEDENÍ PASU/BELT GUIDE/SÄGEBANDFÜHRUNG | | |
|--------------------------------|-----------------|-----------|---|--------------|----|
| Poz. | Objednáci číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 201.0510-500 | 1 | KOSTKA VODICI / LEAD CUBE / FÜHRUNGSKLOTZ | SESTAVA | 1 |
| 2 | 201.0510-600 | 1 | KOSTKA VODICI / LEAD CUBE / FÜHRUNGSKLOTZ | SESTAVA | 1 |
| 3 | 30.0104-015 | 7 | LISTA / TRIM / LEISTE | HR 40x20 | 1 |
| 4 | 30.ER256-005 | 1 | KRYT PASU / BELT COVER / BANDABDECKUNG | P 1,5x94 | 1 |
| 5 | 30.ER256-101 | 0 | UPINKA / FASTENER / SPANNEISEN | P 8x40 | 1 |
| 6 | 30.FL256-002 | 1 | LISTA / TRIM / LEISTE | HR 40x15 | 1 |
| 7 | 90.001.25.033 | 1 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | 8x25 | 4 |
| 8 | 90.011.27.025 | 1 | ZAPUSTNÝ IMBUS / COUNTERSINK BOLT / SENKSCHRAUBE | SROUB M12x25 | 1 |
| 9 | 90.013.27.003 | 1 | SROUB / BOLT / SCHRAUBE | M5x10 | 2 |
| 10 | 90.150.50.003 | 1 | PODLOŽKA / WASHER / UNTERLEGSCHEIBE | PODLOŽKA 5,3 | 2 |
| 11 | 90.163.00.001 | 1 | PODLOŽKA / WASHER / UNTERLEGSCHEIBE | NORD-LOCK | 4 |
| 12 | 94.008.008 | 1 | PAKA UPINACÍ / ATTACHMENT LEVER / SPANNHEBEL | M12x25 | 1 |


1. ZRUS.LISTA 30.ER236-002 A NAHR.30.FL256-002,UPINKA 30.ER256-003 A NAHR.30.ER256-001,ZRUS.PAKA UTAHOVACI M10x25 (94.008.005) A NAHR.PAKA UTAHOVACI M12x25(94.008.008),PRID,2xPODLOŽKA 5,3(90.150.50.003),2xSROUB M5x10(90.013.27.003), 4xPODLOŽKA NORD-LOCK(90.163.00.002),4xSROUB M8x25(90.001.25.033),1xSROUB M12x25(90.011.27.025). 021/ZM147 11.4.2017 SLEZACKOVA

2.ZRUS.UPINKA 30.ER256-001 A NAHR.30.ER256-101; 148/ZM257 18.7.2018 SCERBA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version: Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz./Position/Position: Objednáci číslo/Purchase order number/Bestellnummer: Název položky/Volume title/Name der Position: Rozměr/Stock size/Abmessung

Císlo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednáací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.24. Kostka vodící / Lead cube / Führungsklotz

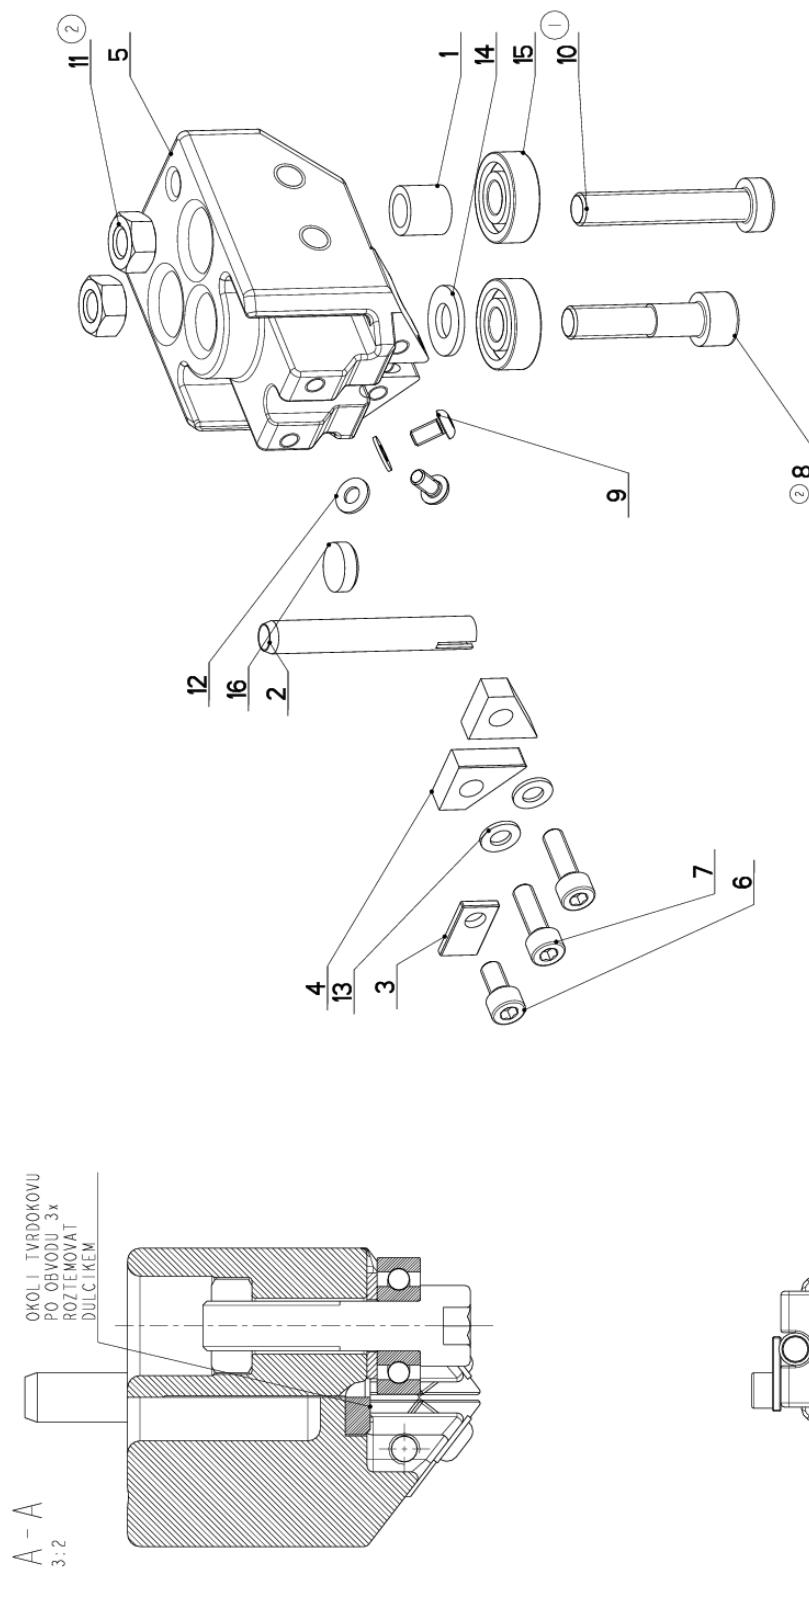

| | | |
|--------------------------------|-------------------------------|-------------------------|
| NAZEV SESTAVY KOSTKA VODICI | CÍSLO SESTAVY 201.0510-600 | STROJ ERG0250DG, DGS |
| Konstruoval: MAJZNER | | |
| Datum: 14. 03.2019 | | |
| Měřítko: 1:1 | | |


7.25. Kusovník / Piece list / Stückliste - Kostka vodící / Lead cube / Führungsklotz

| Císlo Sestavy 201.0510-600 | | Ver. 2 | Název sestavy KOSTKA VODICI / LEAD CUBE / FÜHRUNGSKLOTZ | | |
|-------------------------------|-----------------|-----------|--|--------------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 30.LK10-006 | 1 | TRUBKA / TUBE / ROHR | TR 12x2 | 1 |
| 2 | 30.LK10-008 | 2 | TRUBKA / TUBE / ROHR | TR 8x1 | 1 |
| 3 | 30.LK10-109 | 0 | PRÍLOŽKA / STRAP / LASCHE | P 2-10 | 1 |
| 4 | 31.LK10-007 | 0 | TVRDOKOV / HARD METAL / HM-SEGMENT | HR 18.1x15.5 | 2 |
| 5 | 85.LK10-201 | 0 | KOSTKA VODICI / LEAD CUBE / FÜHRUNGSKLOTZ | ODLITEK | 1 |
| 6 | 90.001.25.007 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M5x10 | 1 |
| 7 | 90.001.25.009 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M5x16 | 2 |
| 8 | 90.001.55.035 | 2 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M8x35 | 1 |
| 9 | 90.013.27.001 | 0 | SROUB / BOLT / SCHRAUBE | M4x8 | 2 |
| 10 | 90.015.25.033 | 1 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M8x45 | 1 |
| 11 | 90.100.55.005 | 2 | MATICE / NUT / MUTTER | MATICE - M8 | 2 |
| 12 | 90.150.50.002 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHIEBE | PODLOŽKA 4,3 | 2 |
| 13 | 90.150.50.003 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHIEBE | PODLOŽKA 5,3 | 2 |
| 14 | 90.150.50.005 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHIEBE | PODLOŽKA 8,4 | 1 |
| 15 | 95.001.001 | 0 | LOŽISKO / BEARING / LAGER | 608 2RS | 2 |
| 16 | 99.040.002 | 0 | TVRDOKOV / HARD METAL / HM-SEGMENT | d 12 | 1 |

1. ZRUS.SROUB M8x45 6HRANNY(90.005.55.020) A NAHR.M8x45 DIN7984(90.015.25.033). 286/ZM342 5.12.2012
2. ZRUS 90.005.55.018 A NAHR.90.001.25.035; ZRUS 90.101.55.001 A NAHR.90.100.55.005; 260/ZM432 29.11.2018 SCERBA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.26. Kostka vodící / Lead cube / Führungsklotz

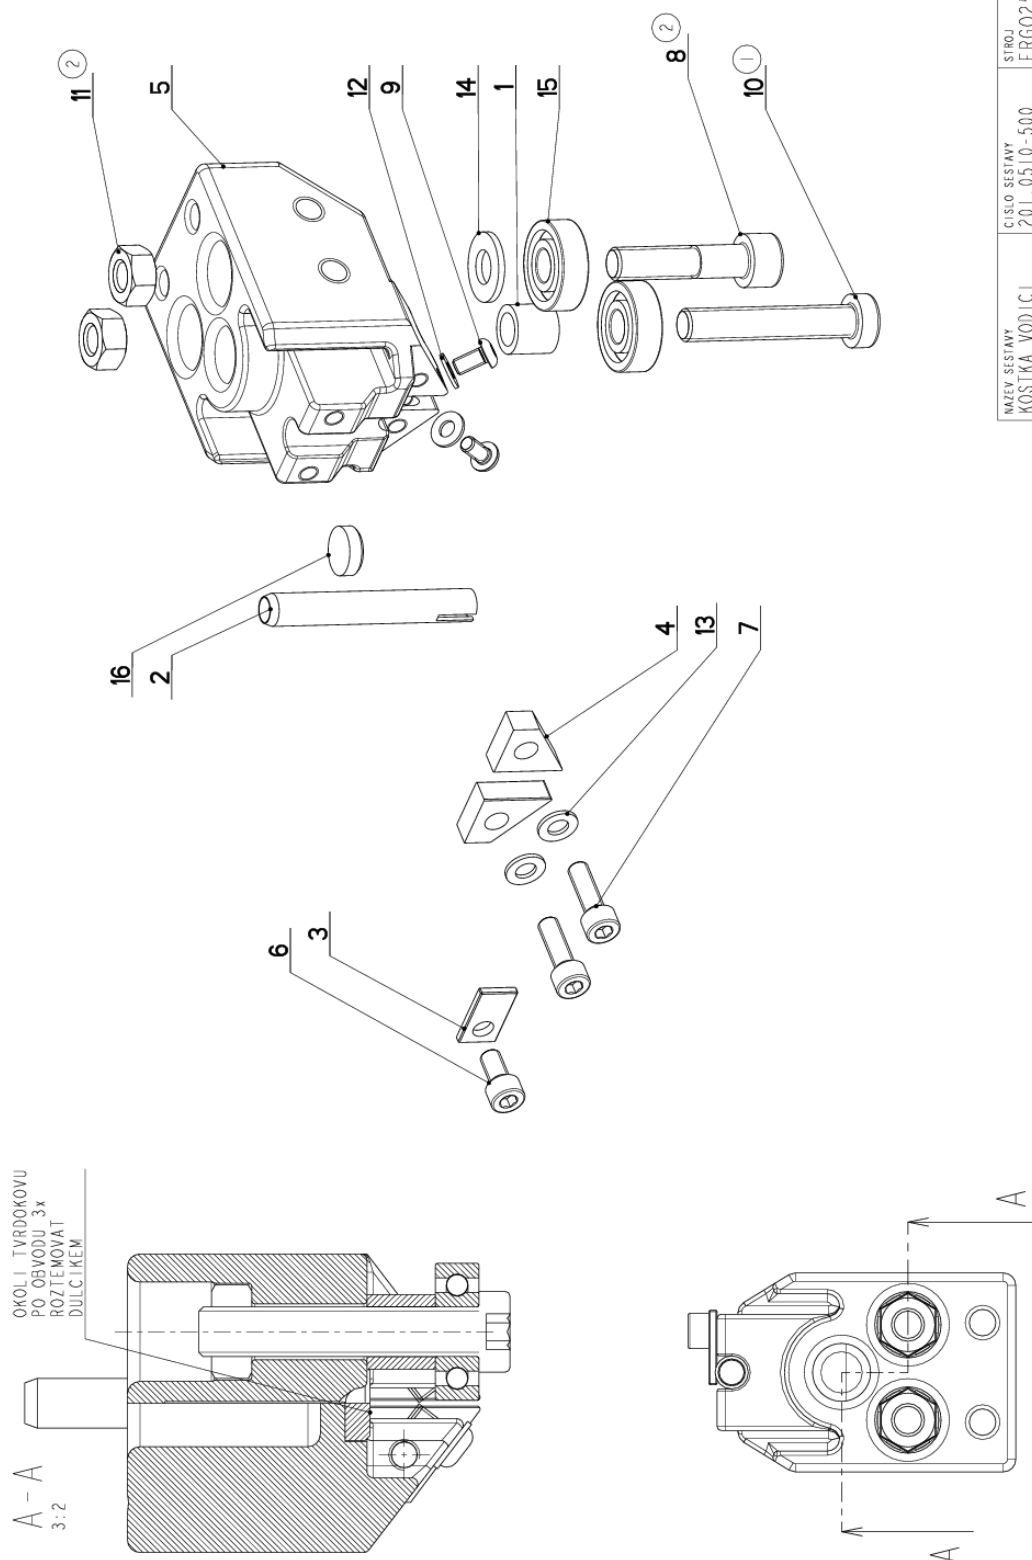

| | | |
|--------------------------------|-------------------------------|-------------------------|
| NAZEV SESTAVY KOSTKA VODICI | CISLO SESTAVY 201.0510-500 | STROJ ERG0250DG, DGS |
| Konstruoval: MAJZNER | | |
| Datum: 14. 03.2019 | | |
| Meritko: 1:1 | | |

7.27. Kusovník / Piece list / Stückliste -
Kostka vodící / Lead cube / Führungsklotz


| Císlo Sestavy 201.0510-500 | | Ver. 2 | Název sestavy KOSTKA VODICI / LEAD CUBE / FÜHRUNGSKLOTZ | | |
|-------------------------------|-------------------|-----------|--|--------------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 30.LK10-006 | 1 | TRUBKA / TUBE / ROHR | TR 12x2 | 1 |
| 2 | 30.LK10-008 | 2 | TRUBKA / TUBE / ROHR | TR 8x1 | 1 |
| 3 | 30.LK10-109 | 0 | PŘÍLOŽKA / STRAP / LASCHE | P 2-10 | 1 |
| 4 | 31.LK10-007 | 0 | TVRDOKOV / HARD METAL / HM-SEGMENT | HR 18.1x15.5 | 2 |
| 5 | 85.LK10-201 | 0 | KOSTKA VODICI / LEAD CUBE / FÜHRUNGSKLOTZ | ODLITEK | 1 |
| 6 | 90.001.25.007 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M5x10 | 1 |
| 7 | 90.001.25.009 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M5x16 | 2 |
| 8 | 90.001.55.035 (2) | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M8x35 | 1 |
| 9 | 90.013.27.001 | 0 | SROUB / BOLT / SCHRAUBE | M4x8 | 2 |
| 10 | 90.015.25.033 (1) | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M8x45 | 1 |
| 11 | 90.100.55.005 (2) | 0 | MATICE / NUT / MUTTER | MATICE - M8 | 2 |
| 12 | 90.150.50.002 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHIEBE | PODLOŽKA 4,3 | 2 |
| 13 | 90.150.50.003 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHIEBE | PODLOŽKA 5,3 | 2 |
| 14 | 90.150.50.005 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHIEBE | PODLOŽKA 8,4 | 1 |
| 15 | 95.001.001 | 0 | LOŽISKO / BEARING / LAGER | 608 2RS | 2 |
| 16 | 99.040.002 | 0 | TVRDOKOV / HARD METAL / HM-SEGMENT | d 12 | 1 |

1. ZRUS. SROUB M8x45 6HRANNY(90.005.55.020) A NAHR.M8x45 DIN984(90.015.25.033). 286/ZM342 5.12.2012

2. ZRUS 90.005.55.018 A NAHR.90.001.25.035; ZRUS 90.101.55.001 A NAHR.90.100.55.005; 260/ZM432 29.11.2018 SCERBA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednávací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.28. Napínání / Tensioning / Spannung

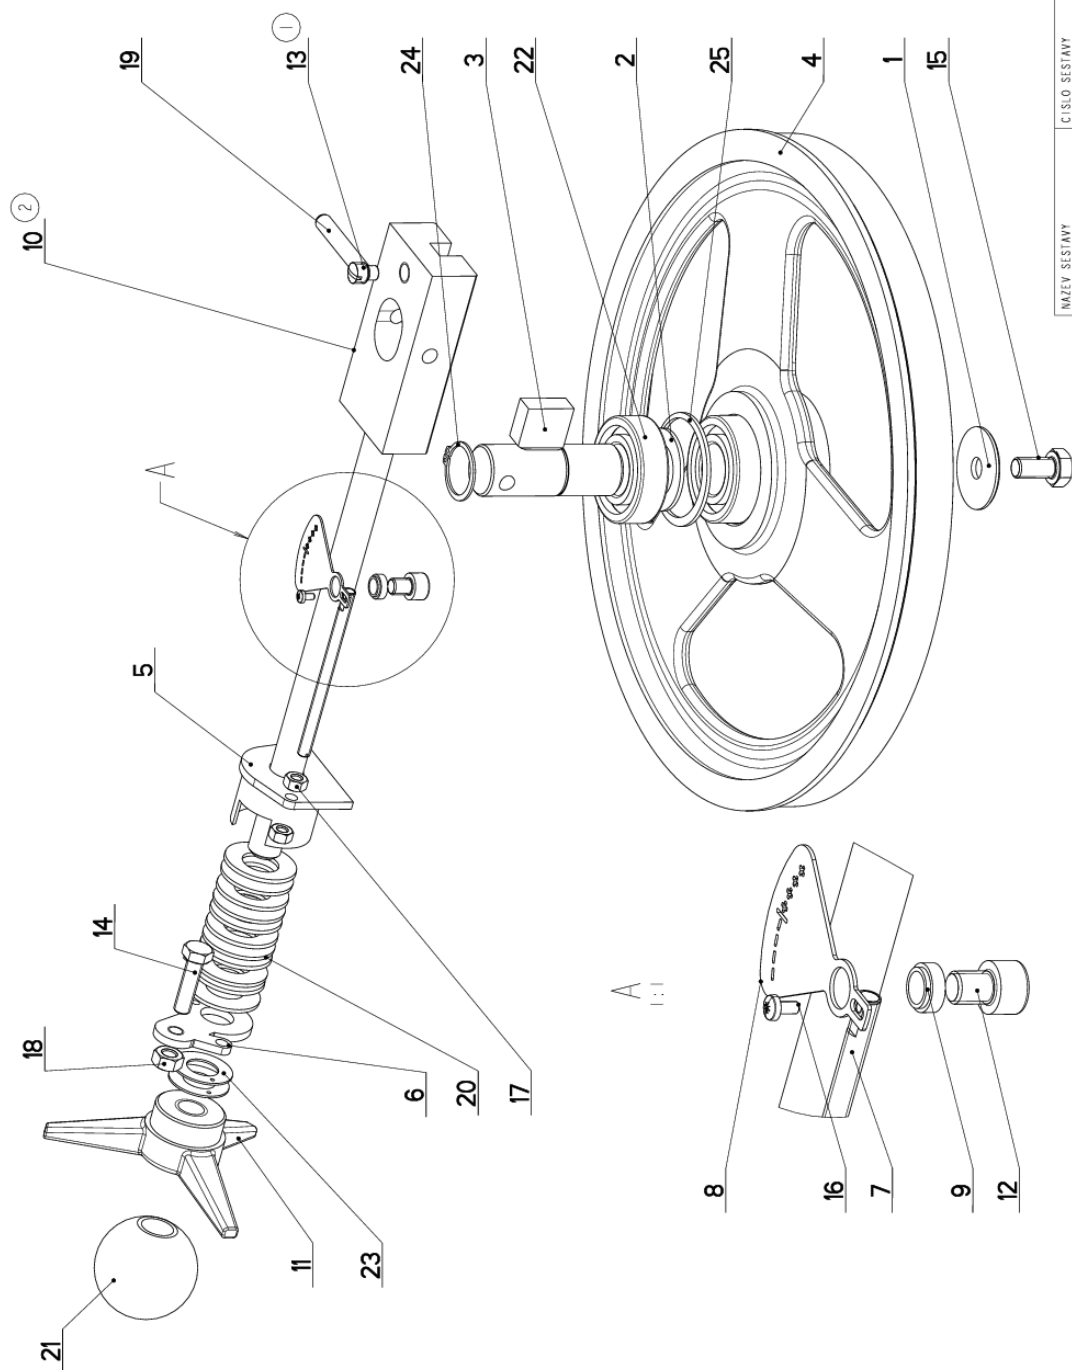

| NAZEV SESTAVY NAPÍNÁNÍ | ČÍSLO SESTAVY 201.ER258-000 | STROJ ERG0250DG |
|---------------------------|--------------------------------|--------------------|
| Konstruoval: MUSIL | | |
| Datum: 13. 12. 2018 | | |
| Měřítko: 1:2 | | |

7.29. Kusovník / Piece list / Stückliste - Napínání / Tensioning / Spannung


| Císlo Sestavy 201.ER258-000 | | Ver. 2 | Název sestavy NAPÍNÁNÍ / TENSIONING / SPANNUNG | | | |
|--------------------------------|-------------------|-----------|--|---------------------|----|--|
| Poz. | Objednávací číslo | Ver. | Název položky | Rozměr | Ks | |
| 1 | 30.0505-011 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHEIBE | TYC 40 | 1 | |
| 2 | 30.0702-023 | 0 | KROUZEK DISTANČNÍ / DISTANCE RING / DISTANZRING | P 2x40 | 1 | |
| 3 | 30.0708-102 | 1 | ČEP NAPÍNÁNÍ / TENSIONING LUG / SPANNUNGSBOLZEN | | 1 | |
| 4 | 30.ER258-001 | 0 | KOLO NAPÍNACÍ / TENSIONING WHEEL / UMLENKRAD | | 1 | |
| 5 | 30.ER258-004 | 0 | DRŽÁK / HOLDER / HALTER | | 1 | |
| 6 | 30.ER258-005 | 0 | PŘÍLOŽKA / STRAP / LASCHÉ | P 4x42 | 1 | |
| 7 | 30.ER258-006 | 0 | TAHLO / GUY ROD / ZUGSTANGE | M6 | 1 | |
| 8 | 30.ER258-007 | 0 | STUPNICE / SCALE / SKALA | P 1x41 | 1 | |
| 9 | 30.ER258-008 | 0 | TRUBKA / TUBE / ROHR | TR 12x2 | 1 | |
| 10 | 30.ER278-011 | 2 | VEDENÍ / GUIDE / BACKENFÜHRUNG | | 1 | |
| 11 | 31.0104-006 | 0 | HVEZDICE / STAR WHEEL / STERN | PLAST | 1 | |
| 12 | 90.001.25.028 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M8x10 | 1 | |
| 13 | 90.004.20.026 | 0 | SROUB STAVEČI / ADJUSTMENT BOLT / STELLSCHRAUBE | SROUB M10x14 | 1 | |
| 14 | 90.005.55.017 | 0 | SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE | SROUB M8x30 | 1 | |
| 15 | 90.005.55.023 | 0 | SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE | SROUB M10x20 | 1 | |
| 16 | 90.014.50.008 | 0 | SROUB / BOLT / SCHRAUBE | SROUB M3x6 | 1 | |
| 17 | 90.100.55.004 | 0 | MATICE / NUT / MUTTER | M6 | 2 | |
| 18 | 90.100.55.005 | 0 | MATICE / NUT / MUTTER | MATICE - M8 | 1 | |
| 19 | 90.300.02.012 | 0 | KOLÍK VALC. KAL. / CYLINDRICAL PIN TEMPERED / ZYLINDERSTIFT GEHARTET | KOLÍK 8x50 | 1 | |
| 20 | 90.350.02.002 | 0 | PRŮŽINA TALIROVA / DISC SPRING / TELLERFEDER | 35.5x18,3x2,0x2,8 | 1 | |
| 21 | 94.001.005 | 0 | RUKOJET / HANDLE / GRIF | M16 | 1 | |
| 22 | 95.001.018 | 0 | LOŽISKO / BEARING / LAGER | 6205 2RS | 2 | |
| 23 | 95.750.001 | 0 | KROUZEK KU / KU RING / KU-RING | 16x1 | 2 | |
| 24 | 95.800.012 | 0 | SEGR HRÍDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN | POJISTNÝ KROUZEK 25 | 1 | |
| 25 | 95.801.009 | 0 | SEGR DÍRA / INSIDE SAFETY RING / SICHERUNGSRING INNEN | POJISTNÝ KROUZEK 52 | 1 | |


1. ZRUS. SROUB M8x10 90.004.20.007 A NAHR. M10x14 90.004.20.026. 169/ZM237 13.7.2017 ČERNÝ

2. ZRUS. 30.ER258-011 A NAHR. 30.ER278-011 177/ZM295 23.8.2018 SCERBA

Císlo Sestavy/Number of assembly/Numer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednávací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.30. Válec zvedací / Lifting cylinder / Hebezyylinder

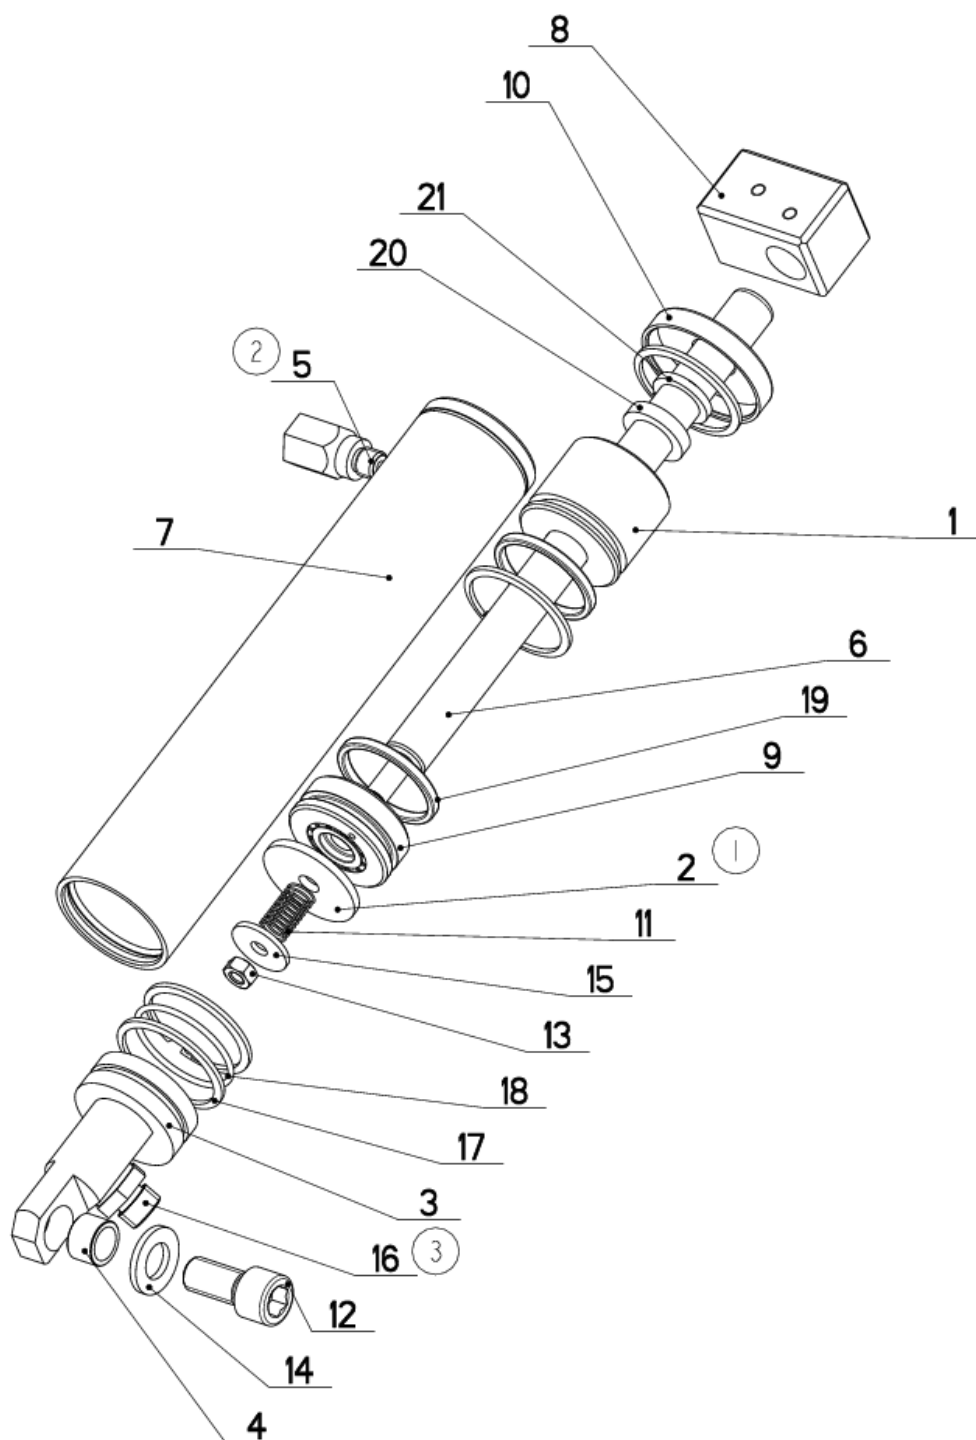

| | | |
|---|--------------------------------|------------------------|
| NAZEV SESTAVY VALEC ZVEDACI | CÍSLO SESTAVY 201.ER257-010 | STROJ ERG.258/278DG |
|  | Konstruoval: MUSIL | |
| | Datum: 17. 05.2019 | |
| | Meritko: 1:2 | |


7.31. Kusovník / Piece list / Stückliste - Válec zvedací / Lifting cylinder / Hebezyylinder

| Císlo Sestavy 201.ER257-010 | | Ver. 3 | Název sestavy VALEC ZVEDACÍ / LIFTING CYLINDER / HEBEZYLYNDER | | |
|--------------------------------|-----------------|-----------|--|---------------------|----|
| Poz | Objednací číslo | Ver. | Název položky | Rozmer | Ks |
| 1 | 30.0507-003 | 0 | VIKO / COVER / DECKEL | d 45 | 1 |
| 2 | 30.0507-007 (1) | 0 | KLAPKA / PULLEY / VENTILKLAPPE | P 3x37 | 1 |
| 3 | 30.0507-904 | 1 | VIKO / COVER / DECKEL | d 42 | 1 |
| 4 | 30.0507-913 | 3 | POUZDRO / SLEEVE / BÜCHSE | d 16 | 1 |
| 5 | 30.3407-103 (2) | 1 | REDUCE / REDUCTION / ADAPTOR / REDUKTION | TYC 17 | 1 |
| 6 | 30.ER257-011 | 0 | PISTNICE / PISTON ROD / KOLBENSTANGE | d 16f8 | 1 |
| 7 | 30.ER257-012 | 0 | VALEC / ROLLER / ZYLINDER | TR 45/40 | 1 |
| 8 | 30.LC07-002 | 1 | DRZAK / HOLDER / HALTER | HR 30x30 | 1 |
| 9 | 30.LC07-106 | 1 | PIST / PISTON / KOLBEN | ODLITEK | 1 |
| 10 | 31.0507-010 | 0 | VIKO / COVER / DECKEL | | 1 |
| 11 | 31.0707-014 | 0 | PRUŽINA / SPRING / FEDER | | 1 |
| 12 | 90.001.25.057 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | 0.63x10x20x9.5 | |
| 13 | 90.100.55.004 | 0 | MATICE / NUT / MUTTER | M12x25 | 1 |
| 14 | 90.150.50.007 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHEIBE | MATICE - M6 | 1 |
| 15 | 90.151.50.004 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHEIBE | PODLOŽKA 13 | 1 |
| 16 | 92.002.003 (3) | 0 | SROUBENÍ PRÍME / DIRECT BOLTING / GERADE VERSCHRAUBUNG | PODLOŽKA 6 | 1 |
| 17 | 95.801.005 | 0 | SEGR DIRA / INSIDE SAFETY RING / SICHERUNGSRING INNEN | | 1 |
| 18 | 96.001.010 | 0 | KROUZEK O STATICKY / STATIC O RING / O-RING STATISCH | POJISTNÝ KROUZEK 40 | 4 |
| 19 | 96.002.017 | 0 | KROUZEK O DYNAMICKY / DYNAMIC O RING / O-RING DYNAMISCH | d36x2 | 1 |
| 20 | 96.041.001 | 0 | TESNENÍ / SEALING / DICHTUNG | 34x3 NBR 70SH | 2 |
| 21 | 96.060.001 | 0 | KROUZEK STÍRAČÍ / SCRAPER RING / ABSTREIFRING | d16 | 1 |
| | | | | 16x22 NBR 70 | 1 |

- ZRUSENA Klapka 30.0507-004 A NAHR. 30.0507-007. 059/ZM073 2.3.2017 SLEZACKOVA
- PRIDANA REDUKCE 30.3407-103. 124/ZM181 19.5.2017 KUDELA
- ZRUSENO SROUBENÍ 92.002.001 A NAHRAZENO 92.002.002. 251/ZM375 27.11.2017 SCERBA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednávací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.32. Stůl / Table / Tisch

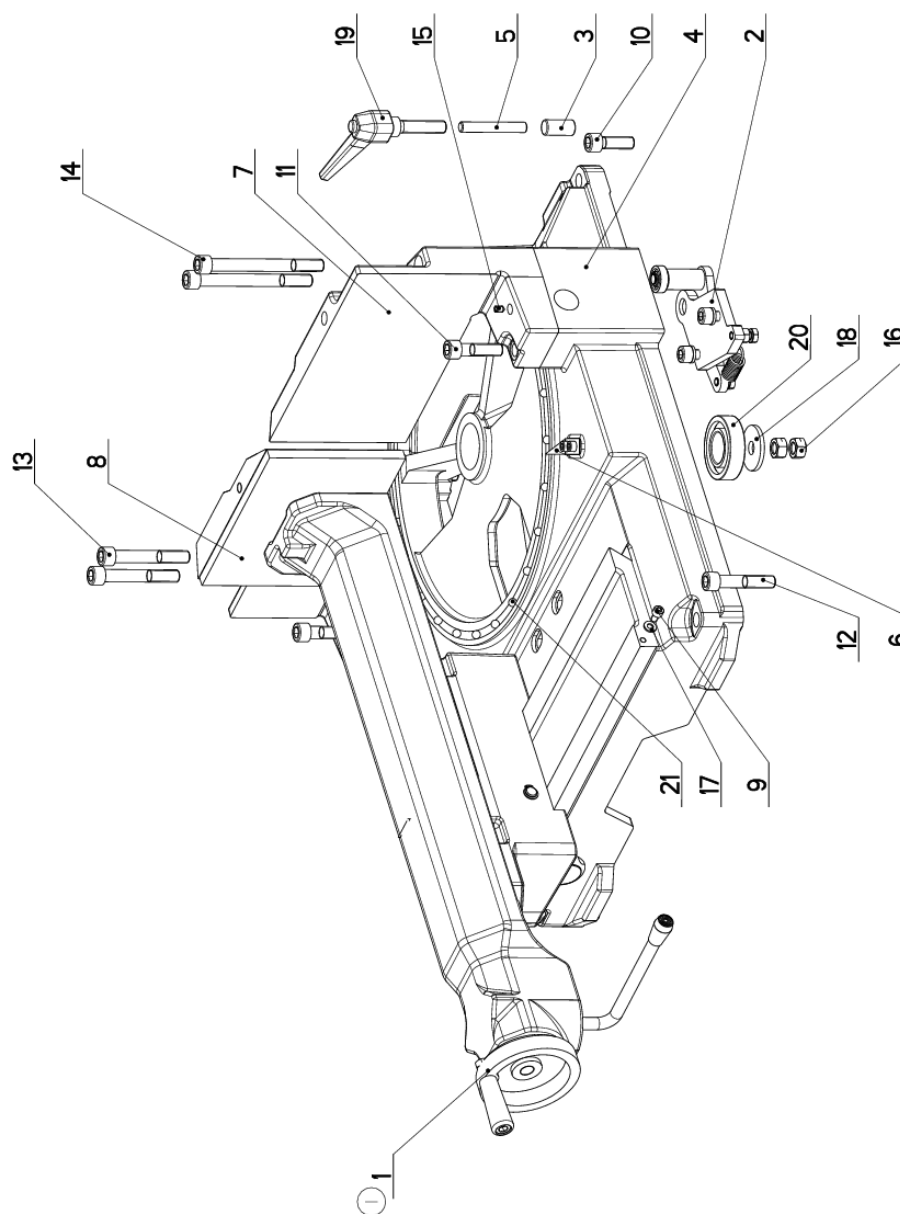

| | | |
|-----------------------|--------------------------------|---------------------|
| NAZEV SESTAVY STUL | CISLO SESTAVY 201.ER259-100 | STROJ ERG0250DGS |
| Konstruoval: MUSIL | | |
| Datum: 26. 02.2016 | | |
| Měřítko: 1:4 | | |


7.33. Kusovník / Piece list / Stückliste - Stůl / Table / Tisch

| Císlo Sestavy 201.ER259-100 | | Ver. 1 | Název sestavy STUL/TABLE/TISCH | | | |
|--------------------------------|-------------------|-----------|---|--------------|----|--|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks | |
| 1 | 201.ER253-210 (1) | 3 | SVERAK / VICE / SCHRAUBSTOCK | | 1 | |
| 2 | 201.ER259-110 | 0 | DORAZ / STOP PIECE / ANSCHLAG | | 1 | |
| 3 | 30.0509-606 | 0 | VALECEK / CYLINDER / ROLLE | d15 | 1 | |
| 4 | 30.ER259-101 | 0 | STUL / TABLE / TISCH | | 1 | |
| 5 | 30.ER259-102 | 0 | TYC / POLE / STANGE | d10 | 1 | |
| 6 | 30.ER259-103 | 0 | UKAZATEL / INDICATOR / ZEIGER | P 1x15 | 1 | |
| 7 | 30.ER259-114 | 0 | CELIST / JAW / BACKE | ODLITEK | 1 | |
| 8 | 30.ER259-115 | 2 | CELIST / JAW / BACKE | ODLITEK | 1 | |
| 9 | 90.001.25.015 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M6X10 | 4 | |
| 10 | 90.001.25.039 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M12X35 | 2 | |
| 11 | 90.001.25.061 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M12X45 | 2 | |
| 12 | 90.001.25.063 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M12X60 | 2 | |
| 13 | 90.001.25.065 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M12X80 | 2 | |
| 14 | 90.001.25.066 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M12X120 | 2 | |
| 15 | 90.003.20.004 | 0 | SROUB STAVECI / ADJUSTMENT BOLT / STELLSCHRAUBE | SROUB M6X10 | 1 | |
| 16 | 90.100.55.007 | 0 | MATICE / NUT / MUTTER | MATICE - M12 | 2 | |
| 17 | 90.150.50.004 | 0 | PODLOZKA / WASHER / UNTERLEGSCHLEIBE | PODLOZKA 6,4 | 2 | |
| 18 | 90.151.50.002 | 0 | PODLOZKA / WASHER / UNTERLEGSCHLEIBE | PODLOZKA 12 | 1 | |
| 19 | 94.008.009 | 0 | PAKA UPINACI / ATTACHMENT LEVER / SPANNHEBEL | M12 | 1 | |
| 20 | 95.014.008 | 0 | LOZISKO / BEARING / LAGER | T206 | 1 | |
| 21 | 95.691.006 | 0 | KOLECKO / WHEEL / ROLLE | RB 8 | 25 | |

1. ZRUSEN SVERAK 201.ER253-110 A NAHRAZEN 201.ER253-210. 046/ZM053 26.2.2016 SLEZACKOVA

Císlo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.34. Svěrák / Vice / Schraubstock

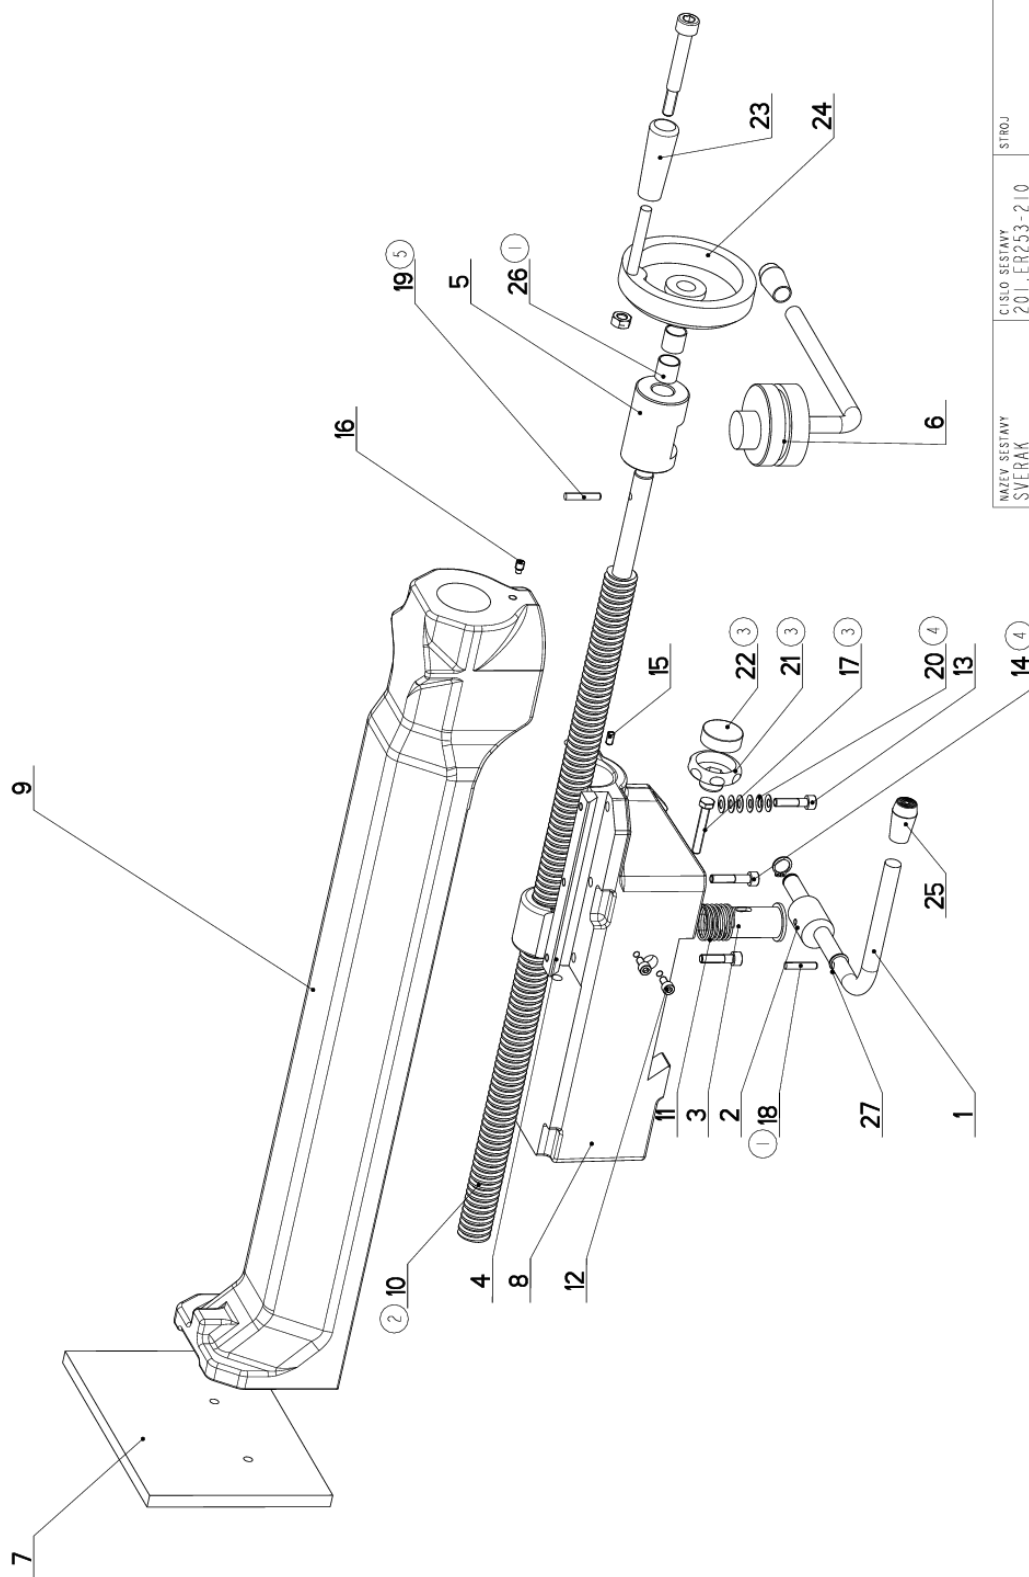

| | | |
|-------------------------|--------------------------------|-------|
| NAZEV SESTAVY SVĚRÁK | CÍSLO SESTAVY 201.ER253-210 | STROJ |
| Konstruoval: MUSIL | | |
| Datum: 12. 03.2019 | | |
| Meritko: 33:100 | | |

7.35. Kusovník / Piece list / Stückliste - Svěrák / Vice / Schraubstock

| Císlo Sestavy 201.ER253-210 | | Ver. 5 | Název sestavy SVERAK/VICE/SCHRAUBSTOCK | | |
|--------------------------------|-------------------|-----------|---|---------------------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 30.ER233-013 | 1 | TYC / POLE / STANGE | d 12 | 1 |
| 2 | 30.ER233-014 | 1 | EXCENTR / CAM / EXZENTER | d 25 | 1 |
| 3 | 30.ER233-015 | 3 | CEP / LUG / BOLZEN | D 30 | 1 |
| 4 | 30.ER233-217 | 1 | KLIN / WEDGE / KEIL | HR 15x10 | 1 |
| 5 | 30.ER253-019 | 0 | POUZDRO / SLEEVE / BUCHSE | d40 | 1 |
| 6 | 30.ER253-021 | 0 | CEP / LUG / BOLZEN | | 1 |
| 7 | 30.ER253-116 | 1 | DESKA / BOARD / PLATTE | HR 200x10 | 1 |
| 8 | 30.ER253-211 | 2 | TELESO SVĚRAKU / VICE BODY / SCHRAUBSTOCKKÖRPER | | 1 |
| 9 | 30.ER253-212 | 4 | CELIST POHYBLIVÁ / MOVING JAW / BEWEGLICHE BACKE | ODLITEK | 1 |
| 10 | 31.ER253-018 (2) | 0 | SROUB / BOLT / SCHRAUBE | TR 24x5 R | 1 |
| 11 | 31.M203-012 | 0 | PRUŽINA / SPRING / FEDER | d 1.5x25x47x7,5 | 1 |
| 12 | 90.001.25.007 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M5x10 | 2 |
| 13 | 90.001.25.019 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M6x25 | 2 |
| 14 | 90.001.25.020 (4) | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M6x30 | 1 |
| 15 | 90.002.20.005 | 0 | SROUB STAVECI / ADJUSTMENT BOLT / STELSCHRAUBE | SROUB M5x10 | 1 |
| 16 | 90.004.20.014 | 0 | SROUB STAVECI / ADJUSTMENT BOLT / STELSCHRAUBE | SROUB M6x10 | 1 |
| 17 | 90.005.55.012 (3) | 0 | SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE | SROUB M6x40 | 1 |
| 18 | 90.303.02.009 | 0 | KOLÍK PRUŽNÝ / PIN / BOLZEN | KOLÍK 5x25 | 1 |
| 19 | 90.303.02.010 (5) | 0 | KOLÍK PRUŽNÝ / PIN / BOLZEN | KOLÍK 5x28 | 1 |
| 20 | 90.350.02.001 (4) | 0 | TALÍROVÁ PRUŽINA / DISC SPRING / TELLERFEDER | 12,5x6,2x0,5x0,85 | 18 |
| 21 | 94.007.012 (3) | 0 | SROUB PLASTOVÝ / / | | 1 |
| 22 | 94.007.103 (3) | 0 | KRYT / / | | 1 |
| 23 | 94.010.002 | 0 | RUKOJET / HANDLE / GRIFF | | 1 |
| 24 | 94.010.004 | 0 | KOLO / WHEEL / UMLENKRAD | d 100/14H7 | 1 |
| 25 | 94.102.024 | 0 | RUKOJET / HANDLE / GRIFF | 465367 | 2 |
| 26 | 95.700.002 (1) | 0 | POUZDRO / SLEEVE / BÜCHSE | 14x15 | 2 |
| 27 | 95.800.004 | 0 | SEGR HRIDEL / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN | POJISTNÝ KROUZEK 12 | 2 |

1. PRIDANO 1xPOUZDRO 14x15(95.700.002) . 276/ZM350 31.10.2016 SLEZACKOVA

2. ZRUS. SROUB 30.ER253-018 A NAHR. 31.ER253-018. 226/ZM364 16.11.2017 CERNY


3. ZRUS. PAKA UTAHOVACI 94.008.003 A NAHR. SROUB M6x40(90.005.55.012), SROUB PLASTOVY 94.007.012, KRYT 94.007.103. 011/ZM060 9.2.2018 SLEZACKOVA

4. ZRUS. 1xSROUB M6x25(90.001.25.019) A NAHR. 1xSROUBEM M6x30(90.001.25.020), PRID. 18xTALIROVA PRUŽINA(90.350.02.001). 218/ZM365 9.10.2018 SZABARI

5. PRID. KOLIK 5x28 90.303.02.010, ZRUS. KOLIK 5x20(90.303.02.008 A NAHR. KOLIK 5x25(90.303.02.009) . 066/ZM104 12.3.2019 SZABARI

Císlo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz./Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

7.36. Doraz / Stop piece / Anschlag

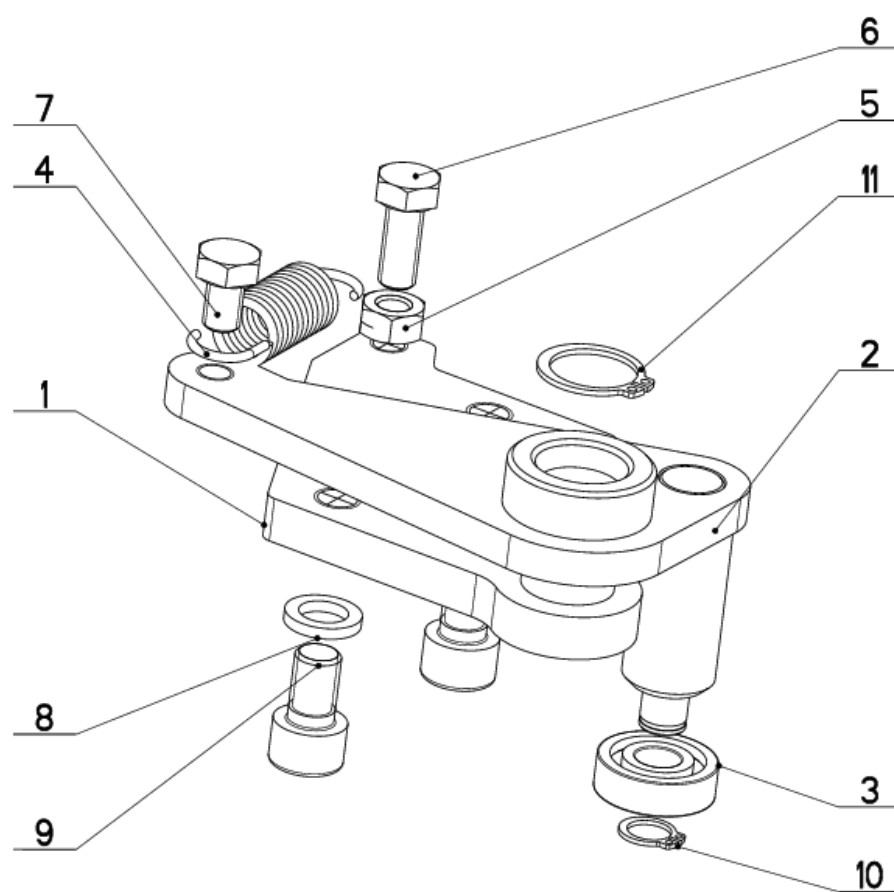

| | | |
|---|--------------------------------|-----------------|
| NAZEV SESTAVY DORAZ | CÍSLO SESTAVY 201.ER259-110 | STROJ ERG250 |
|  | Konstruoval: MUSIL | |
| | Datum: 03. 04. 2018 | Meritko: 4:5 |
| | | |

7.37. Kusovník / Piece list / Stückliste - Doraz / Stop piece / Anschlag

| Císlo Sestavy 201.ER259-110 | | Ver. 0 | Název sestavy DORAZ/STOP PIECE/ANSCHLAG | | |
|--------------------------------|-----------------|-----------|--|---------------------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 30.ER259-112 | 0 | DRŽÁK / HOLDER / HALTER | | 1 |
| 2 | 30.ER259-113 | 0 | TYC DORAZU / STOP POLE / ANSCHLAGSTANGE | | 1 |
| 3 | 95.001.004 | 0 | LOŽISKO / BEARING / LAGER | 6000 2RS | 1 |
| 4 | 31.K303-021 | 0 | PRŮŽINA / SPRING / FEDER | 2.0x16x53x13.5 | 1 |
| 5 | 90.100.55.005 | 0 | MATICE / NUT / MUTTER | MATICE _ M8 | 1 |
| 6 | 90.005.55.015 | 0 | SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE | SROUB M8X20 | 1 |
| 7 | 90.005.55.013 | 0 | SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE | SROUB M8X12 | 1 |
| 8 | 90.163.00.004 | 0 | PODLOŽKA / WASHER / UNTERLEGSCHLEIBE | NORD-LOCK | 2 |
| 9 | 90.001.25.045 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M10X16 | 2 |
| 10 | 95.800.003 | 0 | SEGR HRÍDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN | POJISTNÝ KROUZEK 10 | 1 |
| 11 | 95.800.009 | 0 | SEGR HRÍDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN | POJISTNÝ KROUZEK 20 | 1 |


Císlo Sestavy/Number of assembly/Nummer der Baugruppe: Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

8. **Výkresy sestav pro objednání náhradních dílů – volitelné vybavení / Zeichnungen für Bestellung der Ersatzteile – optionale Zubehör / Drawing assemblies for spare parts order – optional accessories**

- Při objednávání náhradních dílů vždy uvádějte: typ stroje (např. Ergonomic 320.258 DG), výrobní číslo (např. 125) a rok výroby (např. 1999).
- In die Bestellung der Ersatzteile führen Sie immer an: Maschinentyp (z. B. Ergonomic 320.258 DG), Serien Nr. (z. B. 125) und Baujahr (z. B. 1999).
- For spare parts order, you must always to allege: type of machine (for example Ergonomic 320.258 DG), serial number (for example 125, see cover page) and year of construction (for example 1999).

8.1. Odměrování / Measuring / Gehrungsmessung


| Cislo Sestavy 201.ER2518-000 | | Ver. 0 | Název sestavy ODMĚROVÁNÍ / MEASURING / GEHRUNGSMESSUNG | | |
|---------------------------------|-----------------|-----------|---|--------------------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 30.1226-007 | 1 | STERAC / WIPER / ABSTREIFER | BA 18 | 2 |
| 2 | 30.ER2518-002 | 0 | LISTA / TRIM / LEISTE | HR 18x6 | 1 |
| 3 | 30.ER2518-005 | 0 | DRŽÁK / HOLDER / HALTER | P2x108 | 1 |
| 4 | 30.ER2518-006 | 0 | TYC / POLE / STANGE | HR 70x60 | 1 |
| 5 | 30.M220-005 | 0 | DRŽÁK / HOLDER / HALTER | P 2x142 | 1 |
| 6 | 55.800.009 | 0 | PLECH / PLATE / BLECH | P 0.3x15 | 1 |
| 7 | 90.013.27.003 | 0 | SROUB / BOLT / SCHRAUBE | M5x10 | 2 |
| 8 | 91.270.018 | 0 | SNÍMAC MAGNET. / MAGNETIC SENSOR / MAGNETSENSOR | I216E-000-1-01,6-0 | 1 |
| 9 | 91.271.005 | 0 | PASKA MAGNETICKÁ / MAGNETIC TAPE / MAGNETBAND | ELGO MB20-25 | 1 |

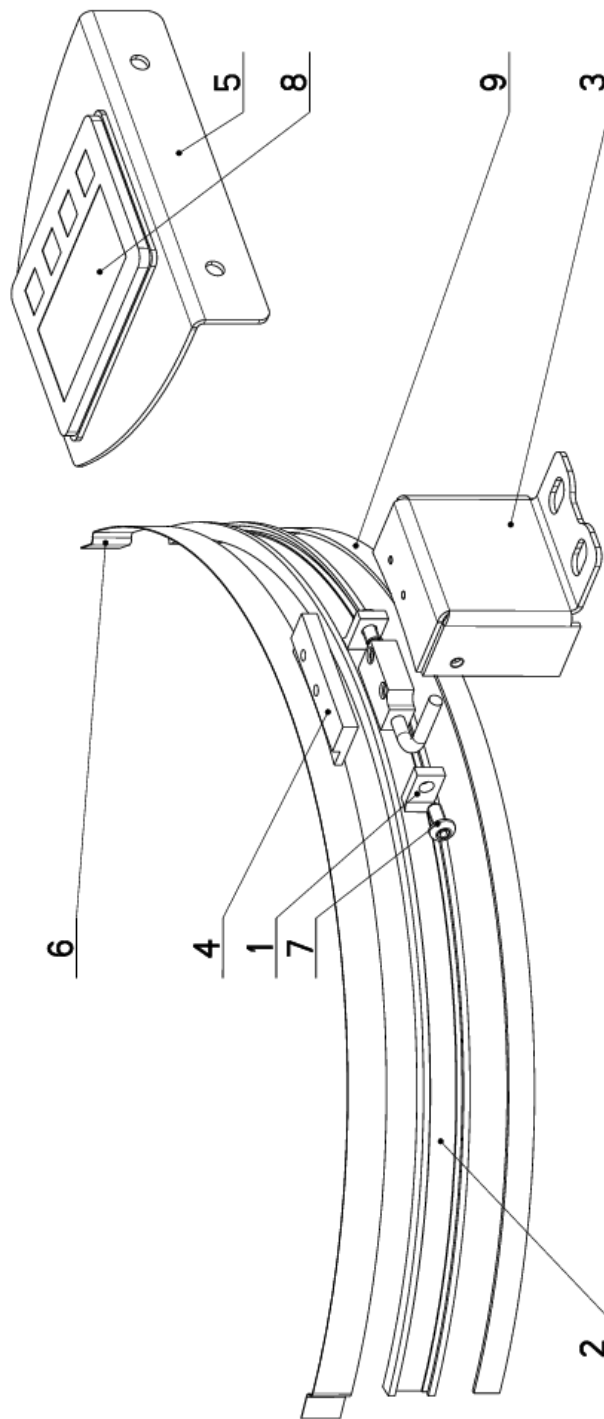

Cislo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz./Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

8.2. Laser-Liner


| Cislo Sestavy 202.9121-000 | | Ver. 0 | Název sestavy LASER-UKAZOVATKO/LASER/LASER | |
|-------------------------------|-----------------|-----------|---|----|
| Poz. | Objednací číslo | Ver. | Název položky | Ks |
| 1 | 30.9204-007 | 1 | DRŽÁK / HOLDER / HALTER | 1 |
| 2 | 202.5012-000 | 0 | LASER-UKAZOVATKO / LASER / LASER | 1 |

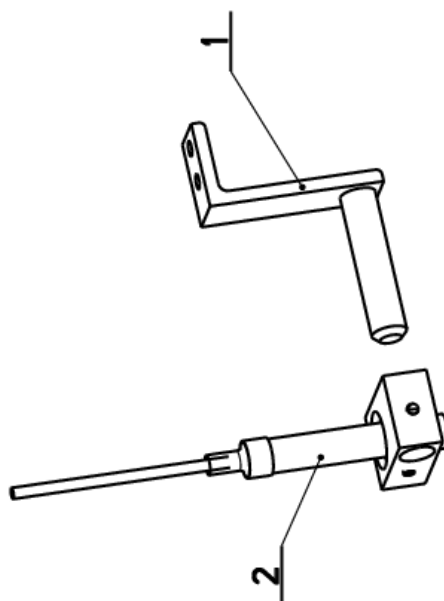

Cislo Sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver.)/Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz.)/Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung

8.3. Upínání horní / Top clam / Spannvorrichtung oben

| Císlo Sestavy 201.ER2514-110 | | Ver. 0 | Název sestavy UPÍNÁNÍ HORNÍ / TOP CLAM/SPANNVORRICHTUNG OBEN | | |
|---------------------------------|-----------------|-----------|---|---------------------|----|
| Poz. | Objednací číslo | Ver. | Název položky | Rozměr | Ks |
| 1 | 201.ER2517-020 | 0 | UPÍNÁNÍ HORNÍ / TOP CLAM / SPANNVORRICHTUNG OBEN | | 1 |
| 2 | 30.2114-315 | 0 | VEDENÍ / GUIDE / BACKENFÜHRUNG | HR 50x50 | 1 |
| 3 | 30.ER2514-111 | 0 | CELIST / JAW / BACKE | HR 150x12 | 1 |
| 4 | 30.ER2514-112 | 0 | DESKA / BOARD / PLATTE | HR 80x20 | 1 |
| 5 | 30.ER2514-116 | 0 | TYC / POLE / STANGE | d 20 | 2 |
| 6 | 90.001.25.047 | 0 | SROUB IMBUS / ALLEN HEAD BOLT / IMBUSSCHRAUBE | M10x25 | 1 |
| 7 | 90.005.55.028 | 0 | SROUB 6HRANNÝ / 6 SIDED BOLT / SECHSKANTSCHRAUBE | SROUB M10x50 | 1 |
| 8 | 95.800.009 | 0 | SEGR HRÍDEL. / OUTSIDE SAFETY RING / SICHERUNGSRING AUSSEN | POJISTNÝ KROUZEK 20 | 4 |

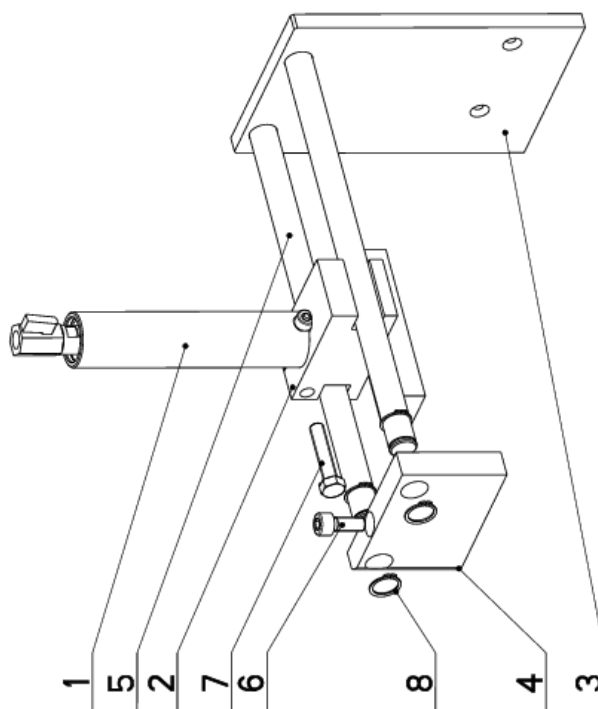

Cislo sestavy/Number of assembly/Nummer der Baugruppe; Verze (Ver./Version/Version; Název sestavy/Assembly title/Name der Baugruppe; Pozice (Poz./Position/Position;
Objednací číslo/Purchase order number/Bestellnummer; Název položky/Volume title/Name der Position; Rozměr/Stock size/Abmessung